BLOWER MOTOR RELAY (Continued)

a battery current output only when the blower motor relay coil is de-energized.

The blower motor relay cannot be repaired and, if faulty or damaged, it must be replaced. Refer to the appropriate wiring information for diagnosis and testing of the ISO-standard relay and for complete HVAC wiring diagrams.

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

(1) Disconnect and isolate the negative battery cable.

(2) Remove the glove box from the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - REMOVAL).

(3) Locate the blower motor relay through the instrument panel glove box opening. The relay is mounted upright and to the right of the instrument panel harness (Fig. 25).

(4) Remove the blower motor relay from its wire harness connector.

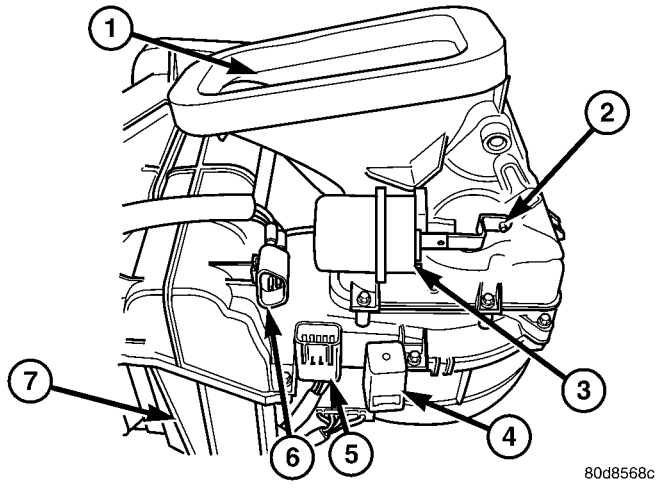

Fig. 25 Blower Motor Relay - LHD shown, RHD similar

1 - AIR INTAKE
2 - RECIRCULATION DOOR LINKAGE
3 - RECIRCULATION DOOR ACTUATOR
4 - BLOWER MOTOR RELAY
5 - HVAC ELECTRICAL CONNECTOR
6 - HVAC VACUUM CONNECTOR
7 - HVAC HOUSING

INSTALLATION

(1) Align the blower motor relay terminals with the terminal cavities in the wire harness connector.

(2) Push down firmly on the blower motor relay until the terminals are fully seated in the connector receptacles.

(3) Install the glove box (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - INSTALLATION).

(4) Reconnect the negative battery cable.

BLOWER MOTOR RESISTOR

DESCRIPTION

The blower motor resistor (Fig. 26) is mounted to the rear of the HVAC housing, near the glove box. The blower motor resistor consists of a molded plastic mounting plate with an integral wire connector receptacle. Concealed behind the mounting plate is the resistor circuit board.

The blower motor resistor can be accessed for service from under the instrument panel.

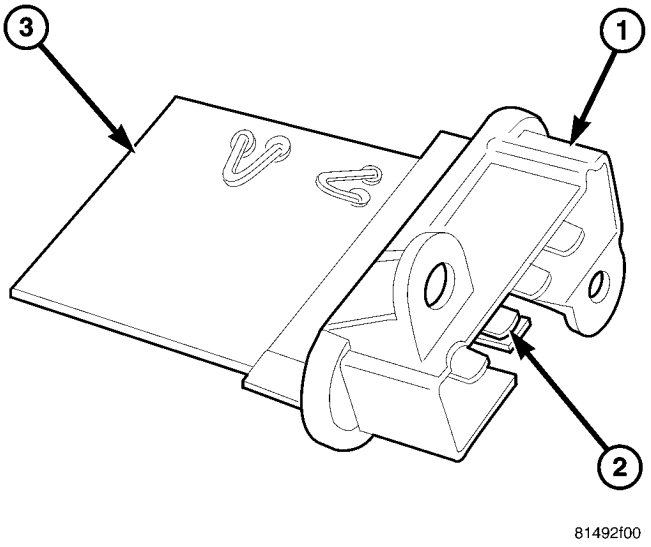

Fig. 26 Blower Motor Resistor

1 - MOUNTING PLATE
2 - WIRE HARNESS CONNECTOR
3 - RESISTOR CIRCUIT BOARD

OPERATION

The blower motor resistor is connected to the vehicle electrical system through a dedicated wire lead and connector of the HVAC wire harness. The blower motor resistor has multiple resistor circuits, each of which will reduce the current flow through the blower motor to change the blower motor speed.

The blower motor switch in the MTC heating-A/C system directs the ground path for the blower motor