BLOWER MOTOR RESISTOR (Continued)

INSTALLATION

(1) From under the instrument panel, position the blower motor resistor into the HVAC housing.

(2) From under the instrument panel, install the lower screw that secures the blower motor resistor to the HVAC housing. Tighten the screw to 2 N·m (17 in. lbs.).

(3) Reach through the glove box opening and install the upper screw that secures the blower motor resistor to the HVAC housing. Tighten the screw to 2 N·m (17 in. lbs.).

(4) Connect the wire harness connector to the blower motor resistor and engage the connector lock.

(5) Install the glove box (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - INSTALLATION).

(6) Reconnect the negative battery cable.

BLOWER MOTOR SWITCH

DESCRIPTION

The blower motor for the heater-only or heater-A/C system is controlled by a rotary-type blower motor switch, mounted in the A/C-heater control (Fig. 28). The blower motor switch allows the selection of four different blower motor speeds and includes an Off position.

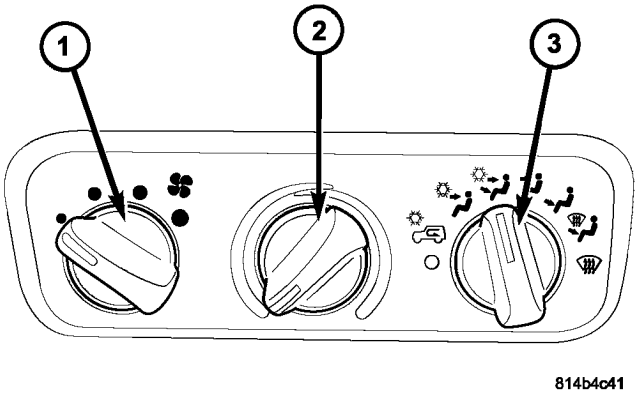

Fig. 28 A/C-Heater Control - Typical

1 - BLOWER SPEED CONTROL
2 - TEMPERATURE SELECT COPNTROL
3 - MODE SELECT CONTROL

OPERATION

The blower motor switch provides a ground path for the blower motor through the A/C-heater mode control. The blower motor switch directs this ground path through or around the blower motor resistor wires, as required to achieve the selected blower motor speed.

The blower motor switch cannot be repaired and, if faulty or damaged, it must be replaced. The blower motor switch knob is available for service replacement.

DIAGNOSIS AND TESTING

BLOWER MOTOR SWITCH

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

For circuit descriptions and diagrams, refer to the appropriate wiring information. The wiring information includes wiring diagrams, proper wire and connector repair procedures, further details on wire harness routing and retention, as well as pin-out and location views for the various wire harness connectors, splices and grounds.

(1) Check for battery voltage at the fuse in the power distribution center (PDC). If OK, go to Step 2. If not OK, repair the shorted circuit or component as required and replace the faulty fuse.

(2) Turn the ignition switch to the Off position. Disconnect and isolate the negative battery cable. Remove the A/C-heater control from the instrument panel (Refer to 24 - HEATING & AIR CONDITIONING/CONTROLS/A/C HEATER CONTROL - REMOVAL). Check for continuity between the ground circuit cavity of the A/C-heater control wire harness connector and a good ground. There should be continuity. If OK, go to Step 3. If not OK, repair the open circuit to ground as required.

(3) With the A/C-heater control wire harness connector disconnected, place the A/C-heater mode control in any position except Off. Check for continuity between the ground circuit terminal and each of the blower motor driver circuit terminals of the A/C-heater control as you move the blower motor switch to each of the four speed positions. There should be continuity at each driver circuit terminal in only one blower motor switch speed position. If OK, test and repair the blower driver circuits between the A/C-heater control and the blower motor resistor as required. If not OK, replace the faulty blower motor switch.