MODE DOOR ACTUATORS (Continued)

(3) Connect the vacuum harness to the floor/defrost door actuator.

(4) Install the knee blocker onto the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/KNEE BLOCKER - INSTALLATION).

(5) Reconnect the negative battery cable.

PANEL DOOR ACTUATOR

(1) Using needle nose pliers, engage the actuator rod to the push-pin type retainer located on the panel door lever.

(2) Rotate and tilt the panel door actuator as required to install the actuator mount onto the HVAC housing mounting boss. Push the actuator onto the mount until it snaps into the locked position.

(3) Connect the vacuum harness to the panel door actuator.

(4) Install the floor distribution duct (Refer to 24 - HEATING & AIR CONDITIONING/DISTRIBUTION/FLOOR DISTRIBUTION DUCT - INSTALLATION).

(5) Install the airbag control module (Refer to 8 - ELECTRICAL/RESTRAINTS/AIRBAG CONTROL MODULE - INSTALLATION).

RECIRCULATION DOOR ACTUATOR

DESCRIPTION

When equipped with A/C, a vacuum operated recirculation door actuator is used to control the movement of the recirculation-air door within the HVAC housing (Fig. 33).

When vacuum is supplied by the A/C-heater control to the recirculation door actuator, the actuator linkage is pulled into the actuator, which moves the recirculation door lever and recirculation door to two Recirculation position. The recirculation door actuator is spring loaded, so when vacuum is released from the actuator, the linkage moves the recirculation-air door back to its static position (fresh air).

The recirculation door actuator can be accessed for service through the glove box opening in the instrument panel.

The recirculation door actuator cannot be adjusted or repaired and, if faulty or damaged, it must be replaced.

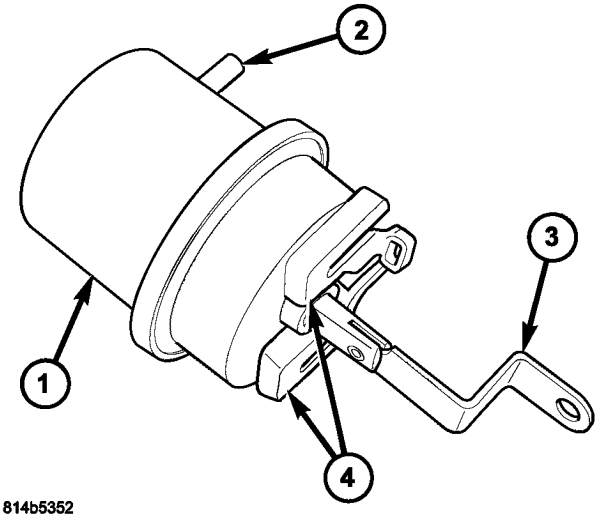

Fig. 33 Recirculation Door Actuator

1 - RECIRCULATION DOOR ACTUATOR
2 - VACUUM CONNECTOR RECEPTACLE
3 - ACTUATOR ROD
4 - ACTUATOR MOUNT

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

NOTE: The recirculation-air door and actuator are used only on models equipped with A/C.