RECIRCULATION DOOR ACTUATOR (Continued)

(1) Disconnect and isolate the negative battery cable.

(2) Remove the glove box (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - REMOVAL).

(3) Remove the right front speaker bezel and speaker (Refer to 8 - ELECTRICAL/AUDIO/SPEAKER - REMOVAL).

(4) Using a small flat bladed tool, gently pry the actuator latch while pulling firmly outwards on the actuator (Fig. 34). Rotate and tilt the actuator as required to remove the actuator from the HVAC air inlet housing mount.

(5) Disengage the actuator rod from the push-pin type retainer located on the end of the recirculation door actuator lever.

(6) Disconnect the vacuum harness from the recirculation door actuator and remove the actuator from the vehicle.

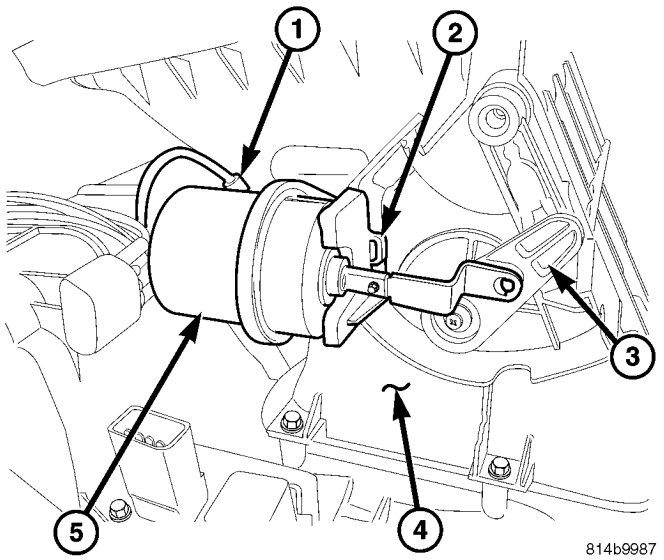

Fig. 34 Recirculation Door Actuator

1 - VACUUM HARNESS
2 - ACTUATOR LATCH
3 - RECIRCULATION DOOR ACTUATOR LEVER
4 - HVAC AIR INLET HOUSING
5 - RECIRCULATION DOOR ACTUATOR

INSTALLATION

NOTE: The recirculation-air door and actuator are used only on models equipped with A/C.

(1) Connect the vacuum harness to the recirculation door actuator.

(2) Engage the actuator rod to the push-pin type retainer located on the end of the recirculation door actuator lever.

(3) Rotate and tilt the recirculation door actuator as required to install the actuator mount onto the HVAC air inlet housing mounting boss. Push the actuator onto the mount until it snaps into the locked position.

(4) Install the right front speaker and speaker bezel (Refer to 8 - ELECTRICAL/AUDIO/SPEAKER - INSTALLATION).

(5) Install the glove box (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - INSTALLATION).

(6) Reconnect the negative battery cable.

VACUUM CHECK VALVE

DESCRIPTION

Two vacuum check valves (Fig. 35) are installed in the accessory vacuum supply system. One is on the accessory vacuum supply line in the engine compartment, near the vacuum tap on the engine intake manifold. A second vacuum check valve is located at the HVAC system takeout. The vacuum check valves are designed to allow vacuum to flow in only one direction through the vacuum supply circuits.

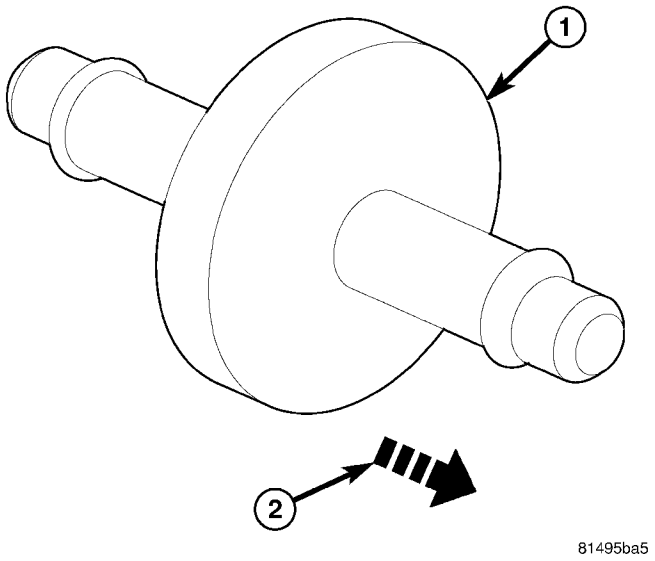

Fig. 35 Vacuum Check Valve - Typical

1 - VACUUM CHECK VALVE
2 - DIRECTION OF AIR FLOW

OPERATION

The use of the two vacuum check valves help to maintain the system vacuum needed to retain the selected A/C-heater mode settings. The check valves prevent the engine from bleeding down system vacuum through the intake manifold during extended heavy engine load (low engine vacuum) operation.

The vacuum check valves cannot be repaired and, if faulty or damaged, must be replaced.