VACUUM CHECK VALVE (Continued)

REMOVAL

NOTE: Note the orientation of the check valves in the vacuum supply line for correct reinstallation.

(1) Disconnect the vacuum check valve from the fitting at the engine intake manifold and the accessory vacuum supply line (Fig. 36) and remove the valve.

(2) Disconnect the vacuum check valve from the HVAC vacuum supply line fitting and the accessory vacuum supply line and remove the valve.

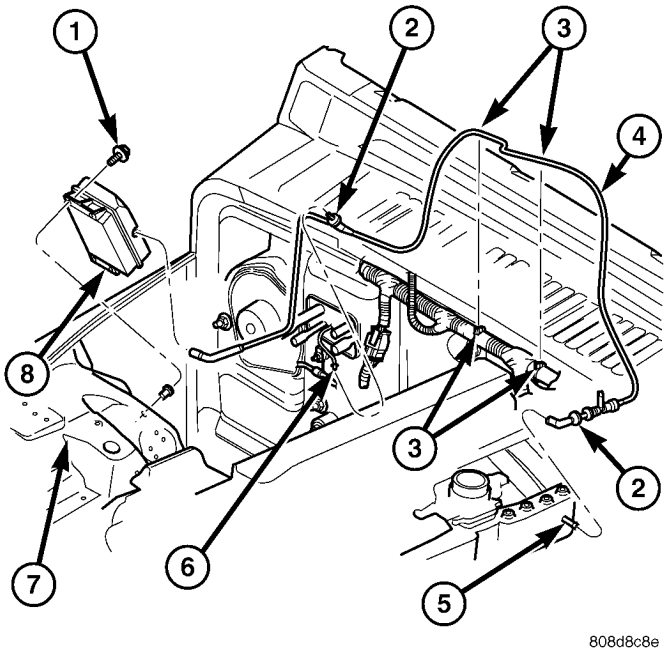

Fig. 36 Vacuum Check Valves - Typical

1 - SCREW
2 - VACUUM CHECK VALVE (2)
3 - VACUUM LINE RETAINER (2)
4 - ACCESSORY VACUUM SUPPLY LINE
5 - ENGINE VACUUM FITTING
6 - HVAC VACUUM SUPPLY LINE
7 - INNER FENDER
8 - VACUUM RESERVOIR

INSTALLATION

(1) Using the orientation noted during Removal, connect the vacuum check valve to the HVAC vacuum supply line fitting and the accessory vacuum supply line.

(2) Using the orientation noted during Removal, connect the vacuum check valve to the fitting at the engine intake manifold and the accessory vacuum supply line.

VACUUM RESERVOIR

DESCRIPTION

The vacuum reservoir (Fig. 37) is mounted to the rear of the right front inner fender in the engine compartment, under the battery tray.

The vacuum reservoir can be accessed for service by removing the battery and battery tray.

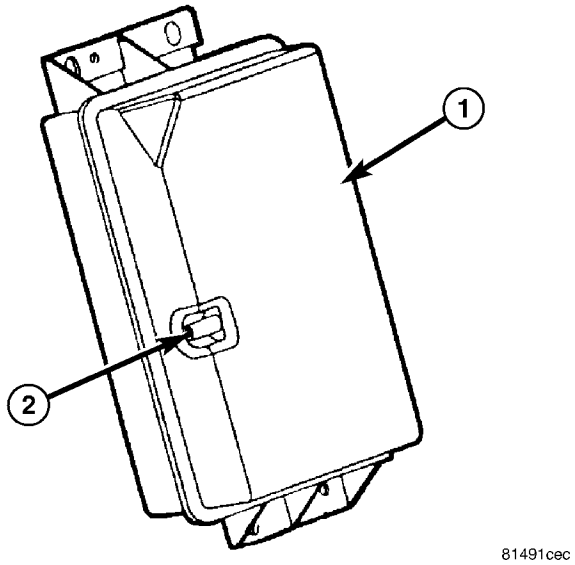

Fig. 37 Vacuum Reservoir - Typical

1 - VACUUM RESERVOIR
2 - VACUUN LINE CONNECTION

OPERATION

Engine vacuum is stored in the vacuum reservoir. The stored vacuum is used to operate the vacuum-controlled vehicle accessories during periods of low engine vacuum such as when the vehicle is climbing a steep grade, or under other high engine load operating conditions.

The vacuum reservoir cannot be repaired and, if faulty or damaged, it must be replaced.