DISTRIBUTION

TABLE OF CONTENTS

page

AIR OUTLETS
DESCRIPTION 37
REMOVAL 37
INSTALLATION 38
BLOWER MOTOR
DESCRIPTION 38
OPERATION 38
DIAGNOSIS AND TESTING
BLOWER MOTOR 38
REMOVAL 39
INSTALLATION 39
DEFROSTER DUCT
REMOVAL 40
INSTALLATION 40
FLOOR DISTRIBUTION DUCT
REMOVAL 40
INSTALLATION 40
HVAC HOUSING
DESCRIPTION 41

page

REMOVAL
HVAC HOUSING 41
AIR INLET HOUSING 42
DISASSEMBLY
HVAC HOUSING 43
AIR INLET HOUSING 47
ASSEMBLY
HVAC HOUSING 48
AIR INLET HOUSING 51
INSTALLATION
HVAC HOUSING 52
AIR INLET HOUSING 53
INSTRUMENT PANEL DEMISTER DUCTS
REMOVAL 53
INSTALLATION 54
INSTRUMENT PANEL DUCTS
REMOVAL 55
INSTALLATION 56

AIR OUTLETS

DESCRIPTION

There is one defroster air outlet located an the top of the instrument panel (Fig. 1). The airflow from the defroster outlet is directed by fixed vanes in the defroster grille and cannot be adjusted. The defroster outlet and grille are not serviceable from the instrument panel top cover (Refer to 23 - BODY/INSTRUMENT PANEL/INSTRUMENT PANEL TOP COVER - REMOVAL).

There are four instrument panel air outlets. One air outlet is located near each outboard end of the instrument panel facing the rear of the vehicle, and two located near the top of the instrument panel center bezel. Each of the instrument panel air outlets contain a serviceable grille with movable vanes that are used to direct or shut off the flow of the conditioned air leaving the instrument panel outlets. The instrument panel air outlets can be removed individually for service replacement.

REMOVAL

NOTE: The instrument panel air outlets are retained to the pivots within the air outlet housings by a snap fit.

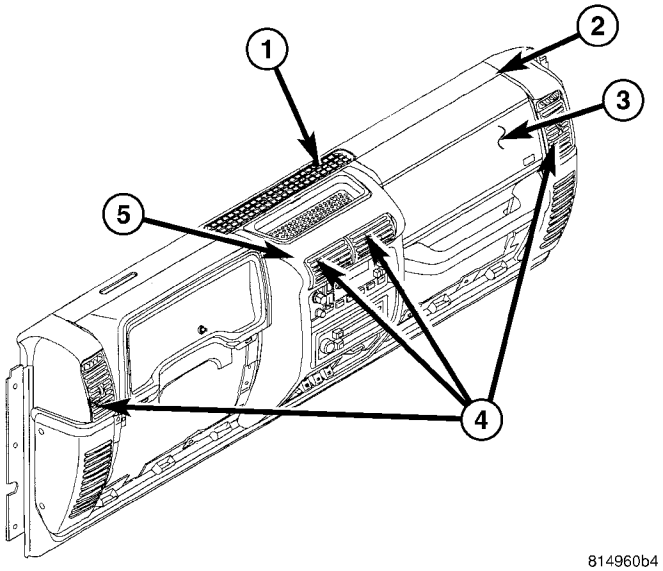

Fig. 1 Air Outlets - LHD shown, RHD similar

1 - DEFROSTER AIR OUTLET
2 - INSTRUMENT PANEL TOP COVER
3 - INSTRUMENT PANEL
4 - INSTRUMENT PANEL AIR OUTLETS (4)
5 - INSTRUMENT PANEL CENTER BEZEL

(1) Using a trim stick C-4755 or equivalent (Fig. 2), gently pry the panel air outlet out of the panel outlet housing as required.