BLOWER MOTOR (Continued)

NOTE: For circuit descriptions and diagrams, refer to Air Conditioning/Heater in Group 8W - Wiring Diagrams.

OPERATION

Possible causes of an inoperative blower motor or blower motor not operating in all speeds include:

- Faulty fuse
- Faulty blower motor resistor
- Faulty blower motor switch
- Faulty blower motor
- Faulty blower motor circuit wiring or wire harness connectors

VIBRATION

Possible causes of blower motor vibration include:

- Improper blower motor mounting
- Improper blower wheel mounting
- Deformed blower wheel
- Out of balance blower wheel due to foreign material in the wheel
- Faulty blower motor

NOISE

To determine if the blower motor is the source of the noise, simply switch the blower motor from Off to On. To verify that the blower motor is the source of the noise, unplug the blower motor wire harness connector and operate the heating-A/C system. If the noise goes away, possible causes include:

- Foreign material in the HVAC air inlet housing
- Improper blower motor mounting
- Improper blower wheel mounting
- Faulty blower motor

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in an accidental airbag deployment and possible personal injury or death.

NOTE: The blower motor is located on the passenger side of the vehicle under the instrument panel. The blower motor can be removed without having to remove the instrument panel or the HVAC housing.

(1) Disconnect and isolate the negative battery cable.

(2) Disconnect the wire harness connector from the blower motor (Fig. 4).

(3) Release the locking tab that secures the blower motor to the HVAC housing and rotate blower motor counterclockwise.

(4) Rotate and tilt the blower motor as needed for clearance to remove the blower motor and wheel from the HVAC housing.

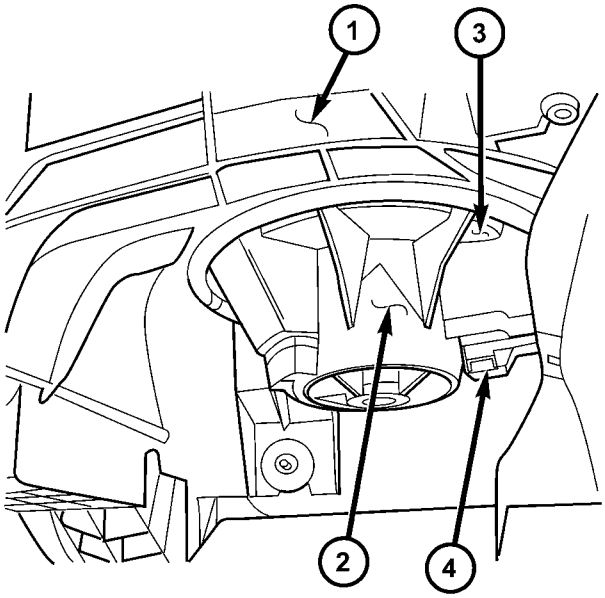

Fig. 4 Blower Motor - LHD shown, RHD similar

1 - HVAC HOUSING
2 - BLOWER MOTOR
3 - RETAINER-LOCKING TAB
4 - WIRE HARNESS CONNECTOR

INSTALLATION

NOTE: Failure to install the blower motor assembly correctly could result in an air leak or the blower motor assembly becoming completely disengaged from the HVAC housing.

(1) Align and install the blower motor into the HVAC housing.

(2) Rotate the blower motor until all of the locking tabs have secured the blower motor assembly to the HVAC housing.

(3) Connect the wire harness connector to the blower motor.

(4) Reconnect the battery negative cable.

(5) Test the blower motor for proper installation by turning the blower motor speed to its fastest position and checking around the outer edges of the blower assembly for air leaks. If any air leaks are found, remove and reinstall the blower motor.