HVAC HOUSING (Continued)

(6) Disconnect the wire harness connectors from the blower motor resistor and the blower motor (Fig. 11).

(7) Disengage the push-in retainers for the HVAC wire harness connector and the blower motor relay from the HVAC housing.

(8) Remove the three screws that secure the HVAC wire harness to the HVAC housing and remove the wire harness.

(9) Remove the two screws that secure the blower motor resistor to the HVAC housing and remove the resistor.

(10) Disengage the blower motor retaining tab and turn the blower motor counter-clockwise and remove the blower motor from the HVAC housing.

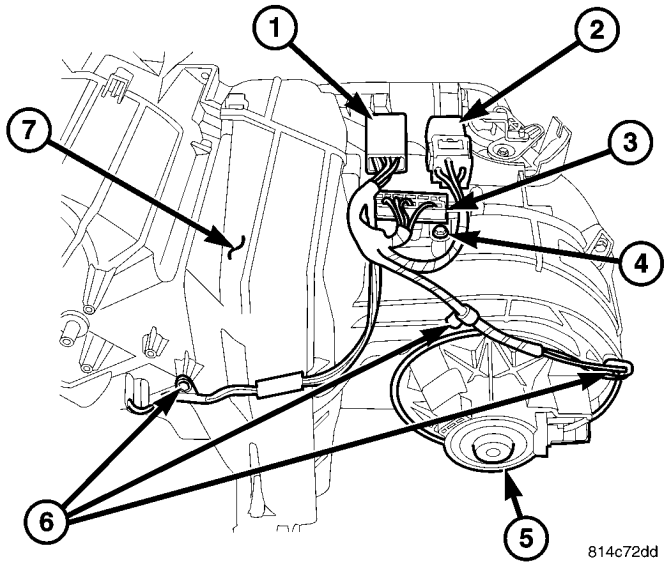

Fig. 11 HVAC Wire Harness - LHD shown, RHD similar

1 - HVAC WIRE HARNESS
2 - BLOWER MOTOR RELAY
3 - BLOWER MOTOR RESISTOR
4 - SCREW (2)
5 - BLOWER MOTOR
6 - SCREW (3)
7 - HVAC HOUSING

(11) Remove the five screws that secure the air inlet housing to the top of the HVAC housing and remove the inlet housing (Fig. 12).

(12) Remove the three screws that secure the floor distribution duct to the bottom of the HVAC housing and remove the duct (Fig. 13).

(13) Remove the one screw that secures the upper and lower HVAC housing halves together at the bottom of the HVAC housing.

NOTE: If the foam seal for the defrost/demister outlet cover or the panel outlet is deformed or damaged, the seal must be replaced.

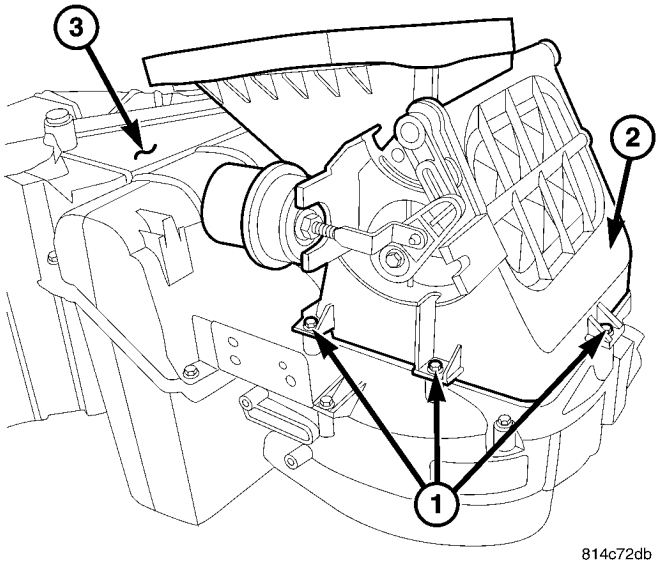

Fig. 12 HVAC Air Inlet Housing - LHD shown, RHD similar

1 - SCREWS (5)
2 - AIR INLET HOUSING
3 - HVAC HOUSING

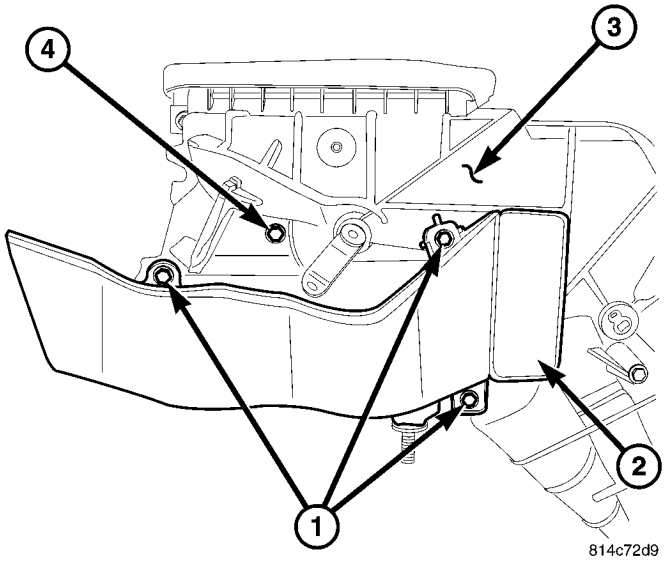

Fig. 13 Floor Distribution Duct and Screw - LHD shown, RHD similar

1 - SCREW (3)
2 - FLOOR DISTRIBUTION DUCT
3 - HVAC HOUSING (LOWER HALF)
4 - SCREW

(14) Carefully cut the foam seal for the defrost/demister outlet cover along the two parting lines of the outlet cover (Fig. 14).

(15) Carefully cut the foam seal for the panel outlet along the parting line of the two HVAC housing halves.