HVAC HOUSING (Continued)

NOTE: If either foam seal on the panel-air door is deformed or damaged, the air door must be replaced.

(21) Using a pick or similar tool, release the retaining tab that secures panel door lever to the panel-air door and remove the lever (Fig. 17).

(22) Remove the panel-air door from the lower half of the HVAC housing.

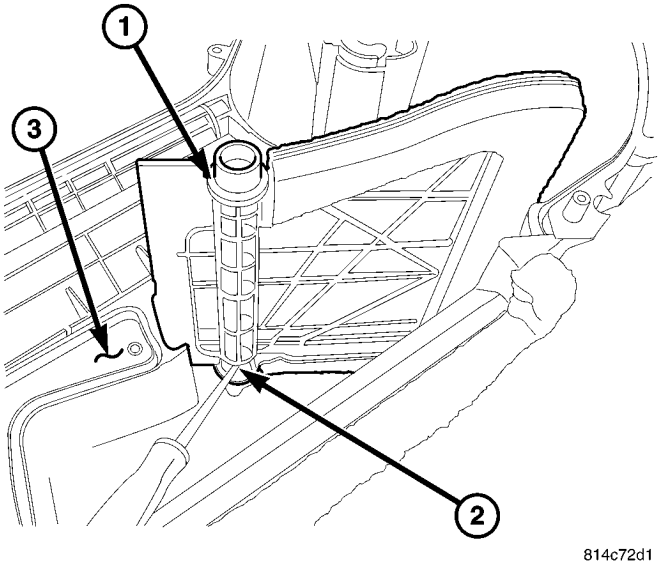

Fig. 17 Panel-Air Door - LHD shown, RHD similar

1 - PANEL-AIR DOOR
2 - PANEL DOOR LEVER RETAINING TAB
3 - HVAC HOUSING (LOWER HALF)

NOTE: If either foam seal on the air doors is deformed or damaged, the air door must be replaced.

(23) Remove the floor/defrost-air door and the blend-air door from the lower half of the HVAC housing (Fig. 18).

NOTE: If the foam insulator around the heater core is deformed or damaged, the insulator must be replaced.

(24) Carefully lift the heater core and foam insulator out of the lower half of the HVAC housing (Fig. 19).

NOTE: If the foam insulator around the A/C evaporator is deformed or damaged, the insulator must be replaced.

(25) If equipped with A/C, disengage the rubber seal from around the tubes of the A/C evaporator and carefully lift the A/C evaporator and foam insulator out of the lower half of the HVAC housing.

NOTE: If the rubber seal for the A/C evaporator tubes is deformed or damaged, the seal must be replaced.

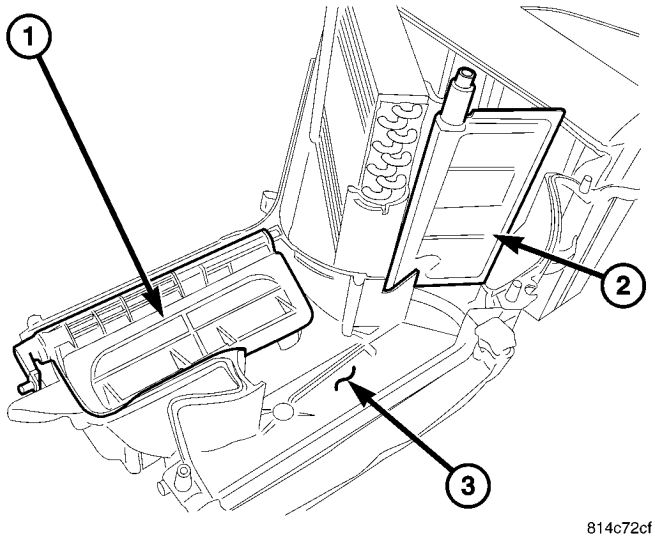

Fig. 18 Floor/Defrost and Blend-Air Doors - LHD shown, RHD similar

1 - FLOOR/DEFROST-AIR DOOR
2 - BLEND-AIR DOOR
3 - HVAC HOUSING (LOWER HALF)

(26) Remove the rubber seal for the evaporator tubes from the lower half of the HVAC housing, if equipped.

(27) If required, remove the screw that secures the evaporator tube clamp to the evaporator tubes and remove the clamp.

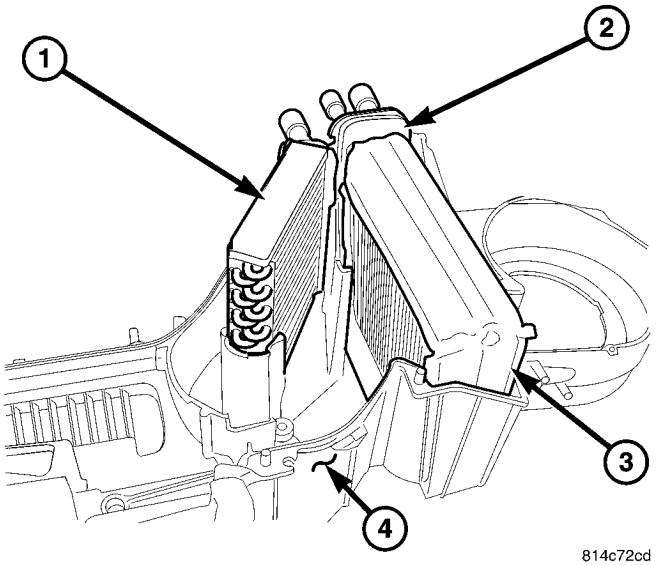

Fig. 19 Heater Core and A/C Evaporator - Typical

1 - HEATER CORE
2 - RUBBER SEAL
3 - A/C EVAPORATOR (IF EQUIPPED)
4 - HVAC HOUSING (LOWER HALF)