HVAC HOUSING (Continued)

AIR INLET HOUSING

NOTE: The recirculation-air door and actuator are used only on models equipped with A/C.

NOTE: The air inlet housing must be removed from HVAC housing and disassembled for service of the recirculation-air door.

(1) Remove the air inlet housing from the HVAC housing and place it on a workbench (Refer to 24 - HEATING & AIR CONDITIONING/DISTRIBUTION/ HVAC HOUSING - AIR INLET HOUSING - REMOVAL).

(2) Using a small flat bladed tool, gently pry the recirculation door actuator latch while pulling firmly outwards on the actuator and remove the actuator from the HVAC air inlet housing mount (Fig. 20).

(3) Disengage the actuator rod from the push-pin type retainer located on the end of the recirculation door actuator lever.

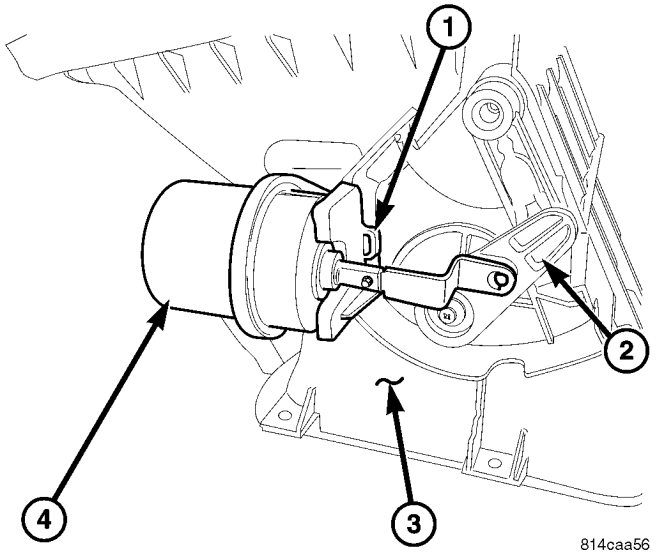

Fig. 20 Recirculation Door Actuator

1 - ACTUATOR LATCH
2 - RECIRCULATION DOOR ACTUATOR LEVER
3 - HVAC AIR INLET HOUSING
4 - RECIRCULATION DOOR ACTUATOR

(4) Remove the screw that secures the recirculation door actuator lever to the air inlet housing and remove the lever (Fig. 21).

(5) Using a pick or similar tool, release the retaining tab of the recirculation door lever located on the inside surface of the air inlet housing and pull the lever out of the pivot shaft of the recirculation-air door (Fig. 22).

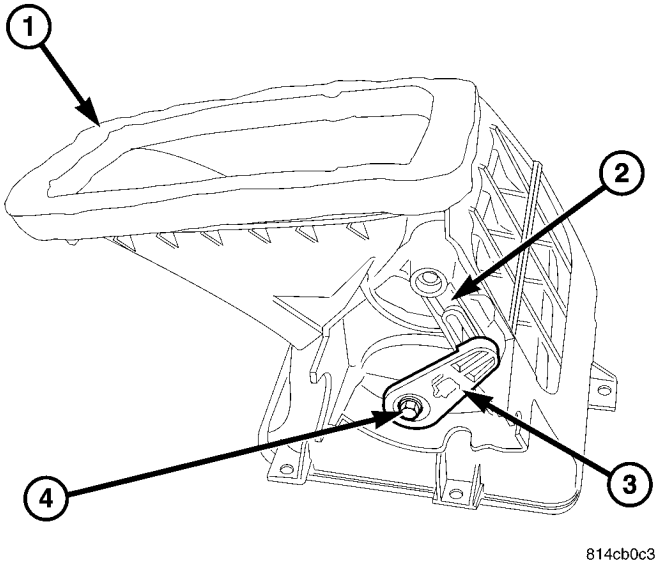

Fig. 21 Recirculation Door Actuator Lever

1 - HVAC AIR INLET HOUSING
2 - RECIRCULATION DOOR LEVER
3 - RECIRCUALTION DOOR ACTUATOR LEVER
4 - SCREW

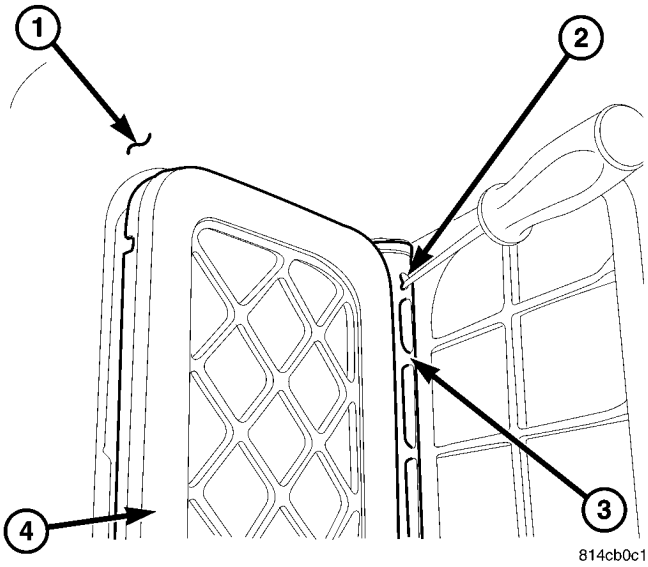

Fig. 22 Recirculation Door Lever

1 - HVAC AIR INLET HOUSING (INSIDE VIEW)
2 - RECIRCULATION DOOR LEVER RETAINING TAB
3 - RECIRCULATION DOOR PIVOT SHAFT
4 - RECIRCULATION-AIR DOOR