HVAC HOUSING (Continued)

(4) Position the panel-air door into the pivot hole located in the lower half of the HVAC housing (Fig. 26).

(5) Align the panel door lever with the panel-air door pivot shaft and install the lever into the shaft. Be sure that the lever retaining tab fully engages the pivot shaft.

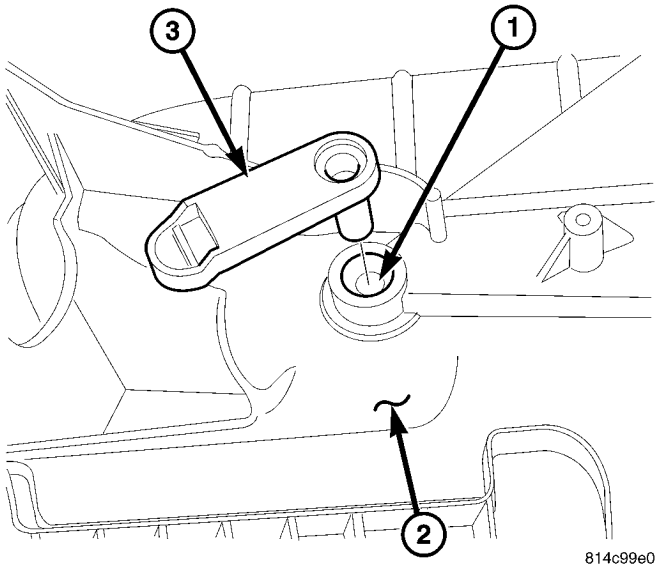

Fig. 26 Panel Door Lever - Typical

1 - PANEL-AIR DOOR PIVOT SHAFT
2 - HVAC HOUSING (LOWER HALF)
3 - PANEL DOOR LEVER

(6) Position the two halves of the HVAC housing together. Be certain that each of the air-door pivot shafts are properly engaged in its pivot hole and, if equipped with A/C, that the evaporator tube rubber seal is properly positioned (Fig. 27).

(7) Install the fourteen screws and two clips that secure the two housing halves together. Tighten the screws to 2 N·m (17 in. lbs.).

(8) Install the foam seal onto the evaporator condensate drain tube.

(9) Position the defrost/demister outlet cover onto the top of the HVAC housing (Fig. 28).

(10) Install the five screws that secure the defrost/demister outlet cover to the HVAC housing. Tighten the screws to 2 N·m (17 in. lbs.).

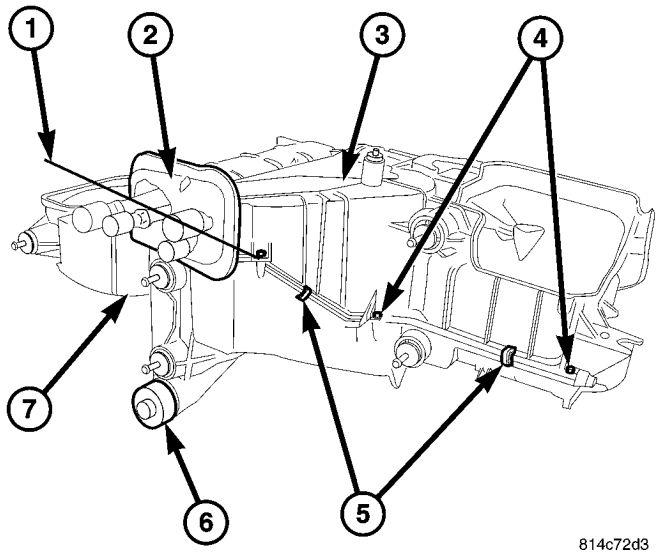

Fig. 27 Foam Seal and HVAC Housing Screws - Typical

1 - PARTING LINE
2 - FOAM SEAL
3 - HVAC HOUSING (UPPER HALF)
4 - SCREWS (14)
5 - CLIP (2)
6 - FOAM SEAL
7 - HVAC HOUSING (LOWER HALF)

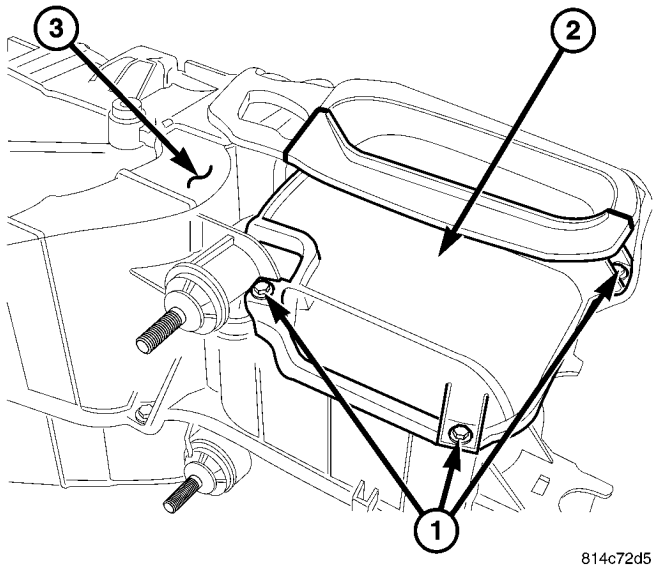

Fig. 28 Defrost/Demister Outlet Cover - LHD shown, RHD similar

1 - SCREW (5)
2 - DEFROST/DEMISTER OUTLET COVER
3 - HVAC HOUSING