HVAC HOUSING (Continued)

(11) Install the one screw that secures the two housing halves together at the bottom of the HVAC housing. Tighten the screw to 2 N·m (17 in. lbs.) (Fig. 29).

(12) Position the floor distribution duct onto the bottom of the HVAC housing.

(13) Install the three screws that secure the floor distribution duct to the HVAC housing. Tighten the screw to 2 N·m (17 in. lbs.).

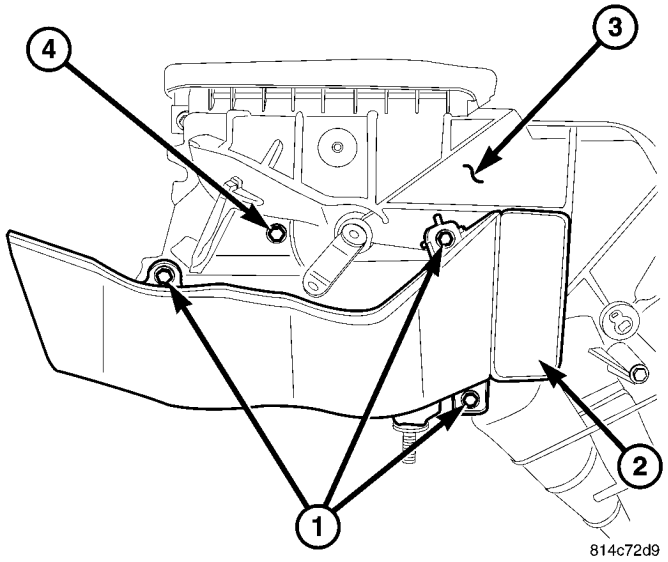

Fig. 29 Floor Distribution Duct and Screw - LHD shown, RHD similar

1 - SCREW (3)
2 - FLOOR DISTRIBUTION DUCT
3 - HVAC HOUSING (LOWER HALF)
4 - SCREW

(14) Position the air inlet housing onto the top of the HVAC housing (Fig. 30).

(15) Install the five screws that secure the air inlet housing to the HVAC housing. Tighten the screw to 2 N·m (17 in. lbs.).

(16) Install the HVAC wire harness onto the HVAC housing. Make sure the wires are routed through all wiring retainers (Fig. 31).

(17) Engage the push-in retainers for the HVAC wire harness connector and the blower motor relay to the HVAC housing.

(18) Install the three screws that secure the HVAC wire harness to the HVAC housing. Tighten the screws to 2 N·m (17 in. lbs.).

(19) Position the blower motor into the HVAC housing and turn it clockwise until the retaining tab is fully engaged.

(20) Position the blower motor resistor into the HVAC housing and install the two retaining screws. Tighten the screws to 2 N·m (17 in. lbs.).

(21) Connect the HVAC wire harness connectors to the blower motor and the blower motor resistor.

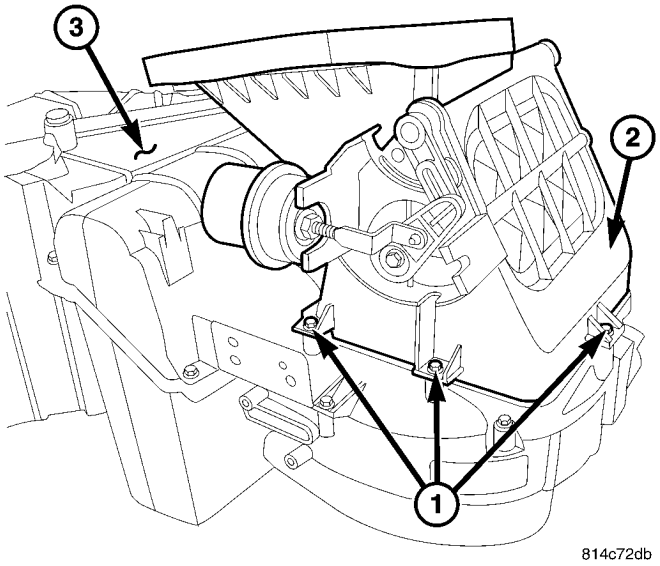

Fig. 30 HVAC Air Inlet Housing - LHD shown, RHD similar

1 - SCREWS (5)
2 - AIR INLET HOUSING
3 - HVAC HOUSING

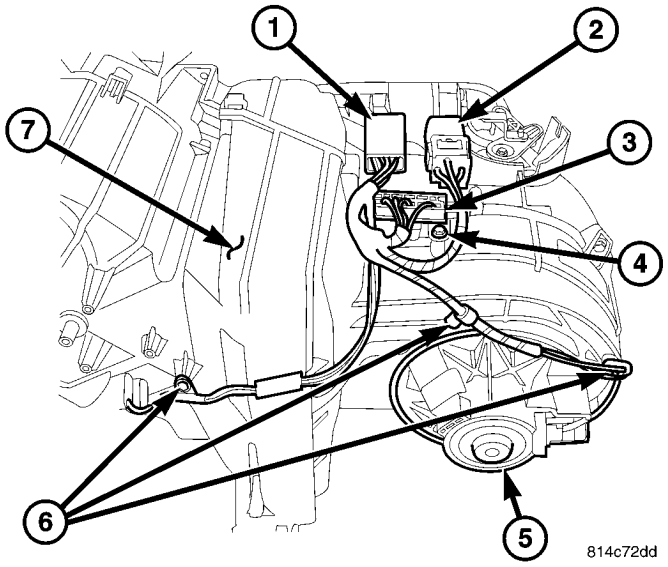

Fig. 31 HVAC Wire Harness - LHD shown, RHD similar

1 - HVAC WIRE HARNESS
2 - BLOWER MOTOR RELAY
3 - BLOWER MOTOR RESISTOR
4 - SCREW (2)
5 - BLOWER MOTOR
6 - SCREW (3)
7 - HVAC HOUSING

(22) Install the mode door actuators (Fig. 32) (Refer to 24 - HEATING & AIR CONDITIONING/ CONTROLS/MODE DOOR ACTUATORS - INSTALLATION).