HVAC HOUSING (Continued)

(3) Align the recirculation door retainer with the recirculation-air door pivot shaft and install the retainer until the retaining tab is fully engaged to the pivot shaft (Fig. 34).

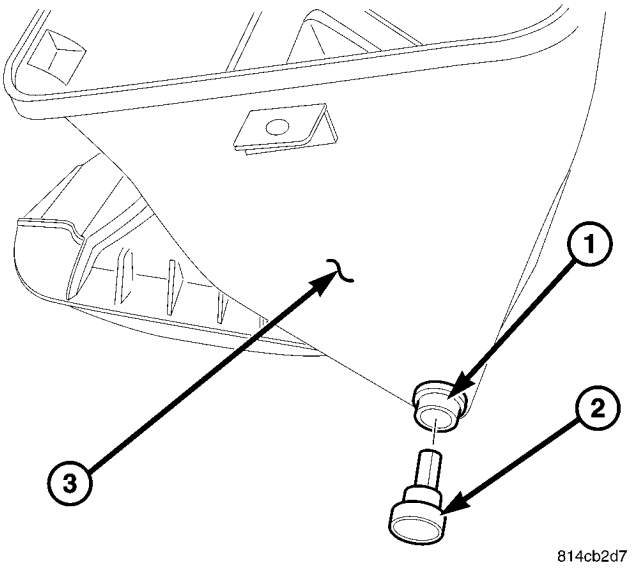

Fig. 34 Recirculation Door Retainer Installation

1 - RECIRCULATION DOOR PIVOT SHAFT
2 - RECIRCULATION DOOR RETAINER
3 - HVAC AIR INLET HOUSING

(4) Install the recirculation door actuator lever onto the pivot shaft on the air distribution housing (Fig. 35).

NOTE: Align the guide pin on the recirculation door actuator lever with the guides on the recirculation door lever during installation of the actuator lever.

(5) Connect the recirculation door actuator lever to the recirculation door lever.

(6) Install the screw that secures the recirculation door actuator lever to the air distribution housing. Tighten the screw to 2 N·m (17 in. lbs.).

(7) Install the recirculation door actuator mount onto the air inlet housing mounting boss (Fig. 36). Push the actuator onto the mount until it snaps into the locked position.

(8) Install the air inlet housing onto the HVAC housing (Refer to 24 - HEATING & AIR CONDITIONING/DISTRIBUTION/HVAC HOUSING - AIR INLET HOUSING - INSTALLATION).

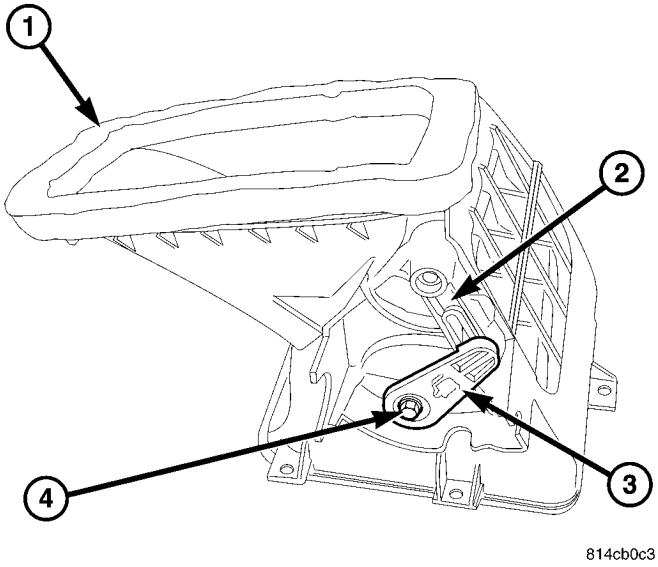

Fig. 35 Recirculation Door Actuator Lever

1 - HVAC AIR INLET HOUSING
2 - RECIRCULATION DOOR LEVER
3 - RECIRCUALTION DOOR ACTUATOR LEVER
4 - SCREW

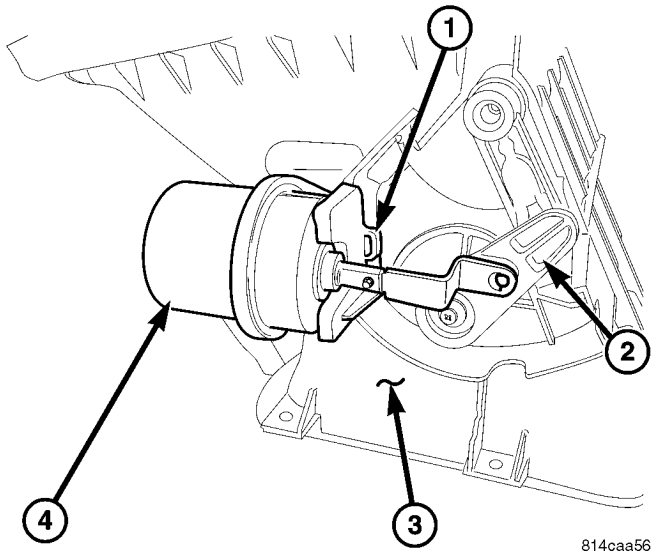

Fig. 36 Recirculation Door Actuator

1 - ACTUATOR LATCH
2 - RECIRCULATION DOOR ACTUATOR LEVER
3 - HVAC AIR INLET HOUSING
4 - RECIRCULATION DOOR ACTUATOR

INSTALLATION

HVAC HOUSING

NOTE: Use only the specified O-rings as they are made of special material for R-134a. Use only refrigerant oil of the type required for the A/C compressor in the vehicle.

(1) Position the HVAC housing to the dash panel. Be certain that the evaporator condensate drain tube and the housing mounting studs are inserted into their correct mounting holes.

(2) Install the bolt that secures the HVAC housing to the bracket located on the dash panel in the pas-