PLUMBING (Continued)

(5) Observe the liquid line (discharge) pressure and liquid line temperature. Using the Charge Determination Chart (Fig. 3), determine whether the refrigerant system is operating within the proper charge range.

(a) If the refrigerant system is operating in the undercharged area of the chart, add 0.057 kilogram (0.125 pound or 2 ounces) of R-134a refrigerant to the system.

(b) If the refrigerant system is operating in the overcharged area of the chart, reclaim 0.057 kilogram (0.125 pound or 2 ounces) of refrigerant from the system.

(6) Recheck the refrigerant system charge level following each refrigerant level adjustment. Continue this process until the refrigerant system readings are in the proper charge range on the Charge Determination Chart.

REFRIGERANT SYSTEM RECOVERY

WARNING: Refer to the applicable warnings and cautions for this system before performing the following operation (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - WARNINGS) and (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - CAUTIONS). Failure to follow the warnings and cautions could result in possible personal injury or death.

A R-134a refrigerant recovery/recycling/charging station that meets SAE Standard J2210 must be used to recover the refrigerant from an R-134a refrigerant system. Refer to the operating instructions supplied by the equipment manufacturer for the proper care and use of this equipment.

REFRIGERANT SYSTEM EVACUATE

NOTE: Special effort must be used to prevent moisture from entering the A/C system oil. Moisture in the oil is very difficult to remove and will cause a reliability problem with the A/C compressor.

If an A/C compressor designed to use R-134a refrigerant is left open to the atmosphere for an extended period of time. It is recommended that the refrigerant oil be drained and replaced with new oil or a new A/C compressor be used. This will eliminate the possibility of contaminating the refrigerant system.

If the refrigerant system has been open to the atmosphere, it must be evacuated before the refrigerant system can be filled. Moisture and air mixed with the refrigerant system will raise the compressor head pressure above acceptable operating levels. This

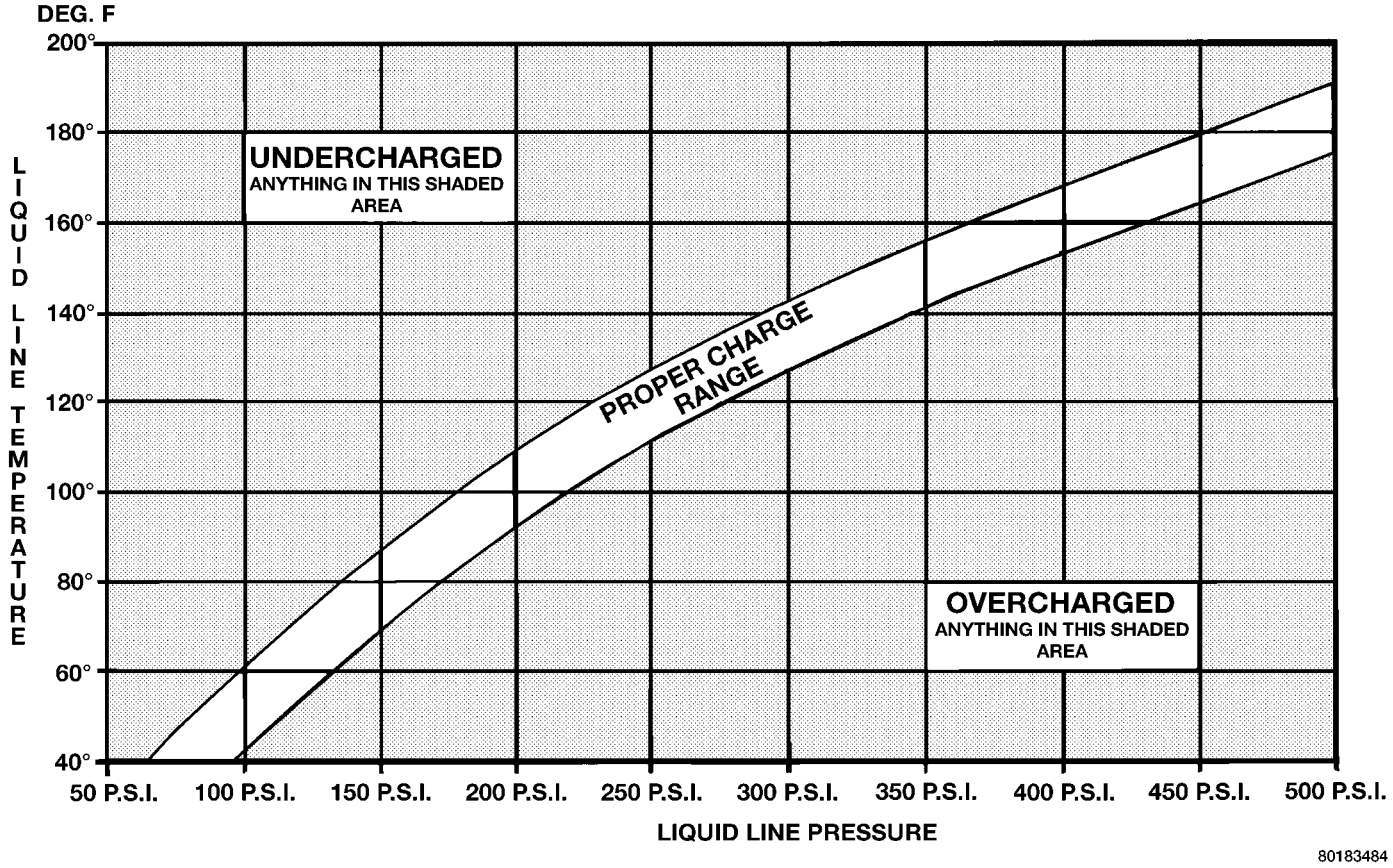


Fig. 3 Charge Determination Chart (Ambient Test Condition 85° F)