A/C COMPRESSOR (Continued)

(3) To duplicate a high-ambient temperature condition (high head pressure), restrict the air flow through the condenser. Install a manifold gauge set to be certain that the discharge pressure does not exceed 2760 kPa (400 psi).

(4) Check the refrigerant system plumbing for incorrect routing, rubbing or interference, which can cause unusual noises. Also check the refrigerant lines for kinks or sharp bends that will restrict refrigerant flow, which can cause noises (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - DESCRIPTION - REFRIGERANT LINES).

(5) If the noise is from opening and closing of the high pressure relief valve, recover, evacuate and recharge the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM RECOVERY), (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM EVACUATE) and (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM CHARGE).

(6) If the noise is from liquid slugging on the suction line, replace the accumulator (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING/ACCUMULATOR - REMOVAL) and check the refrigerant oil level and the refrigerant system charge (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING/REFRIGERANT OIL - STANDARD PROCEDURE - REFRIGERANT SYSTEM OIL LEVEL).

(7) If the liquid slugging condition continues following accumulator replacement, replace the A/C compressor and repeat Step 1.

REMOVAL

2.4L ENGINE

WARNING: Refer to the applicable warnings and cautions for this system before performing the following operation (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - WARNINGS) and (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - CAUTIONS). Failure to follow the warnings and cautions could result in possible personal injury or death.

NOTE: The A/C compressor may be removed and repositioned without disconnecting the refrigerant lines or discharging the refrigerant system. Discharging is not necessary if servicing the A/C clutch, clutch field coil or the engine.

(1) Recover the refrigerant from the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT RECOVERY).

(2) Disconnect and isolate the negative battery cable.

(3) Remove the accessory drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL).

(4) Disconnect the wire harness connector from the A/C clutch field coil.

(5) Remove the nuts that secure the A/C suction and discharge lines to the A/C compressor and remove and discard the O-ring seals (Fig. 4).

(6) Install plugs in, or tape over all of the opened refrigerant line fittings and compressor ports.

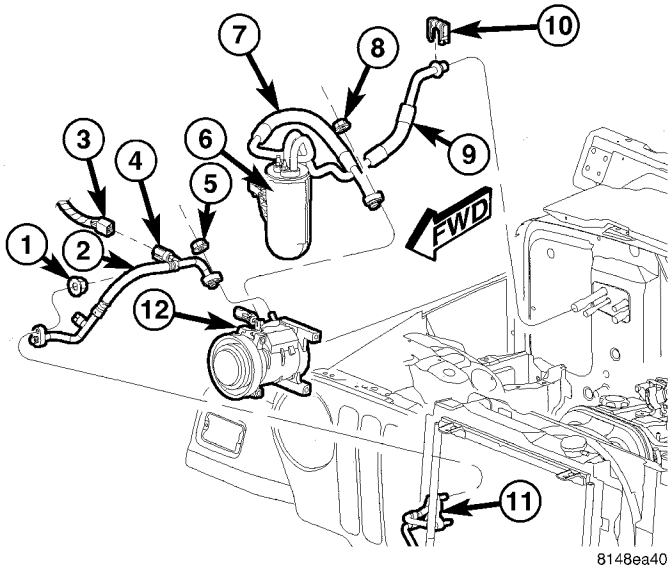

Fig. 4 A/C Compressor Refrigerant Lines - 2.4L Engine

1 - NUT
2 - A/C DISCHARGE LINE
3 - WIRE HARNESS CONNECTOR
4 - A/C PRESSURE TRANSDUCER
5 - NUT
6 - ACCUMULATOR
7 - A/C SUCTION LINE (FRONT SECTION)
8 - NUT (4)
9 - A/C SUCTION LINE (REAR SECTION)
10 - SECONDARY RETAINING CLIP
11 - A/C CONDENSER
12 - A/C COMPRESSOR