A/C COMPRESSOR (Continued)

(7) Remove the bolts and nuts that secure the A/C compressor to the engine (Fig. 5)

(8) Remove the A/C compressor from the engine compartment.

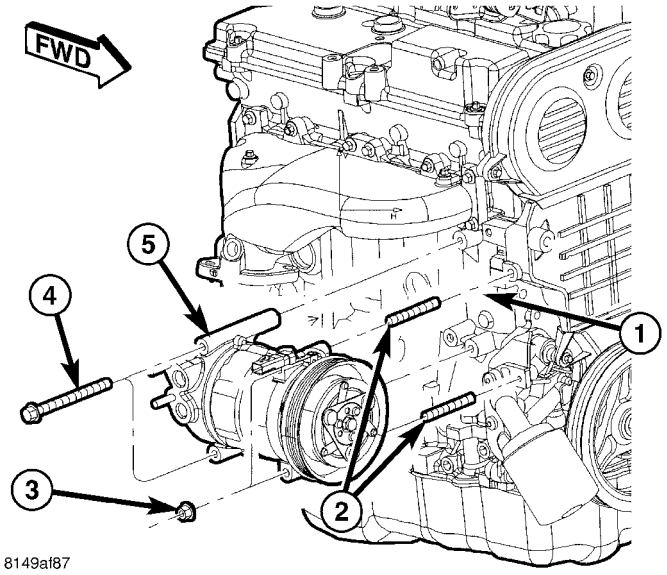

Fig. 5 A/C Compressor - 2.4L Engine

1 - CYLINDER BLOCK
2 - STUDS
3 - NUT (2)
4 - BOLT (2)
5 - A/C COMPRESSOR

4.0L ENGINE

WARNING: Refer to the applicable warnings and cautions for this system before performing the following operation (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - WARNINGS) and (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - CAUTIONS). Failure to follow the warnings and cautions could result in possible personal injury or death.

NOTE: The A/C compressor may be removed and repositioned without disconnecting the refrigerant lines or discharging the refrigerant system. Discharging is not necessary if servicing the A/C clutch, clutch field coil or the engine.

(1) Recover the refrigerant from the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT RECOVERY).

(2) Disconnect and isolate the negative battery cable.

(3) Remove the accessory drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL).

(4) Disconnect the wire harness connector from the A/C clutch field coil.

(5) Remove the nuts that secure the A/C suction and discharge lines to the A/C compressor and remove and discard the O-ring seals (Fig. 6).

(6) Install plugs in, or tape over all of the opened refrigerant line fittings and compressor ports.

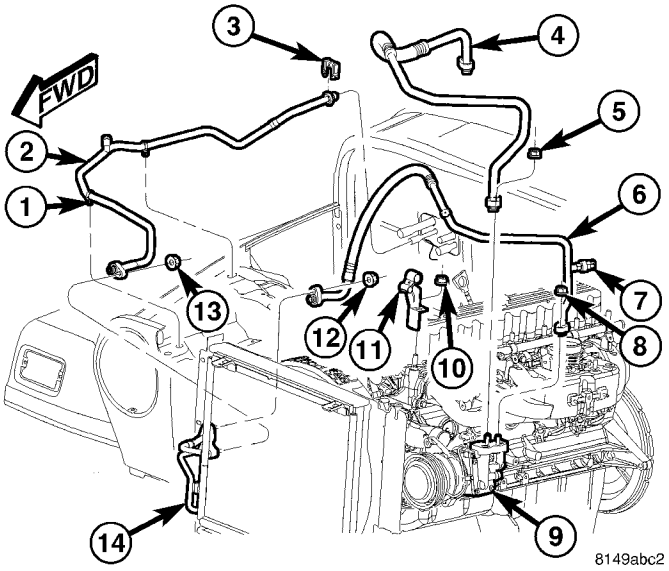

Fig. 6 A/C Compressor Refrigerant Lines - 4.0L LHD shown, RHD similar

1 - REFRIGERANT LINE RETAINING CLIP (2)
2 - A/C LIQUID LINE
3 - SECONDARY RETAINING CLIP
4 - A/C SUCTION LINE (FRONT SECTION)
5 - NUT
6 - A/C DISCHARGE LINE
7 - A/C HIGH PRESSURE SWITCH
8 - NUT
9 - A/C COMPRESSOR
10 - NUT
11 - REFRIGERANT LINE BRACKET
12 - NUT
13 - NUT
14 - A/C CONDENSER