A/C CONDENSER (Continued)

(10) If equipped, remove the upper condenser/radiator air seal (Fig. 9).

(11) Remove the nuts that secure the discharge and liquid lines to the condenser tapping block.

(12) Disconnect the discharge and liquid lines from the condenser tapping block and remove and discard the O-ring seals.

(13) Install plugs in, or tape over the opened refrigerant line fittings and the condenser ports.

(14) Remove the two bolts that secure the upper condenser mounting brackets to the top of the grille panel.

(15) Remove the three bolts on each side of the radiator that secure the radiator mounting brackets to the grille panel.

(16) Tilt the radiator back towards the engine. Use care to prevent damaging the radiator fins.

(17) Carefully remove the A/C condenser from the engine compartment.

INSTALLATION

NOTE: If the A/C condenser is being replaced, add 22 milliliters (0.75 fluid ounce) of refrigerant oil to the refrigerant system. Use only refrigerant oil of the type recommended for the A/C compressor in the vehicle.

(1) Carefully position the A/C condenser into the engine compartment.

(2) Install the two bolts that secure the upper condenser mounting brackets to the top of the grille panel. Tighten the bolts to 5 N·m (44 in. lbs.).

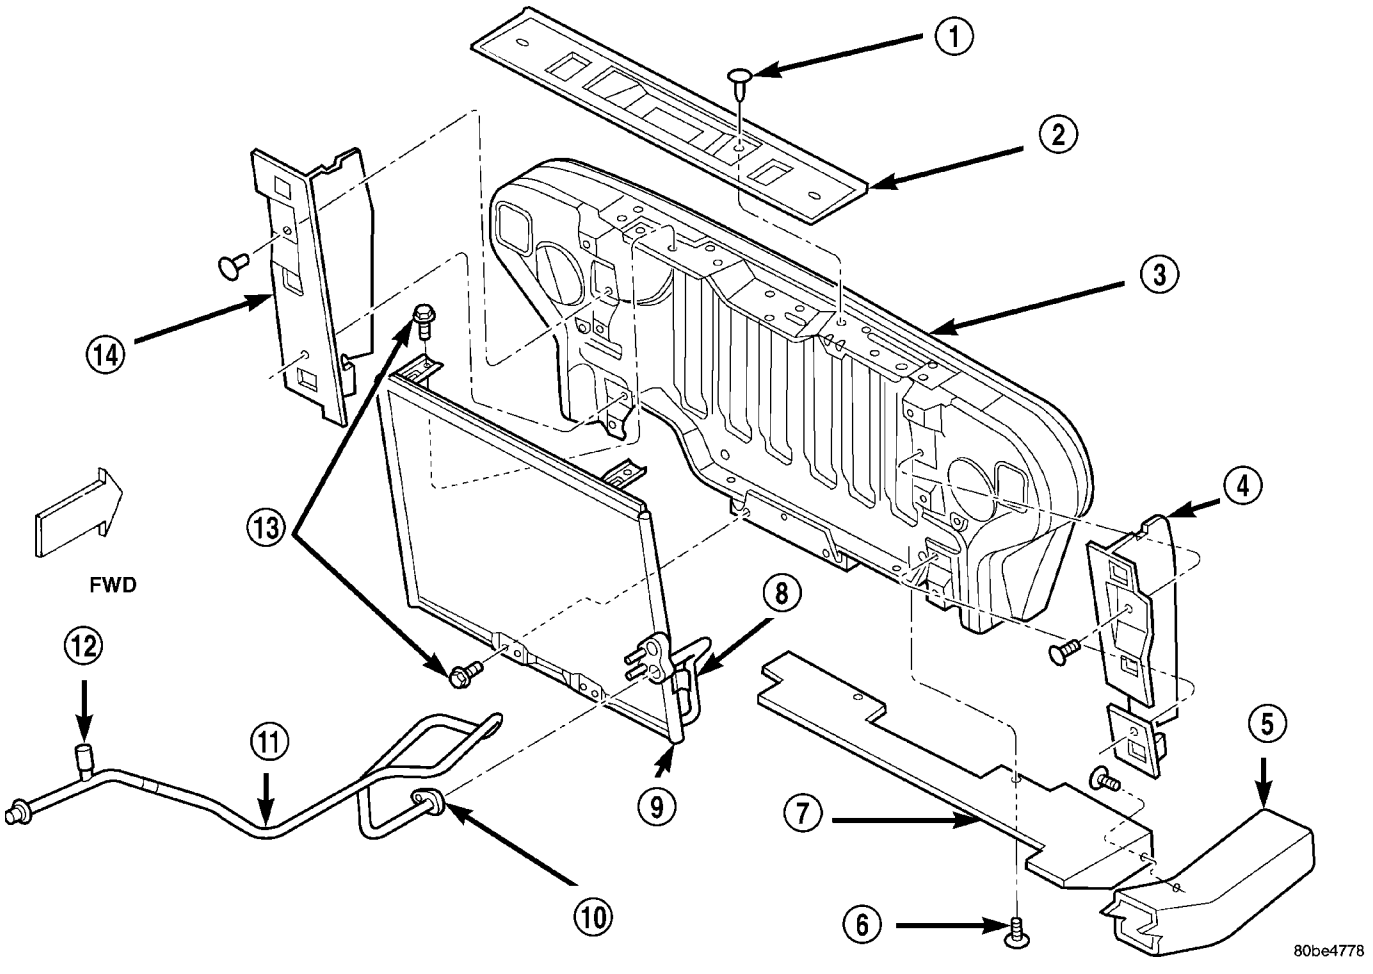

Fig. 9 A/C Condenser

1 - PUSH-PIN RETAINER
2 - UPPER AIR SEAL
3 - GRILLE PANEL
4 - AIR SEAL
5 - FRAME RAIL
6 - PUSH-PIN RETAINER
7 - LOWER AIR SEAL
8 - CONDENSER TAPPING BLOCK
9 - A/C CONDENSER
10 - REFRIGERANT LINE FITTING
11 - LIQUID LINE
12 - SERVICE PORT
13 - BOLTS
14 - AIR SEAL