ACCUMULATOR (Continued)

INSTALLATION

NOTE: If the A/C accumulator is being replaced, add 90 milliliters (3 fluid ounces) of refrigerant oil to the refrigerant system. Use only refrigerant oil of the type recommended for the A/C compressor in the vehicle.

(1) If removed, position the accumulator into the retaining band and loosely install the bolt.

(2) Position the accumulator and retaining band into the slotted hole of the support bracket on the dash panel.

(3) Remove the tape or plugs from the opened refrigerant line fittings and the accumulator ports.

(4) Lubricate new rubber O-ring seals with clean refrigerant oil and install them on the refrigerant line fittings. Use only the specified O-rings as they are made of a special material for the R-134a system. Use only refrigerant oil of the type recommended for the A/C compressor in the vehicle.

(5) Connect the refrigerant lines to the accumulator.

(6) Install the nuts that secure the refrigerant lines to the accumulator. Tighten the nuts to 9 N·m (80 in. lbs.).

(7) Tighten the bolt that secures the accumulator retaining band to the support bracket. Tighten the bolt to 4.5 N·m (40 in. lbs.).

(8) Install the plastic retaining clip that secures the A/C suction line to the liquid line near the accumulator.

(9) If removed, install the A/C low pressure switch onto the accumulator using a new O-ring seal. Hand-tighten the switch securely.

(10) Connect the wire harness connector to the A/C low pressure switch.

(11) Reconnect the negative battery cable.

(12) Evacuate the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM EVACUATE).

(13) Charge the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE - REFRIGERANT SYSTEM CHARGE).

(14) Charge the refrigerant system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE).

HEATER CORE

DESCRIPTION

The heater core (Fig. 17) is mounted in the HVAC housing, located behind the instrument panel. The heater core is a heat exchanger made of rows of tubes and fins. The heater core inlet and outlet tubes are integral to the heater core and cannot be serviced separately.

The heater core can be serviced by removing the HVAC housing from the vehicle.

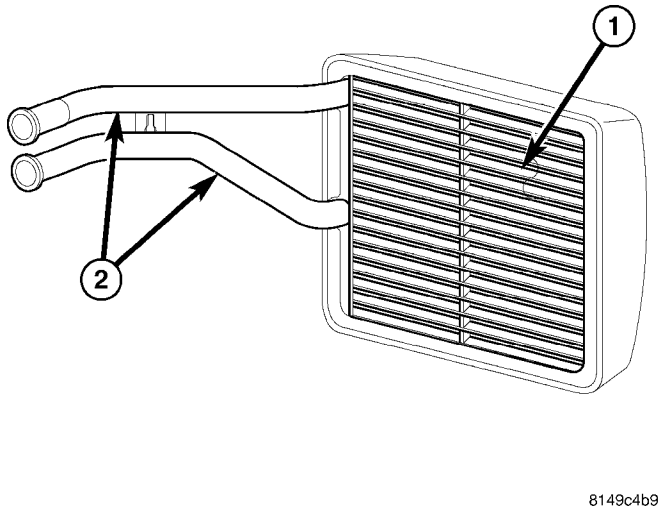

Fig. 17 Heater Core - Typical

1 - HEATER CORE
2 - INLET AND OUTLET TUBES

OPERATION

Engine coolant is circulated through the heater hoses and heater core at all times. As the coolant flows through the heater core, heat removed from the engine is transferred to the heater core fins and tubes. Air directed through the heater core picks up the heat from the heater core fins. The blend door allows control of the heater output air temperature by regulating the amount of air that is flowing through the heater core within the HVAC housing. The blower motor speed controls the volume of air flowing through the HVAC housing.

The heater core cannot be repaired and, if faulty or damaged, it must be replaced.