LIQUID LINE (Continued)

(4) Remove the secondary retaining clip from the spring-lock coupler that secures the liquid line to the A/C evaporator (Fig. 19) or (Fig. 20).

(5) Using the proper A/C line disconnect tool, disconnect the liquid line from the A/C evaporator and remove and discard the O-ring seal (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING/REFRIGERANT LINE COUPLER - REMOVAL).

(6) Install plugs in, or tape over the opened liquid line fitting and the evaporator port.

(7) Remove the liquid line from the retaining clips located on the right inner fender.

(8) Remove the nut that secures the liquid line to the A/C condenser.

(9) Disconnect the liquid line from the A/C condenser and remove and discard the O-ring seal.

(10) Install plugs in, or tape over the opened liquid line fitting and the condenser port.

(11) On LHD models, remove the liquid line from the engine compartment. On RHD models, proceed to Step 12.

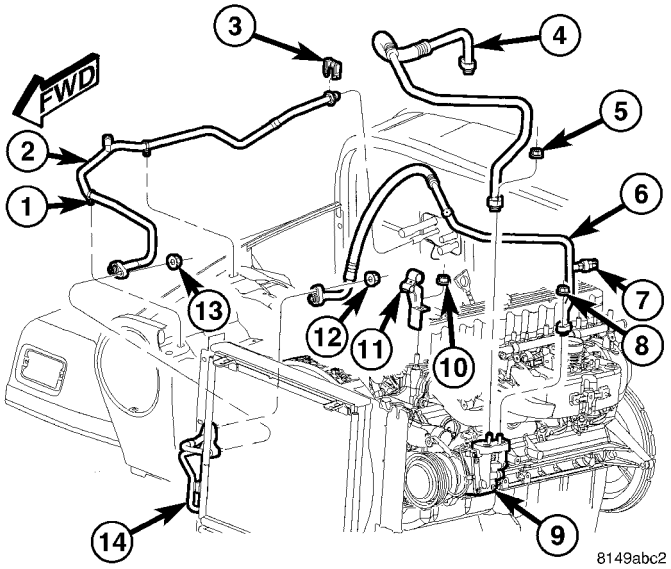

Fig. 19 A/C Liquid Line - 4.0L LHD shown, 2.4L similar

1 - REFRIGERANT LINE RETAINING CLIP (2)
2 - A/C LIQUID LINE
3 - SECONDARY RETAINING CLIP
4 - A/C SUCTION LINE (FRONT SECTION)
5 - NUT
6 - A/C DISCHARGE LINE
7 - A/C HIGH PRESSURE SWITCH
8 - NUT
9 - A/C COMPRESSOR
10 - NUT
11 - REFRIGERANT LINE BRACKET
12 - NUT
13 - NUT
14 - A/C CONDENSER

(12) On RHD models, remove the rear section of the liquid line from the retaining clips located on the dash panel (Fig. 20).

(13) Remove the secondary retaining clip from the spring-lock coupler that secures the rear section of the liquid line to the front section of the liquid line.

(14) Using the proper A/C line disconnect tool, disconnect the rear section of the liquid line from the front section of the liquid line and remove and discard the O-ring seal (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING/REFRIGERANT LINE COUPLER - REMOVAL).

(15) Install plugs in, or tape over the two opened liquid line fittings.

(16) Remove the front and rear section of the liquid line from the engine compartment.

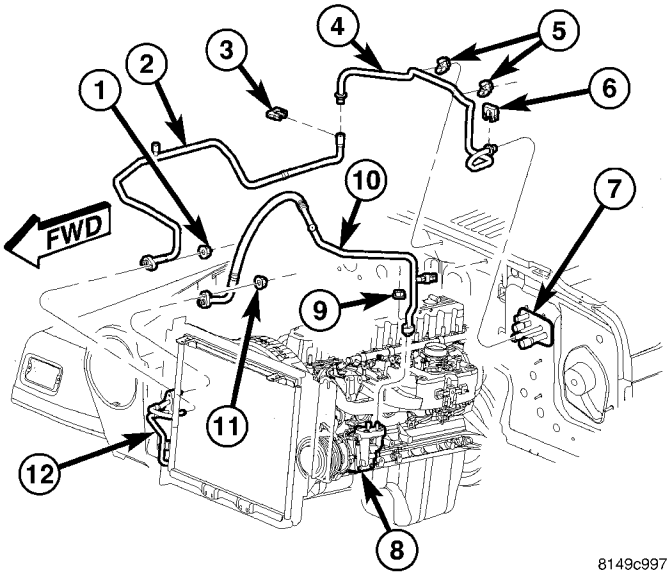

Fig. 20 A/C Liquid Line - 4.0L RHD

1 - NUT
2 - A/C LIQUID LINE (FRONT SECTION)
3 - SECONDARY RETAINING CLIP
4 - A/C LIQUID LINE (REART SECTION)
5 - REFRIGERANT LINE RETAINING CLIPS
6 - SECONDARY RETAINING CLIP
7 - A/C EVAPORATOR
8 - A/C COMPRESSOR
9 - NUT
10 - A/C DISCHARGE L;INE
11 - NUT
12 - A/C CONDENSER

INSTALLATION

NOTE: Replacement of the refrigerant line O-ring seals is required anytime a refrigerant line is opened. Failure to replace the rubber O-ring seals could result in a refrigerant system leak.

(1) Position the liquid line into the engine compartment.