CCV SYSTEM (Continued)

any of the plastic tubes or the fixed orifice fitting. Never attempt to clean the fixed orifice fitting with a metal object as calibration could be affected. If fixed fitting cannot be cleared, replace it.

PCV VALVE

DESCRIPTION

2.4L

The 2.4L 4-cylinder engine is equipped with a closed crankcase ventilation system and a Positive Crankcase Ventilation (PCV) valve.

This system consists of:

- a PCV valve attached to the left/front side of the valve cover (Fig. 2). It is secured with 1 bolt. An o-ring is used to seal valve to valve cover (Fig. 3). Another type of threaded PCV valve may be used (Fig. 4).
- the air cleaner housing
- tubes and hoses to connect the system components.

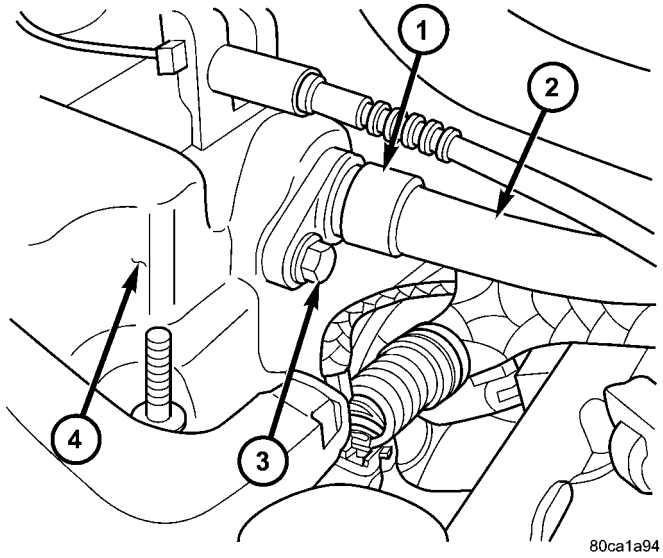

Fig. 2 PCV VALVE LOCATION - 2.4L

1 - PCV VALVE
2 - HOSE
3 - MOUNTING BOLT
4 - VALVE COVER (LEFT SIDE)

OPERATION

2.4L

The PCV system operates by engine intake manifold vacuum. Filtered air is routed into the crankcase through the air cleaner hose and crankcase breather(s) (if used). The metered air, along with crankcase vapors, are drawn through the PCV valve and into a passage in the intake manifold. The PCV system manages crankcase pressure and meters blow-by gases to the intake system, reducing engine sludge formation.

The PCV valve contains a spring loaded plunger. This plunger meters the amount of crankcase vapors

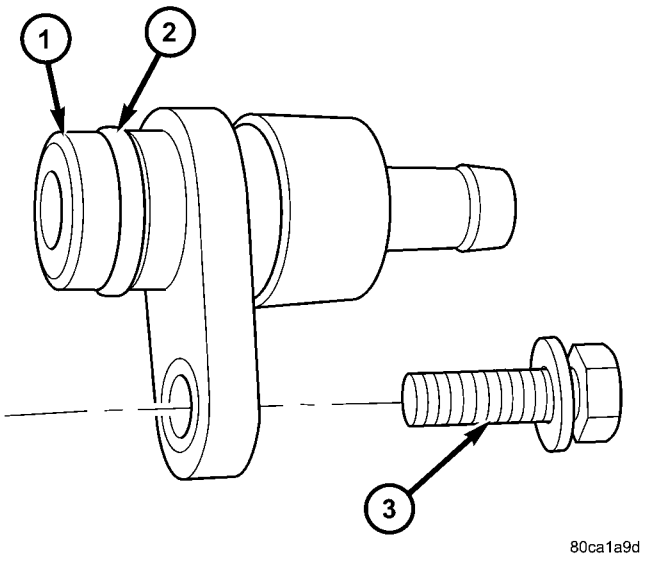

Fig. 3 PCV VALVE AND O-RING - 2.4L

1 - PCV VALVE
2 - O-RING
3 - MOUNTING BOLT

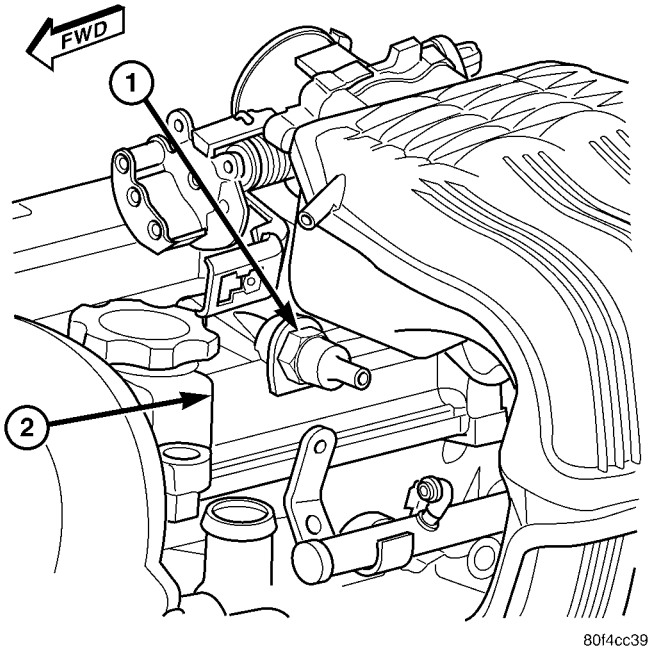

Fig. 4 PCV VALVE - 2.4L - THREADED

1 - PCV VALVE (THREADED)
2 - VALVE COVER (LEFT SIDE)