EVAP/PURGE SOLENOID (Continued)

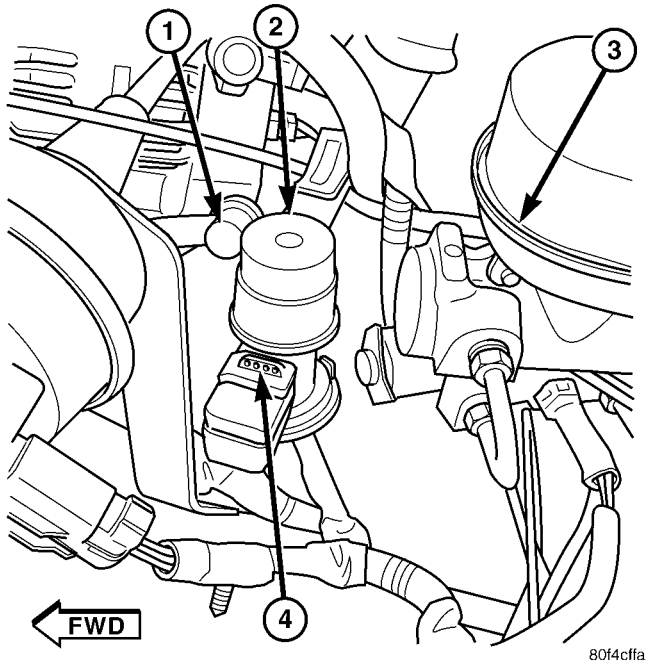

Fig. 8 EVAP/PURGE SOLENOID

1 - EVAP SYSTEM TEST PORT
2 - EVAP/PURGE SOLENOID
3 - FRONT OF BRAKE MASTER CYLINDER
4 - SOLENOID MOUNTING BRACKET

INSTALLATION

(1) Install purge solenoid and rubber support to its mounting bracket.

(2) Connect vacuum harness and wiring connector.

FUEL FILLER CAP

DESCRIPTION

The plastic fuel tank filler tube cap is threaded onto the end of the fuel fill tube. Certain models are equipped with a 1/4 turn cap.

OPERATION

The loss of any fuel or vapor out of fuel filler tube is prevented by the use of a pressure-vacuum fuel fill cap. Relief valves inside the cap will release fuel tank pressure at predetermined pressures. Fuel tank vacuum will also be released at predetermined values. This cap must be replaced by a similar unit if replacement is necessary. This is in order for the system to remain effective.

CAUTION: Remove fill cap before servicing any fuel system component to relieve tank pressure. If equipped with a California emissions package and a Leak Detection Pump (LDP), the cap must be tightened securely. If cap is left loose, a Diagnostic Trouble Code (DTC) may be set.

REMOVAL

If replacement of the 1/4 turn fuel tank filler tube cap is necessary, it must be replaced with an identical cap to be sure of correct system operation.

CAUTION: Remove the fuel tank filler tube cap to relieve fuel tank pressure. The cap must be removed prior to disconnecting any fuel system component or before draining the fuel tank.

ORVR

DESCRIPTION

The ORVR (On-Board Refueling Vapor Recovery) system consists of a unique fuel tank, flow management valve (5) (Fig. 9) , fluid control valve, one-way check valve and EVAP (vapor) canister (1) (Fig. 9).

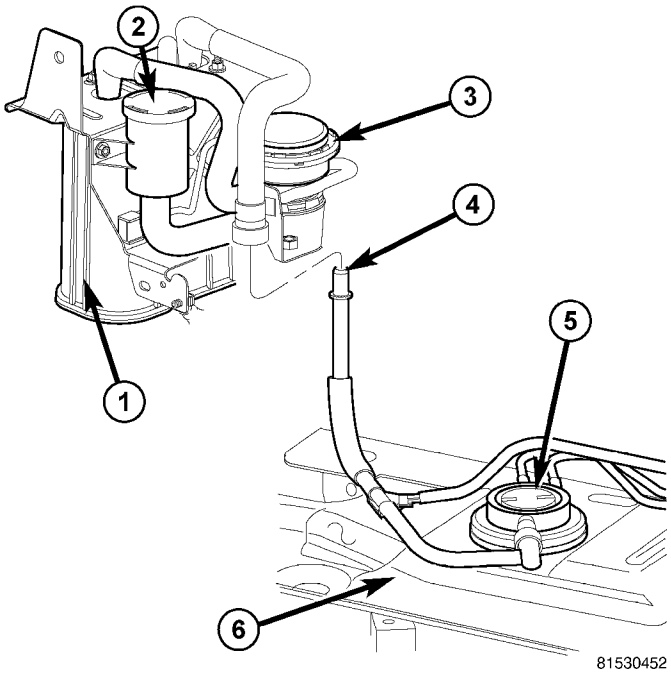

Fig. 9 ORVR VAPOR LINE

1 - EVAP CANISTER
2 - NVLD FILTER
3 - NVLD PUMP
4 - VAPOR LINES
5 - FLOW VALVE
6 - TOP OF FUEL TANK)

A vapor line (4) and vent line (9) (Fig. 10) are also used to connect the fuel tank into the ORVR system.