NATURAL VACUUM LEAK DETECTION ASSEMBLY (Continued)

quent declining temperature will achieve the switch closed (pass threshold) sooner than if the tank had to decay from a built up pressure.

The device itself has 3 wires: Switch sense, solenoid driver and ground. It also includes a resistor to protect the switch from a short to battery or a short to ground. The NGC utilizes a high-side driver to energize and duty-cycle the solenoid.

REMOVAL

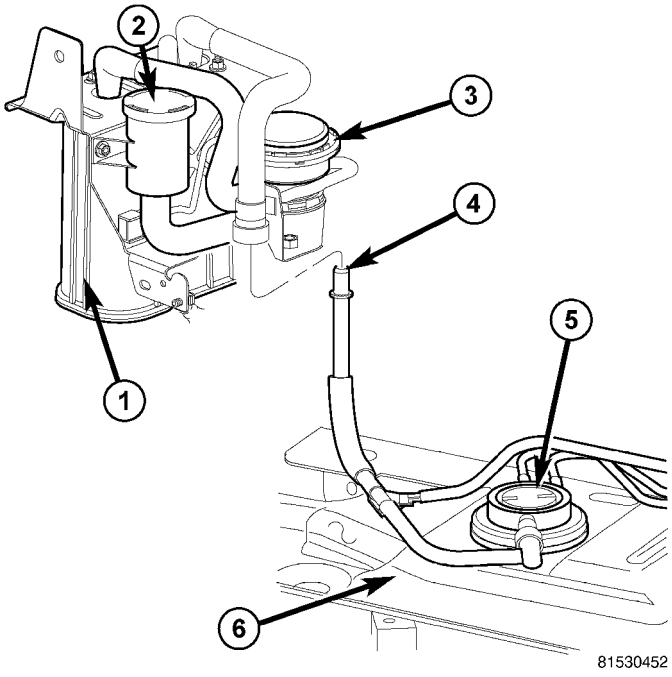

Fig. 12 ORVR VAPOR LINE

1 - EVAP CANISTER
2 - NVLD FILTER
3 - NVLD PUMP
4 - VAPOR LINES
5 - FLOW VALVE
6 - TOP OF FUEL TANK)

The Natural Vacuum Leak Detection (NVLD) pump (3) (Fig. 12) and EVAP canister (1) are attached to a common support bracket. This support assembly is located to the rear of the right / rear tire under the plastic wheelhouse liner. The NVLD pump filter is also located near the EVAP canister. The pump and filter are replaced (serviced) as one unit.

(1) Remove right/rear tire/wheel.

(2) Remove wheelhouse liner at right/rear wheel.

(3) Remove vertical support bracket (2) (Fig. 13) to gain access to ORVR vapor lines.

(4) A vapor line (4) (Fig. 14) connects the fuel tank to the EVAP canister and NVLD pump. This connection is made near the right/rear corner of the fuel tank. Carefully disconnect this line. Be very careful not to bend or kink the vapor lines. If lines leak, a Diagnostic Trouble Code (DTC) will be set.

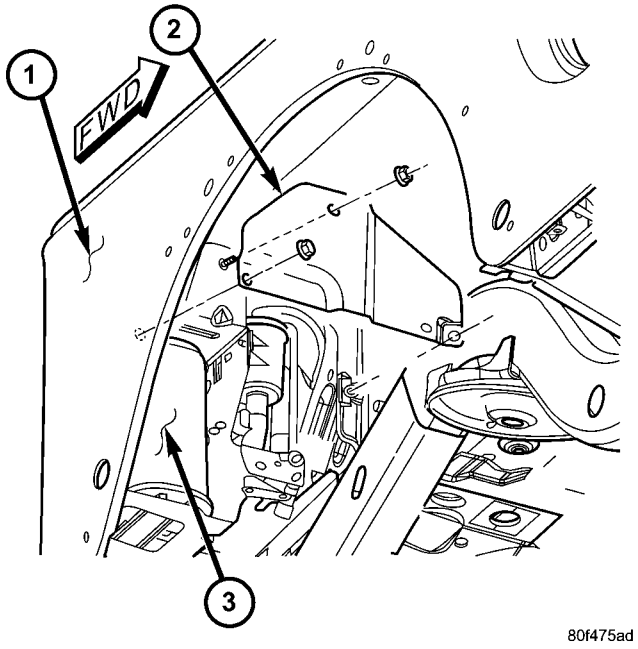

Fig. 13 EVAP CANISTER / LDP LOCATION

1 - RIGHT / REAR FENDER (WHEELHOUSE)
2 - VERTICAL SUPPORT BRACKET
3 - EVAP CANISTER

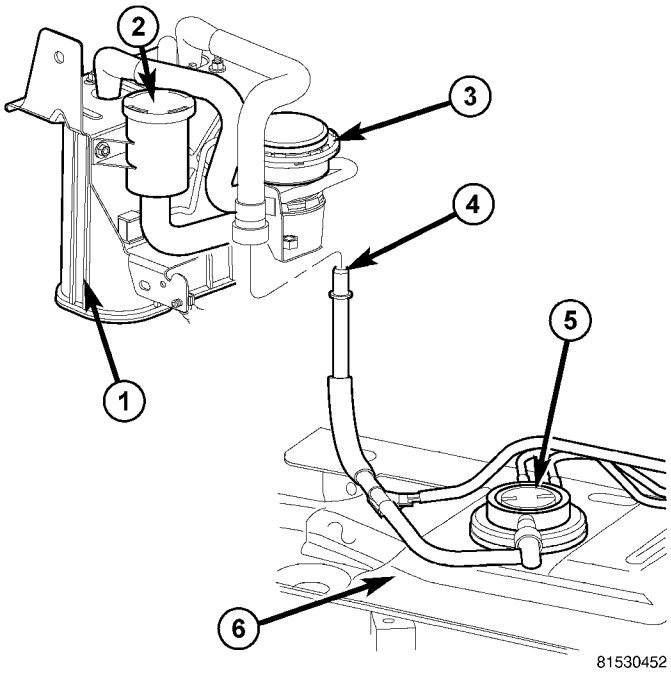

Fig. 14 ORVR VAPOR LINE

1 - EVAP CANISTER
2 - NVLD FILTER
3 - NVLD PUMP
4 - VAPOR LINES
5 - FLOW VALVE
6 - TOP OF FUEL TANK)