
# Air Bag Modules and Sensors
## Figure 8-1705

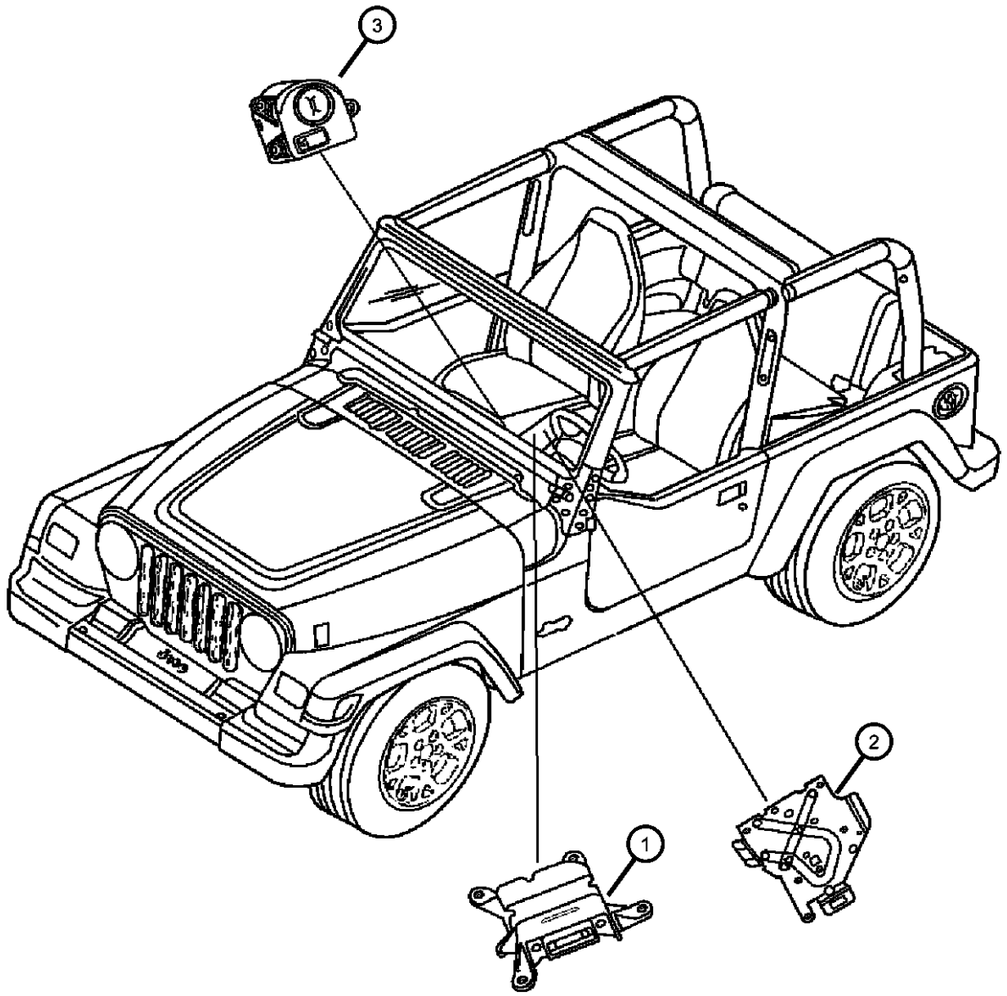


| ITEM | PART NUMBER | QTY | LINE | SERIES | BODY | ENGINE | TRANS | TRIM | DESCRIPTION |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 56010533AA | 1 | | | | | | | MODULE, Air Bag Control |
| 2 | 55177252AB | 1 | | | | | | | BRACKET, Air Bag Control Module |
| 3 | | | | | | | | | SWITCH, Passenger Airbag Disarm |
| | 56010301AB | 1 | | | | | DBB | | Air Bag Deactivation |
| | | 1 | J | | 77, 78 | | DG0 | | Air Bag Deactivation |

**WRANGLER (TJ)**

| SERIES | LINE | BODY | ENGINE | TRANSMISSION |
|---|---|---|---|---|
| H = HIGHLINE<br>L = LOWLINE<br>M = MEDIUM<br>P = PREMIUM<br>S = SPORT | J = JEEP - 4WD<br>U = JEEP - 4WD (RHD) | 77 = OPEN BODY 2-DOOR<br>78 = OPEN BODY 2-DOOR | ED1 = 2.4L 4 Cyl DOHC 16v SMPI Engine<br>ERH = 4.0L Power Tech I-6 Engine | DDD = 5-Speed HD Manual Transmission<br>DDK = 5-Speed HD Manual Transmission<br>DDQ = 5-Speed Manual Transmission<br>DEH = 6-Speed Manual NSG370 Transmission<br>DG6 = 4-Spd. Automatic 42RLE Transmission |