

FUEL INJECTOR NO. 3 (2.4L)

FUEL INJECTOR NO. 3 (2.4L) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	F142 16PK/GY	ASD RELAY OUTPUT
2	K13 16BR/LB	INJECTOR CONTROL NO. 3

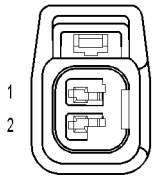

FUEL INJECTOR NO. 3 (4.0L)

FUEL INJECTOR NO. 3 (4.0L) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	K334 18BR	ASD RELAY OUTPUT
2	K13 18BR/LB	INJECTOR CONTROL NO. 3



FUEL INJECTOR NO. 4 (2.4L)

FUEL INJECTOR NO. 4 (2.4L) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	F142 16PK/GY	ASD RELAY OUTPUT
2	K14 16BR/TN	INJECTOR CONTROL NO. 4

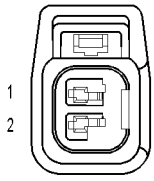

FUEL INJECTOR NO. 4 (4.0L)

FUEL INJECTOR NO. 4 (4.0L) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	K334 18BR	ASD RELAY OUTPUT
2	K14 18BR/TN	INJECTOR CONTROL NO. 4

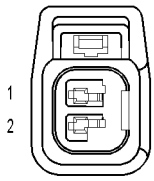

FUEL INJECTOR NO. 5 (4.0L)

FUEL INJECTOR NO. 5 (4.0L) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	K334 18BR	ASD RELAY OUTPUT
2	K38 18BR/OR	INJECTOR CONTROL NO. 5