10.2 4.0L NGC

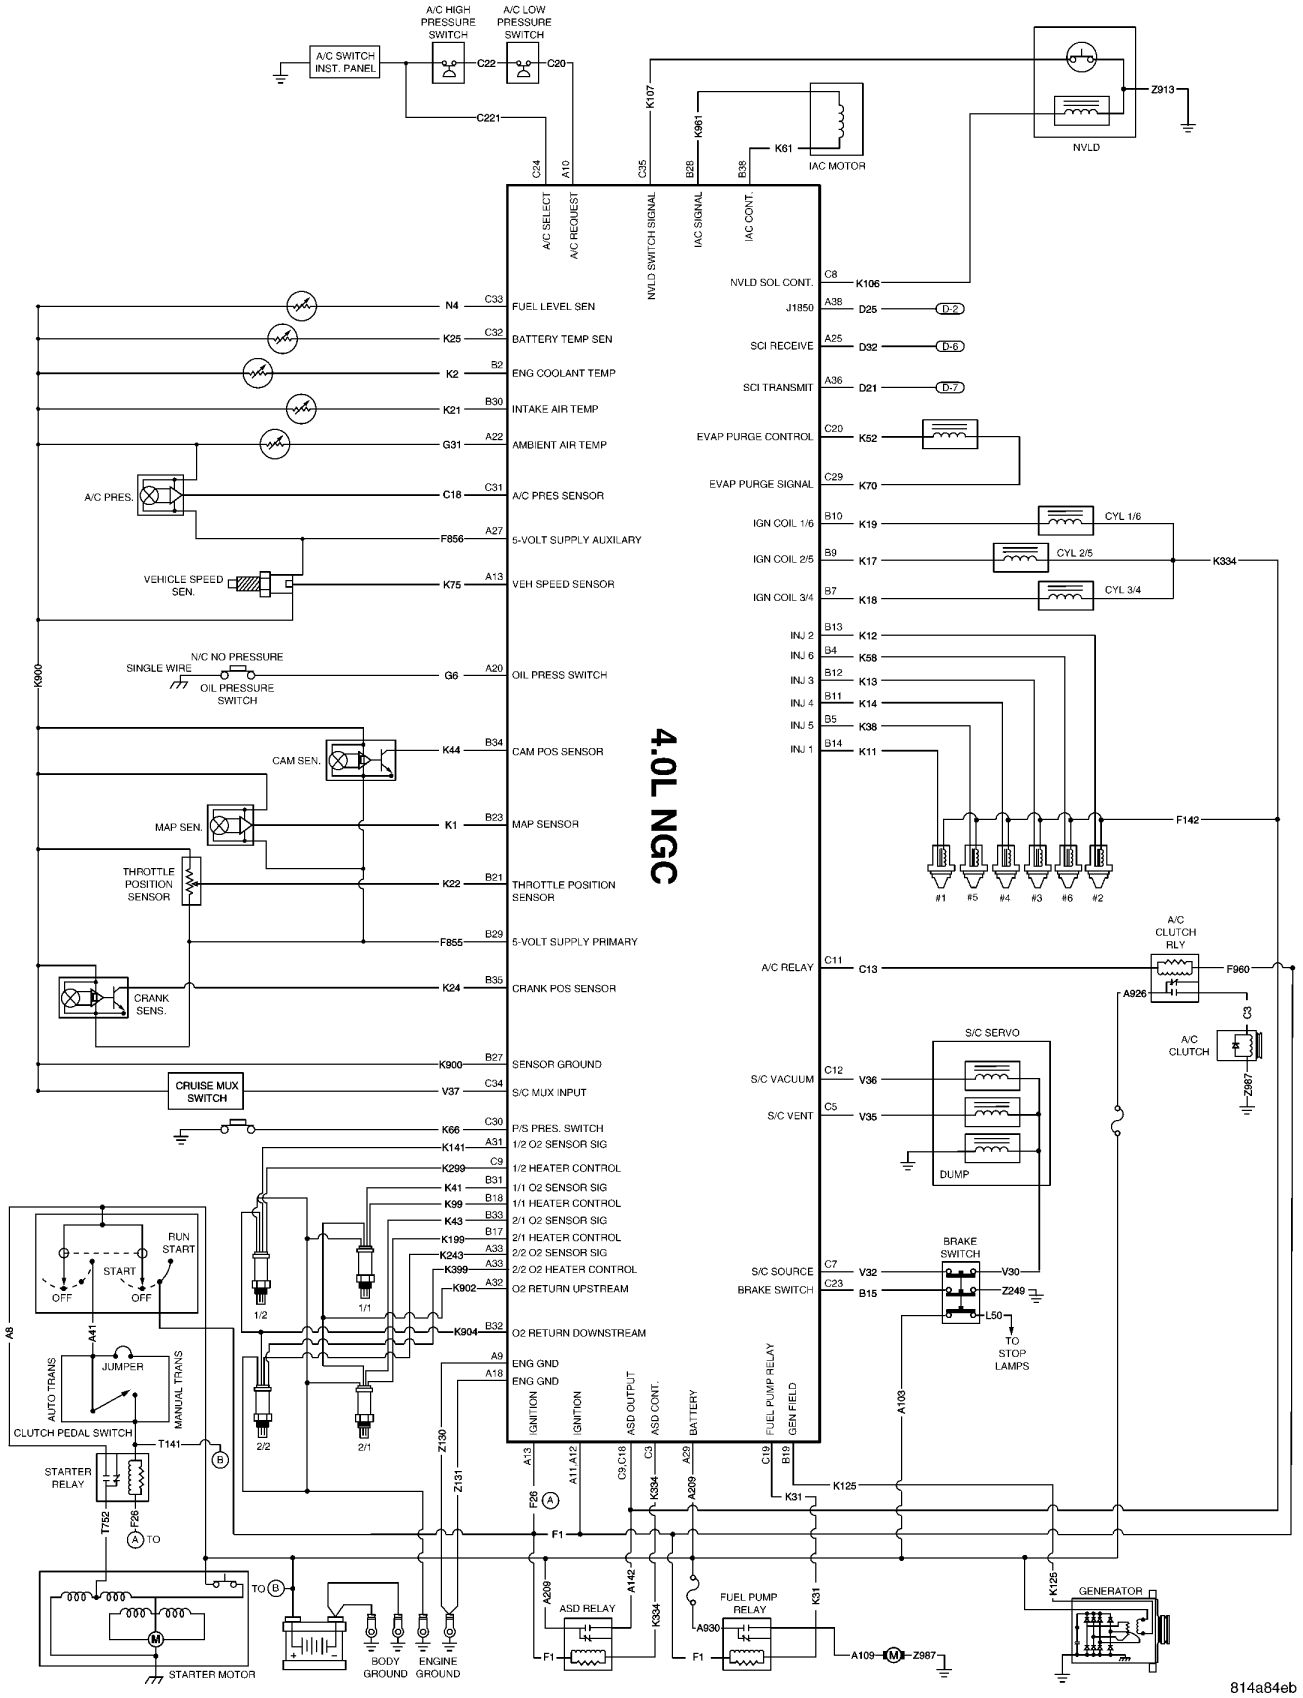
4.0L NGC
A/C HIGH PRESSURE SWITCH
A/C LOW PRESSURE SWITCH
A/C SWITCH INST. PANEL
C22
C20
C221
K107
K961
K61
IAC MOTOR
Z913
NVLD
C24
A10
C35
B28
B38
A/C SELECT
A/C REQUEST
NVLD SWITCH SIGNAL
IAC SIGNAL
IAC CONT
NVLD SOL CONT.
C8
K106
J1850
A38
D25
D-2
SCI RECEIVE
A25
D32
D-6
SCI TRANSMIT
A36
D21
D-7
EVAP PURGE CONTROL
C20
K52
EVAP PURGE SIGNAL
C29
K70
IGN COIL 1/6
B10
K19
CYL 1/6
IGN COIL 2/5
B9
K17
CYL 2/5
K334
IGN COIL 3/4
B7
K18
CYL 3/4
INJ 2
B13
K12
INJ 6
B4
K58
INJ 3
B12
K13
INJ 4
B11
K14
INJ 5
B5
K38
INJ 1
B14
K11
F142
#1
#5
#4
#3
#6
#2
N4
C33
FUEL LEVEL SEN
K25
C32
BATTERY TEMP SEN
K2
B2
ENG COOLANT TEMP
K21
B30
INTAKE AIR TEMP
G31
A22
AMBIENT AIR TEMP
A/C PRES.
C18
C31
A/C PRES SENSOR
F856
A27
5-VOLT SUPPLY AUXILARY
VEHICLE SPEED SEN.
K75
A13
VEH SPEED SENSOR
K900
N/C NO PRESSURE
SINGLE WIRE
OIL PRESSURE SWITCH
G6
A20
OIL PRESS SWITCH
CAM SEN.
K44
B34
CAM POS SENSOR
MAP SEN.
K1
B23
MAP SENSOR
THROTTLE POSITION SENSOR
K22
B21
THROTTLE POSITION SENSOR
F855
B29
5-VOLT SUPPLY PRIMARY
CRANK SENS.
K24
B35
CRANK POS SENSOR
K900
B27
SENSOR GROUND
CRUISE MUX SWITCH
V37
C34
S/C MUX INPUT
K66
C30
P/S PRES. SWITCH
K141
A31
1/2 O2 SENSOR SIG
K299
C9
1/2 HEATER CONTROL
K41
B31
1/1 O2 SENSOR SIG
K99
B18
1/1 HEATER CONTROL
K43
B33
2/1 O2 SENSOR SIG
K199
B17
2/1 HEATER CONTROL
K243
A33
2/2 O2 SENSOR SIG
K399
A33
2/2 O2 HEATER CONTROL
K902
A32
O2 RETURN UPSTREAM
K904
B32
O2 RETURN DOWNSTREAM
A9
ENG GND
A18
ENG GND
A/C RELAY
C11
C13
A/C CLUTCH RLY
F960
A926
A/C CLUTCH
C3
Z987
S/C SERVO
S/C VACUUM
C12
V36
S/C VENT
C5
V35
DUMP
S/C SOURCE
C7
V32
V30
BRAKE SWITCH
C23
B15
Z249
L50
TO STOP LAMPS
BRAKE SWITCH
RUN START
START
OFF
OFF
A8
A41
JUMPER
AUTO TRANS
MANUAL TRANS
CLUTCH PEDAL SWITCH
T141
STARTER RELAY
T752
F28
TO
STARTER MOTOR
TO
BODY GROUND
ENGINE GROUND
1/2
1/1
2/2
2/1
Z130
Z131
IGNITION
IGNITION
ASD OUTPUT
ASD CONT.
BATTERY
FUEL PUMP RELAY
GEN FIELD
A13
A11,A12
C3,C16
C3
K334
A29
C19
B19
K31
K125
A103
P26
A
F1
A209
ASD RELAY
A142
K334
F1
FUEL PUMP RELAY
A930
K31
F1
A109
Z987
K125
GENERATOR
814a84eb