11.6 TRANSMISSION TEMPERATURE SENSOR

TRANSMISSION TEMPERATURE SENSOR (DUAL RANGE)

START ENGINE. WITH DRB, MONITOR AND RECORD TRANSMISSION TEMPERATURE VOLTAGE.
COMPARE THE MEASURED TEMPERATURE AND VOLTAGE WITH THE GRAPH SHOWN BELOW.
THE MEASURED VALUE SHOULD FALL ON ONE OF THE LINES ON THE GRAPH.

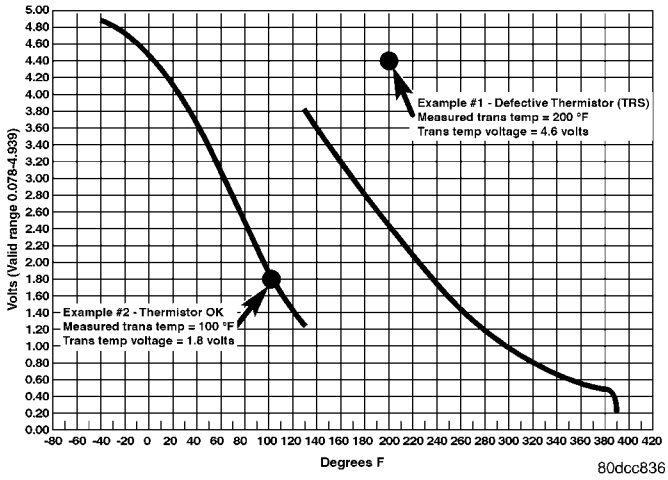

80dcc836

NORMAL READING RANGE AT IDLE

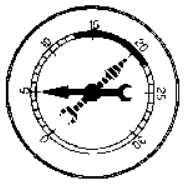

BLOWN HEAD GASKET AT IDLE

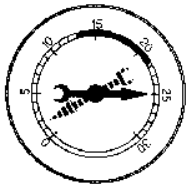

NORMAL READING RAPID ACCELERATION/ DECELERATION

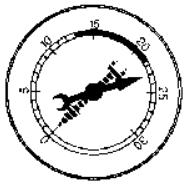

WORN RINGS OR DILUTED OIL RAPID ACCELERATION/ DECELERATION

LATE VALVE TIMING, VACUUM LEAK AT IDLE

RESTRICTED EXHAUST (DROPS TOWARD ZERO AS ENGINE RPM INCREASES)

POOR VALVE SEATING AT IDLE

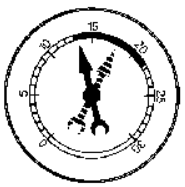

STICKING VALVE AT IDLE

WORN VALVE GUIDES (STEADIES AS ENGINE SPEED INCREASES)

WORN VALVE SPRINGS (MORE PRONOUNCED AS ENGINE SPEED INCREASES)

0920606