Group – 024
Air Conditioning & Heater

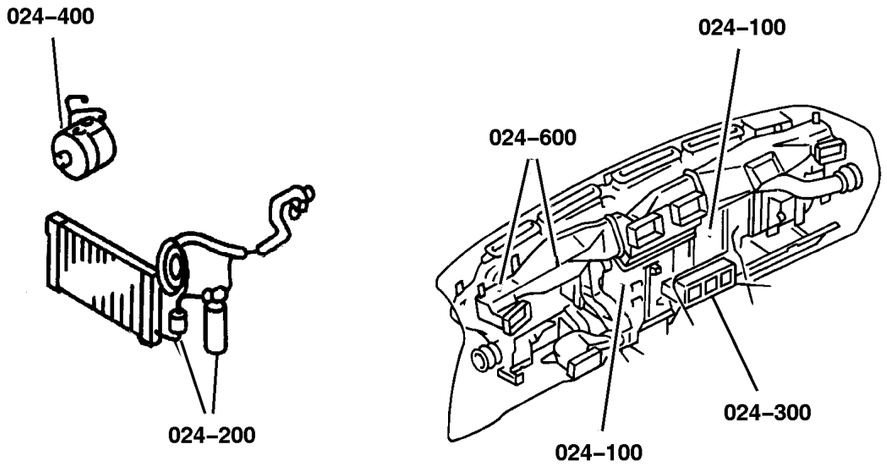

024–100 Air Conditioner and Heater Units 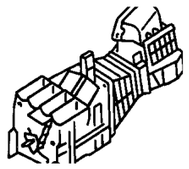	**024–200** Air Conditioner and Heater Plumbing 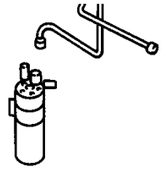	**024–300** Air Conditioner and Heater Controls 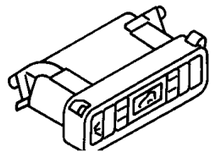	**024–400** Air Conditioning Compressor 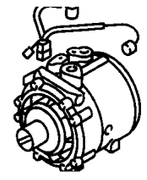
024–600 Air Ducts and Outlets 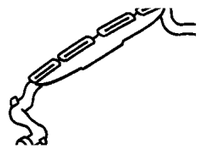			

GROUP 24 - Air Conditioning & Heater

Illustration Title — Group-Fig. No.

Air Conditioner and Heater Units
Hevac Unit, LHD . . . . . Fig. 024-105
Hevac Unit, RHD . . . . . Fig. 024-110

Air Conditioner and Heater Plumbing
Hoses, Heater 2.4L Engine . . . . . Fig. 024-210
Hoses, Heater 4.0L Engine . . . . . Fig. 024-220
Plumbing, Hevac 2.4L Engine . . . . . Fig. 024-225
Plumbing, Hevac 4.0L Engine, LHD . . . . . Fig. 024-235
Pluming, Hevac 4.0L Engine, RHD . . . . . Fig. 024-240
Seals, A/C Condenser . . . . . Fig. 024-245

Air Conditioner and Heater Controls
Control, Heater And A/c . . . . . Fig. 024-310

Air Conditioning Compressor
Compressor, Air Conditioning . . . . . Fig. 024-410

Air Ducts and Outlets
Ducts, Heater And A/c . . . . . Fig. 024-610