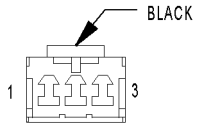

LEFT REAR SPEAKER

LEFT REAR SPEAKER - BLACK 3 WAY

CAV	CIRCUIT	FUNCTION
1	X57 20BR/LB	LEFT REAR SPEAKER (-)
2	-	-
3	X51 18BR/YL	LEFT REAR SPEAKER (+)

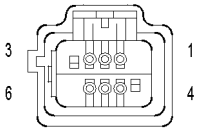

PASSENGER AIRBAG ON-OFF SWITCH (LHD)

PASSENGER AIRBAG ON-OFF SWITCH (LHD) - 6 WAY

CAV	CIRCUIT	FUNCTION
1	F201 18PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
2	G104 18VT/GY	PASSENGER AIRBAG INDICATOR DRIVER
3	R106 18LG/LB	PASSENGER AIRBAG MUX SWITCH SENSE
4	-	-
5	-	-
6	R104 18LB/LG	PASSENGER AIRBAG MUX SWITCH RETURN

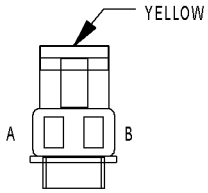

PASSENGER AIRBAG SQUIB 1

PASSENGER AIRBAG SQUIB 1 - YELLOW 2 WAY

CAV	CIRCUIT	FUNCTION
A	R42 18LB/BR	PASSENGER SQUIB 1 LINE 1
B	R44 18LB/OR	PASSENGER SQUIB 1 LINE 2

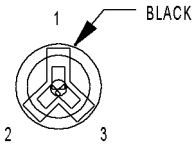

PASSENGER DOOR AJAR SWITCH

PASSENGER DOOR AJAR SWITCH - BLACK 3 WAY

CAV	CIRCUIT	FUNCTION
1	M23 20YL/DG	DOOR AJAR SWITCH OUTPUT
2	-	-
3	G76 20VT/YL	PASSENGER DOOR AJAR SWITCH SENSE