ward press of the axle lock switch will operate the front locker relay and front locker pump. The first downward press on the axle lock switch locks the rear axle, the second downward press locks the front axle (rear is still locked), the third downward press unlocks the front axle (rear is still locked), the fourth downward press locks the front axle (rear axle is still locked). An upward press on the axle lock switch at any time will unlock any axle that is currently locked.

The enabled axle lock switch energizes the locker relay and voltage is sent to the locker pump to supply 5 psi of air to the axle allowing the differential to lock up. The "axle lock" indicator on the instrument cluster flashes during the transition state. The instrument cluster is seeking lock feedback from the locking indicator switch. With a successful lock request the "axle lock" indicator will be illuminated and a chime will sound.

If an axle is engaged the axle lock switch remains enabled until all axles are unlocked, regardless if the key is removed from the ignition switch. If the ignition key is removed and either axle is locked the instrument cluster "axle lock" indicator to the corresponding axle will flash and the chime will sound three times to alert of battery discharge. Flashing "axle lock" indicators will continue until axles are unlocked. Once the axles have been locked it will remain locked until one of the following happens:

1. an upward press of the axle lock switch for all locked axles or downward press for front axle only
2. transfer case is shifted out of 4 "LOW" range
3. vehicle speed exceeds 72 km/h (45 mph)
4. loss of battery power

3.4 USING THE DRBIII®

Refer to the DRBIII® user's guide for instructions and assistance with reading diagnostic trouble codes, erasing trouble codes and other DRBIII® functions.

3.5 DRBIII® ERROR MESSAGES

Under normal operation, the DRBIII® will display one of only two error messages:

– User–Requested WARM Boot or User–Requested COLD Boot

This is a sample of such an error message display:

```
ver: 2.14
date: 26 Jul93
file: key_itf.cc
date: Jul 26 1993
line: 548
err: 0x1
User-Requested COLD Boot

Press MORE to switch between this display
  and the application screen.
Press F4 when done noting information.
```

3.5.1 DRBIII® DOES NOT POWER UP (BLANK SCREEN)

If the LED's do not light or no sound is emitted at start up, check for loose cable connections or a bad cable. Check the vehicle battery voltage (data link 16-way connector cavity 16). A minimum of 11 volts is required to adequately power the DRBIII®. Also, check for a good ground at the DLC.

If all connections are proper between the DRBIII® and the vehicle or other devices, and the vehicle battery is fully charged, and inoperative DRBIII® may be the result of faulty cable or vehicle wiring.

3.5.2 DISPLAY IS NOT VISIBLE

Low temperatures will affect the visibility of the display. Adjust the contrast to compensate for this condition.

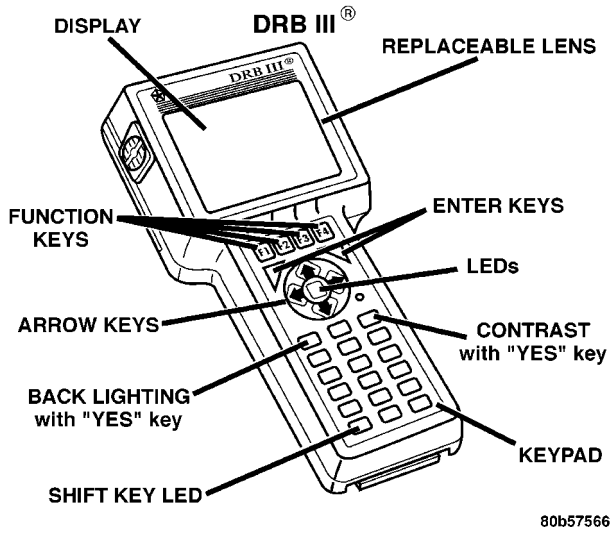

4.0 DISCLAIMERS, SAFETY WARNINGS

4.1 DISCLAIMERS

All information, illustrations, and specifications contained in this manual are based on the latest