AUTOMATIC TRANSMISSION - 42RLE (Continued)

(3) Remove the bolts (Fig. 19) that hold the adapter housing onto the transmission case.

(4) Remove the adapter (Fig. 21) housing from the transmission case. There are two pry slots (Fig. 20) located near the bottom corners of the housing for separating the housing from the transmission case.

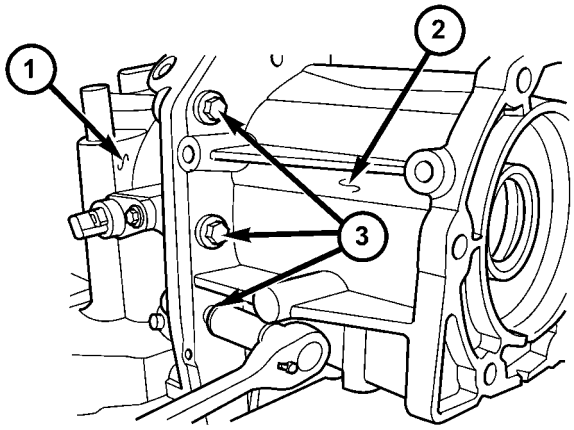

80f81703

Fig. 19 Remove Adapter Housing Bolts

1 - TRANSMISSION CASE
2 - ADAPTER HOUSING
3 - BOLTS

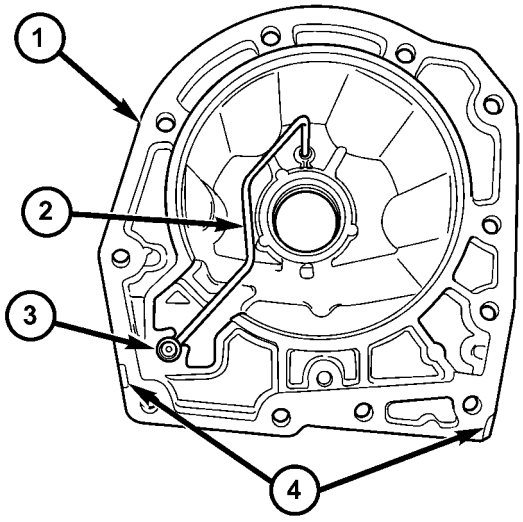

80f816f9

Fig. 20 Lube Tube Grommet

1 - HOUSING
2 - LUBE TUBE
3 - GROMMET
4 - PRY SLOTS

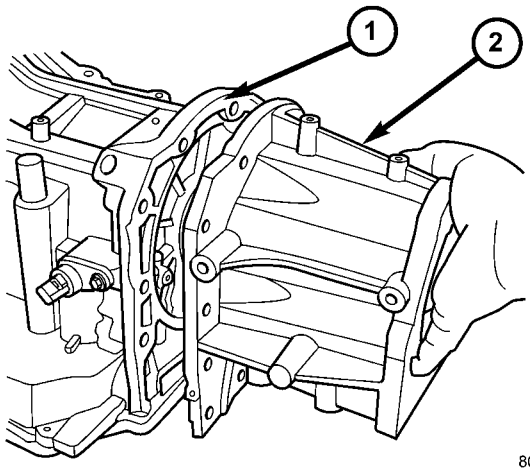

80f81701

Fig. 21 Remove Adapter Housing

1 - TRANSMISSION CASE
2 - ADAPTER HOUSING

(5) Inspect the lube tube grommet (Fig. 20) for damage. If the grommet lip is damaged, it will need to be replaced.

(6) Using a Slide Hammer C-3752 (Fig. 22), remove the 4X4 stub shaft (Fig. 23) from the transmission output shaft. Inspect the cir-clip on the shaft for damage and replace the clip if necessary.

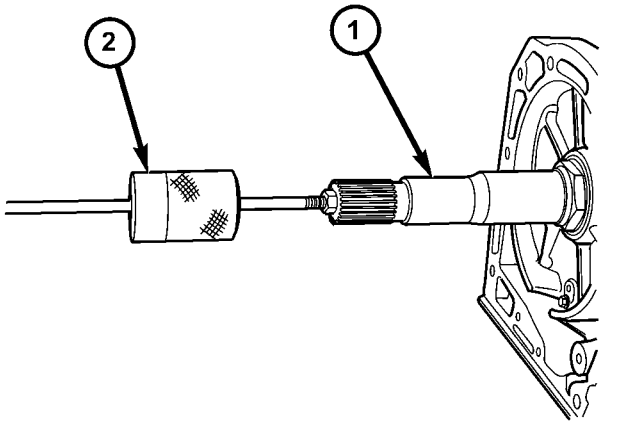

80f8b00d

Fig. 22 Remove the 4X4 Stub shaft Using C-3752

1 - 4X4 STUB SHAFT
2 - PULLER C-3752