AUTOMATIC TRANSMISSION - 42RLE (Continued)

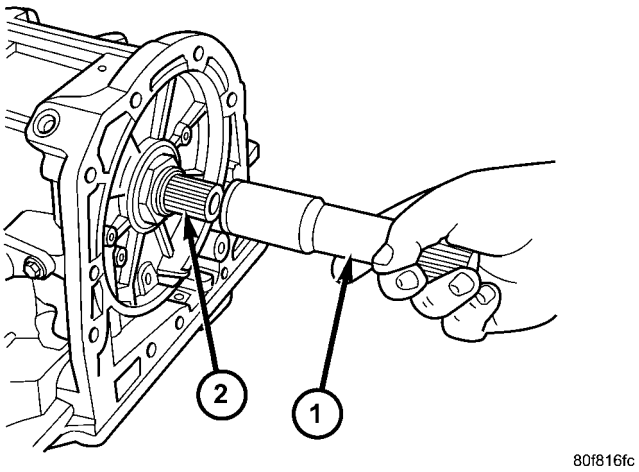


***Fig. 23 Remove 4X4 Stub Shaft***

1 - STUB SHAFT
2 - OUTPUT SHAFT

(7) Remove the input speed sensor bolt (Fig. 24).
(8) Remove the output speed sensor bolt (Fig. 25).

**NOTE: The speed sensor bolts have a sealing patch applied from the factory. Seperate these bolts for reuse.**

(9) Remove the input and output speed sensors (Fig. 26). Identify the speed sensors for re-installation since they are not interchangeable.

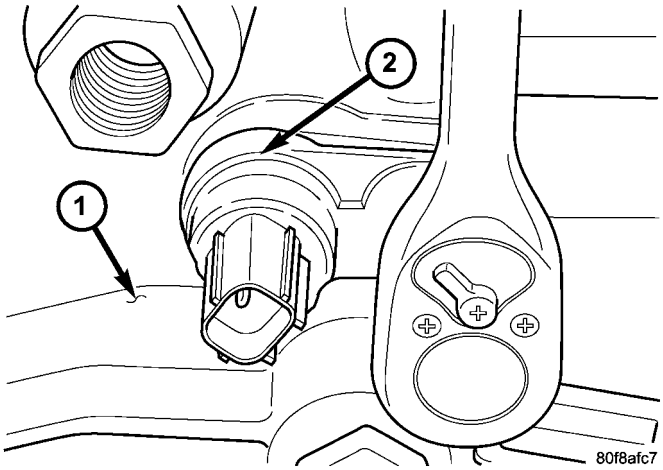


***Fig. 24 Remove Input Speed Sensor Bolt***

1 - INPUT SPEED SENSOR
2 - TRANSMISSION CASE

**NOTE: One of the oil pan bolts has a sealing patch applied from the factory. Seperate this bolt for reuse.**

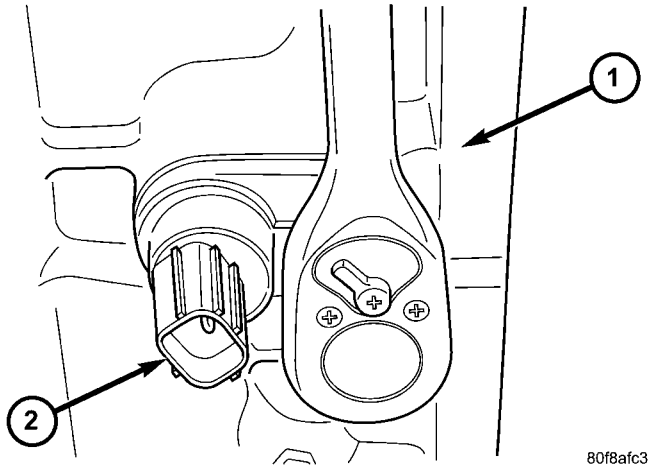


***Fig. 25 Remove Output Speed Sensor Bolt***

1 - OUTPUT SPEED SENSOR
2 - TRANSMISSION CASE

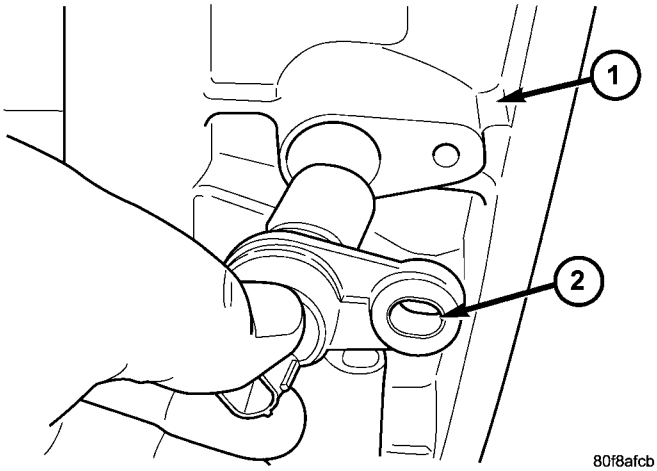


***Fig. 26 Remove Output Speed Sensor***

1 - OUTPUT SPEED SENSOR
2 - TRANSMISSION CASE