AUTOMATIC TRANSMISSION - 42RLE (Continued)

(10) Remove the transmission oil pan bolts (Fig. 27).

(11) Remove the transmission oil pan (Fig. 28).

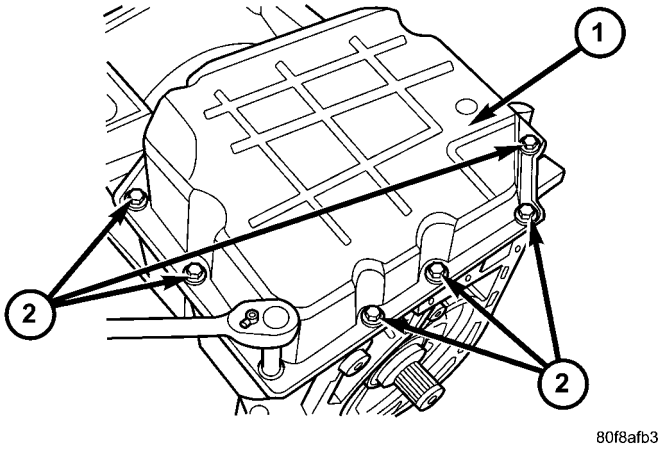

Fig. 27 Remove Transmission Oil Pan Bolts

1 - TRANSMISSION OIL PAN
2 - BOLTS

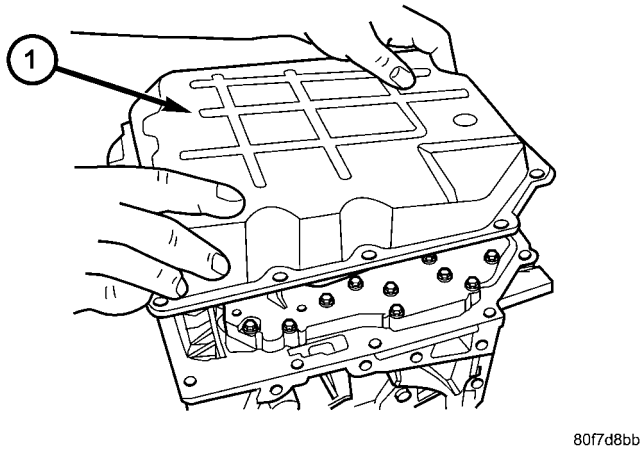

Fig. 28 Remove Transmission Oil Pan

1 - TRANSMISSION OIL PAN

(12) Remove the transmission oil filter screws (Fig. 29).

(13) Remove transmission oil filter (Fig. 30).

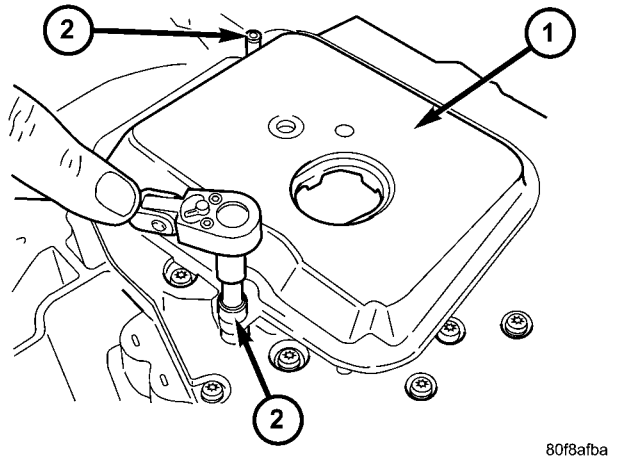

Fig. 29 Remove Oil Filter Screws

1 - OIL FILTER
2 - SCREWS

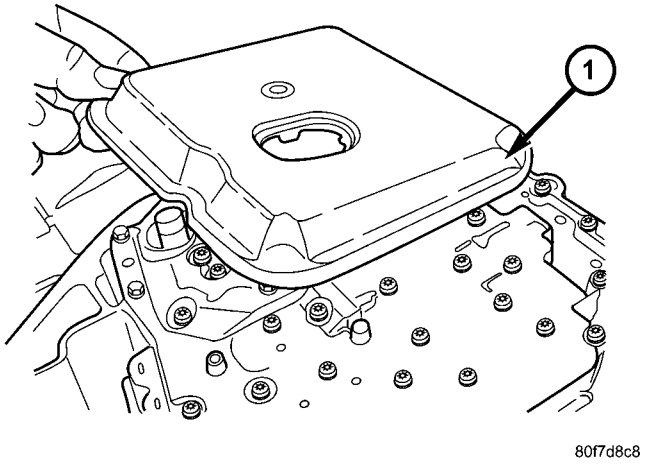

Fig. 30 Remove Transmission Filter

1 - TRANSMISSION FILTER