AUTOMATIC TRANSMISSION - 42RLE (Continued)

(14) Remove the oil filter o-ring from the valve body (Fig. 31).

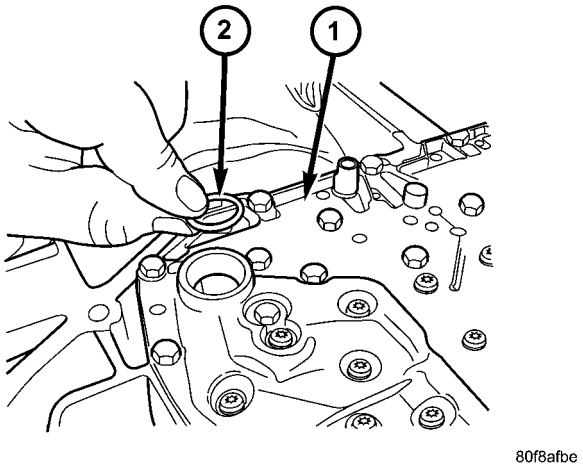

Fig. 31 Remove Oil Filter O-Ring

1 - VALVE BODY
2 - O-RING

(15) Remove valve body-to-case bolts (Fig. 32).

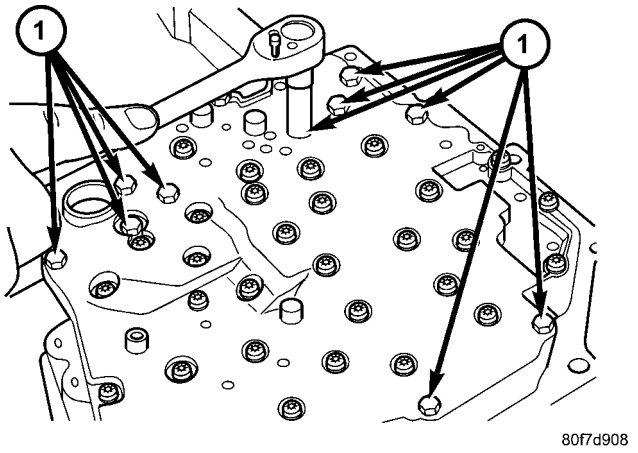

Fig. 32 Remove Valve Body Bolts

1 - BOLTS

CAUTION: Do not handle the valve body by the manual shaft. Damage could result.

(16) Remove valve body from transmission (Fig. 33).

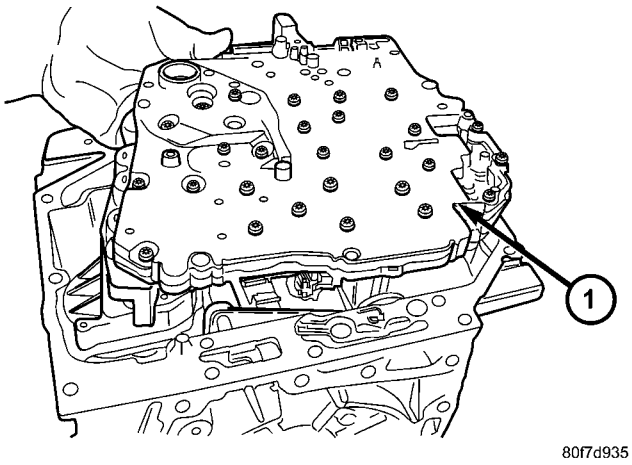

Fig. 33 Remove Valve Body From Transmission

1 - VALVE BODY

(17) Remove underdrive and overdrive accumulators (Fig. 34).

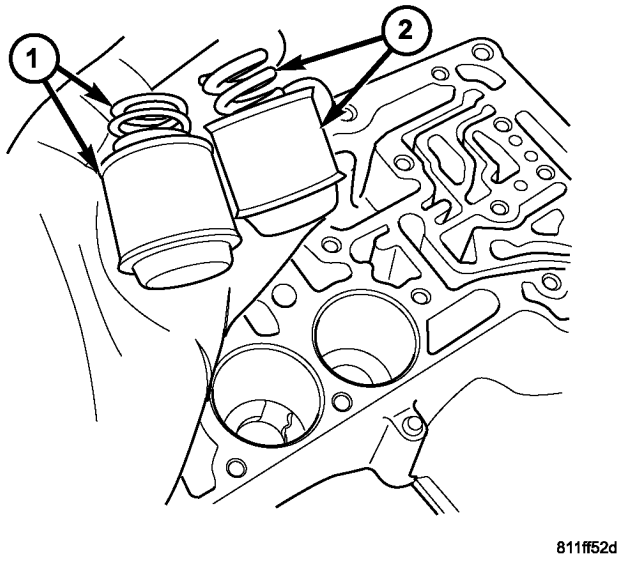

Fig. 34 Underdrive and Overdrive Accumulators

1 - OVERDRIVE PISTON AND SPRING
2 - UNDERDRIVE PISTON AND SPRING