AUTOMATIC TRANSMISSION - 42RLE (Continued)

(21) Remove and discard the oil pump-to-case bolts (Fig. 39). The oil pump bolts are not to be reused.

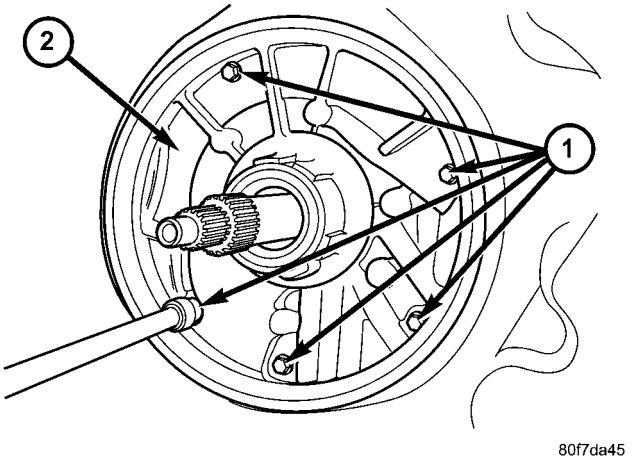


Fig. 39 Remove Oil Pump Attaching Bolts

1 - BOLTS
2 - OIL PUMP

(22) Remove oil pump using C-3752 Pullers (Fig. 40).

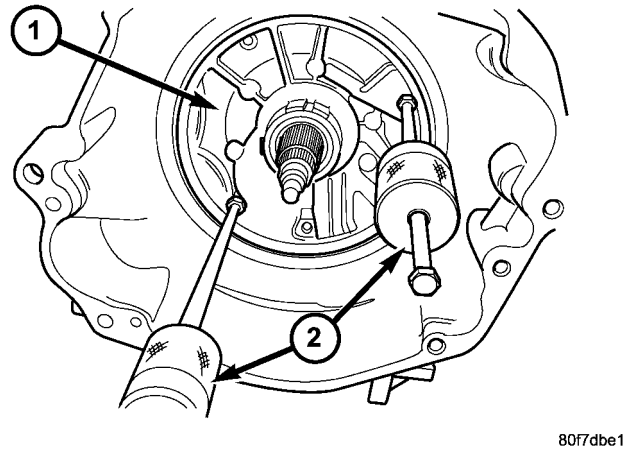


Fig. 40 Oil Pump Pullers

1 - OIL PUMP
2 - PULLERS

(23) Remove oil pump while pushing in on input shaft (Fig. 41).

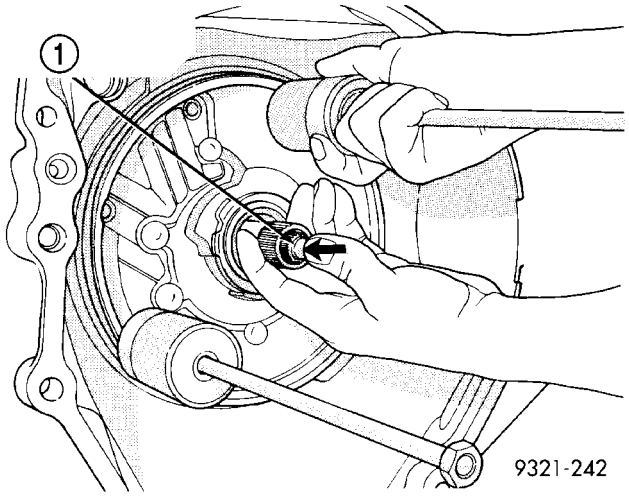


Fig. 41 Remove Oil Pump

1 - "PUSH IN" ON INPUT SHAFT WHILE REMOVING PUMP

(24) Remove oil pump gasket (Fig. 42).

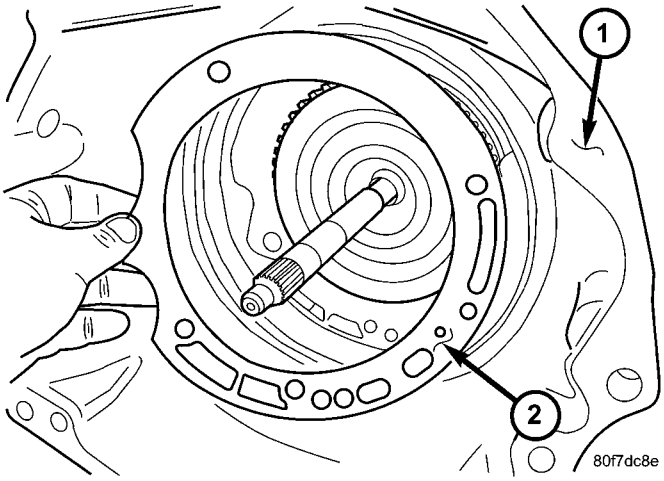


Fig. 42 Remove Oil Pump Gasket

1 - BELLHOUSING
2 - OIL PUMP GASKET

CAUTION: By-pass valve must be replaced if transmission failure occurs.