AUTOMATIC TRANSMISSION - 42RLE (Continued)

(25) Remove the cooler by-pass valve (Fig. 43).

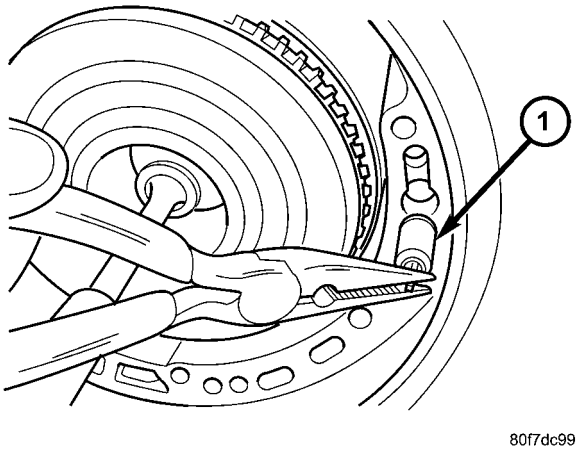


Fig. 43 Remove By-Pass Valve

1 - BYPASS VALVE

(26) Remove the #1 caged needle bearing (Fig. 44).

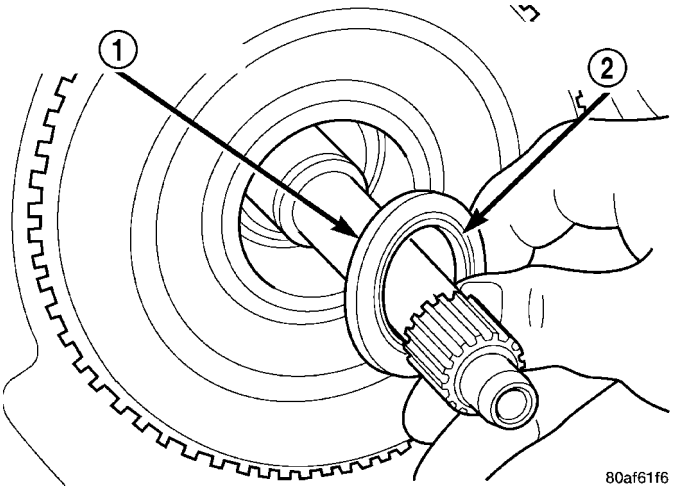


Fig. 44 Remove No. 1 Caged Needle Bearing

1 - #1 CAGED NEEDLE BEARING
2 - NOTE: TANGED SIDE OUT

(27) Remove the input clutch assembly (Fig. 45).

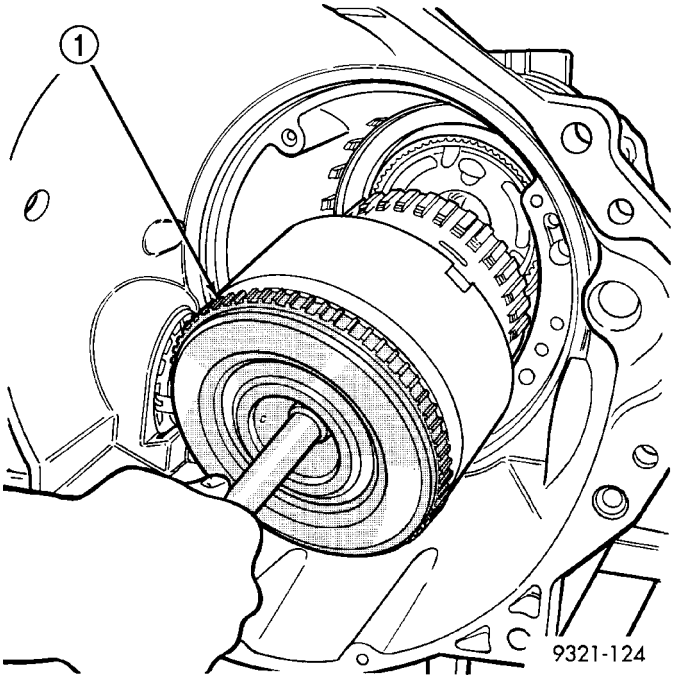


Fig. 45 Remove Input Clutch Assembly

1 - INPUT CLUTCH ASSEMBLY

(28) Remove the #4 thrust plate (Fig. 46).

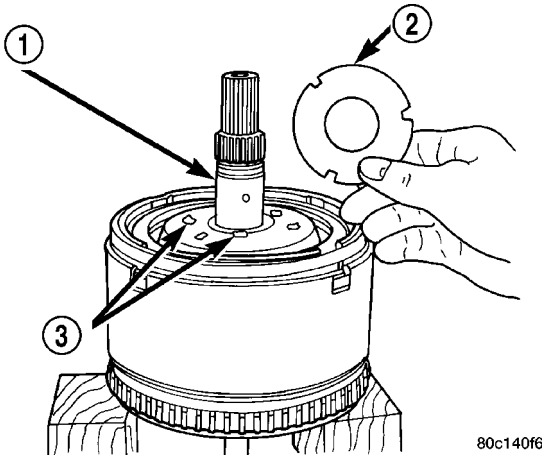


Fig. 46 Remove #4 Thrust Plate

1 - OVERDRIVE SHAFT ASSEMBLY
2 - #4 THRUST PLATE (SELECT)
3 - PETROLATUM FOR RETENTION