AUTOMATIC TRANSMISSION - 42RLE (Continued)

(29) Remove the front sun gear assembly and #4 thrust washer (if still in place) (Fig. 47).

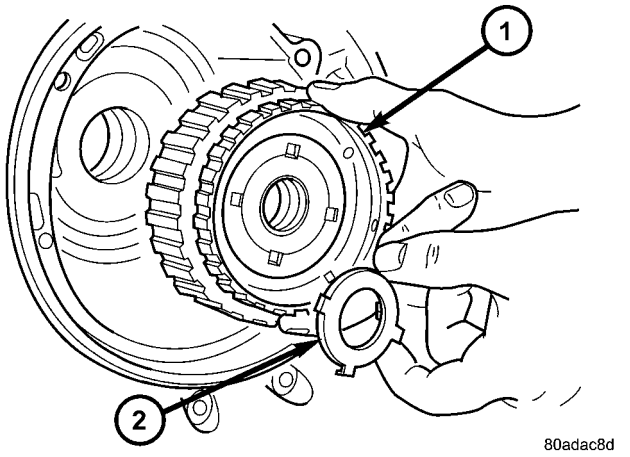

Fig. 47 Remove Front Sun Gear Assembly

1 - FRONT SUN GEAR ASSEMBLY
2 - #4 THRUST WASHER (FOUR TABS)

(30) Remove the front carrier/rear annulus and #6 needle bearing (Fig. 48).

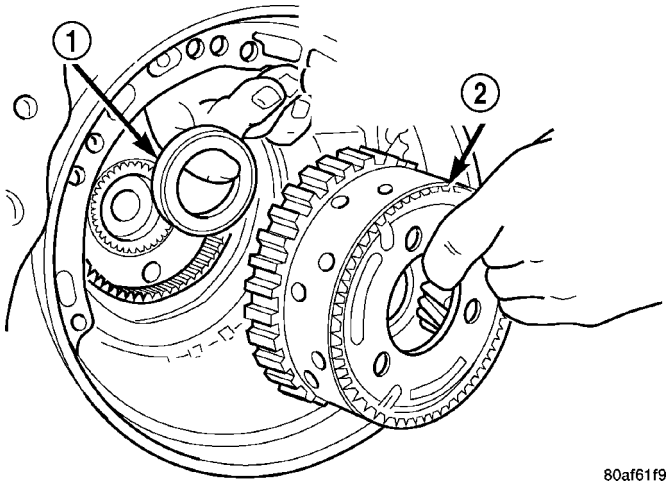

Fig. 48 Remove Front Carrier/Rear Annulus

1 - #6 NEEDLE BEARING
2 - FRONT CARRIER AND REAR ANNULUS ASSEMBLY (TWIST AND PULL OR PUSH TO REMOVE OR INSTALL).

(31) Remove the rear sun gear and #7 needle bearing (Fig. 49) and (Fig. 50).

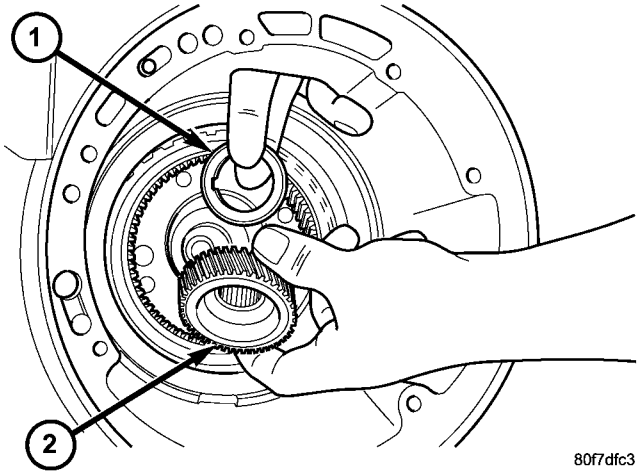

Fig. 49 Remove Rear Sun Gear

1 - #7 NEEDLE BEARING
2 - REAR SUN GEAR

NOTE: The number seven needle bearing has three antireversal tabs and is common with the number five and number two position. The orientation should allow the bearing to seat flat against the rear sun gear (Fig. 50).

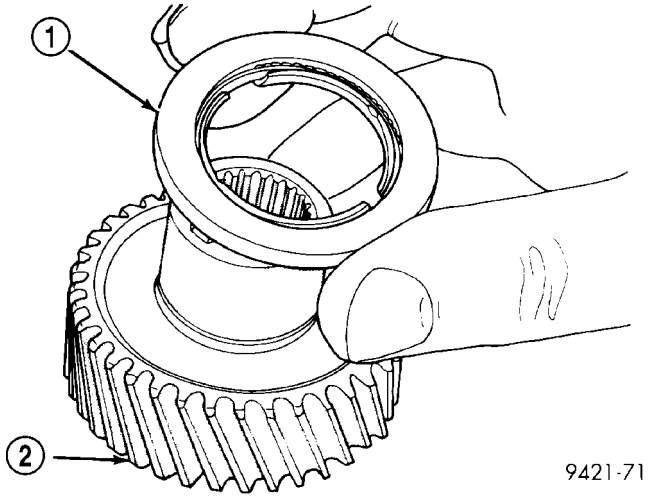

Fig. 50 Number 7 Bearing

1 - #7 BEARING
2 - REAR SUN GEAR