AUTOMATIC TRANSMISSION - 42RLE (Continued)

NOTE: Verify that Tool 5058A is centered properly over the 2/4 clutch retainer before compressing. If necessary, fasten the 5058A bar to the bellhousing flange with any combination of locking pliers and bolts to center the tool properly.

(32) Install and load Tool 5058A to remove the 2/4 clutch retainer snap ring (Fig. 51).

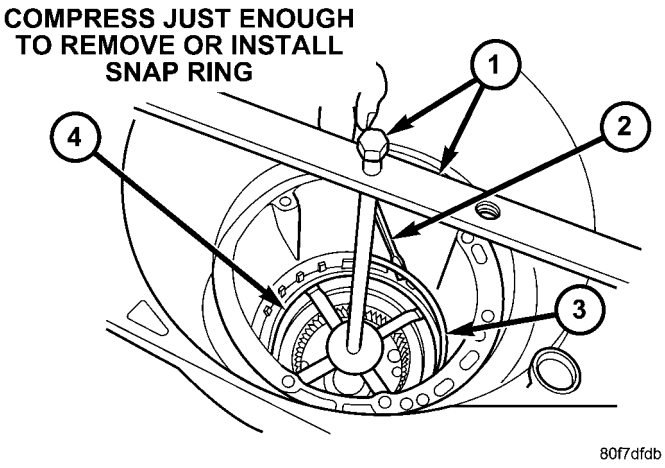


Fig. 51 Remove 2/4 Clutch Retainer Snap Ring

1 - TOOL 5058
2 - SCREWDRIVER
3 - SNAP RING
4 - 2/4 CLUTCH RETAINER

NOTE: The 2/4 Clutch Piston has bonded seals which are not individually serviceable. Seal replacement requires replacement of the piston assembly.

(33) Remove the 2/4 clutch retainer (Fig. 52) and (Fig. 53).

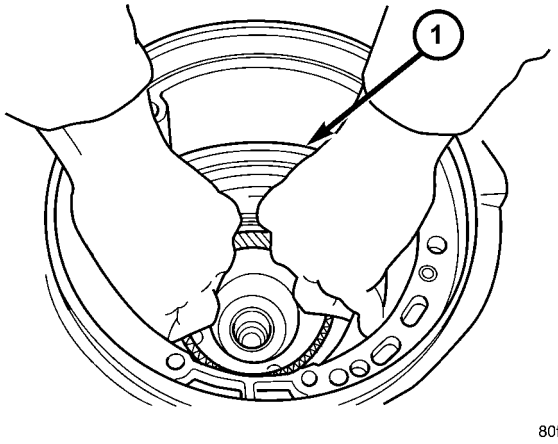


Fig. 52 Remove 2/4 Clutch Retainer

1 - 2/4 CLUTCH RETAINER

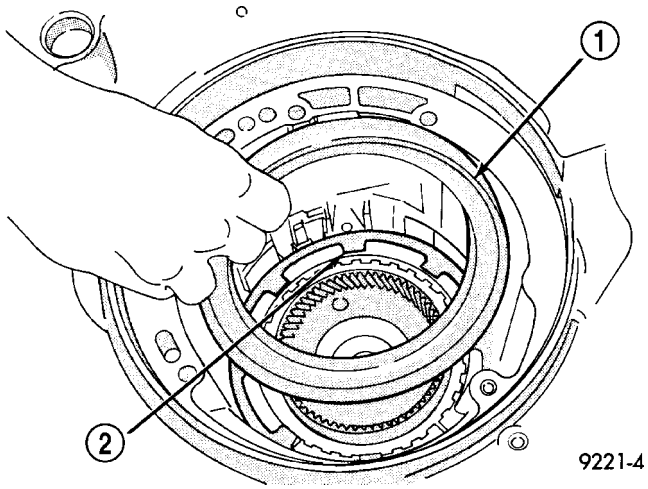


Fig. 53 2/4 Clutch Retainer

1 - 2/4 CLUTCH RETAINER
2 - 2/4 CLUTCH RETURN SPRING

(34) Remove the 2/4 clutch return spring (Fig. 54).

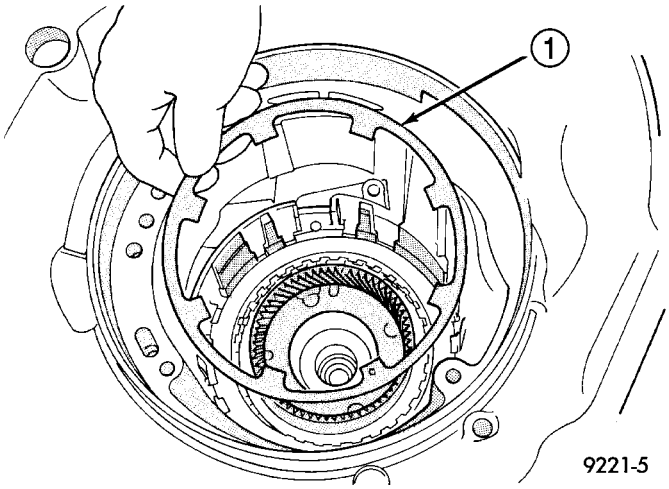


Fig. 54 Remove 2/4 Clutch Return Spring

1 - 2/4 CLUTCH RETURN SPRING