AUTOMATIC TRANSMISSION - 42RLE (Continued)

(48) Remove the low/reverse belleville spring snap ring (Fig. 71).

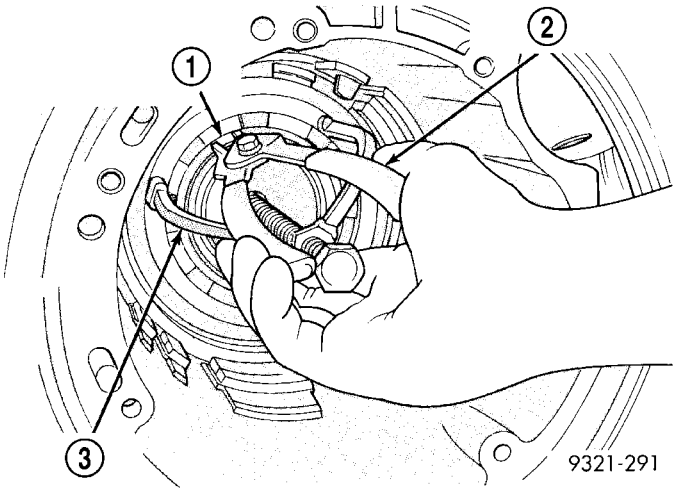

Fig. 71 Remove Snap Ring

1 - SNAP RING OPENING MUST BE BETWEEN SPRING LEVERS (AS SHOWN)
2 - SNAP RING PLIERS
3 - SPECIAL TOOL 5059A

(49) Remove the low/reverse piston belleville spring (Fig. 72).

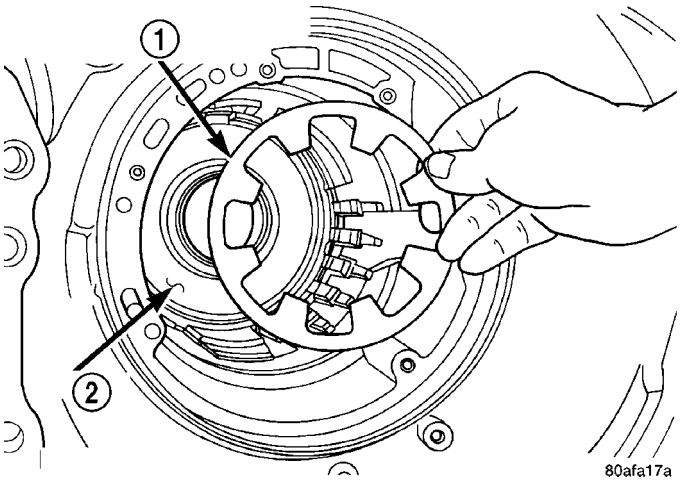

Fig. 72 Low/Reverse Piston Belleville Spring

1 - LOW/REVERSE PISTON RETURN SPRING
2 - PISTON

(50) Remove the park sprag pivot retaining screw.

(51) Drive out the anchor shaft using suitable punch (Fig. 73).

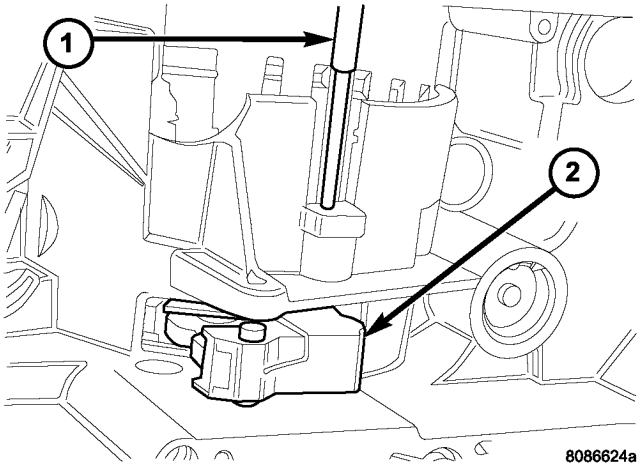

Fig. 73 Anchor Shaft Removal

1 - PIN PUNCH
2 - GUIDE BRACKET ASSEMBLY

(52) Remove the guide bracket pivot shaft (Fig. 74). Inspect all components (Fig. 75) for wear and replace if necessary.

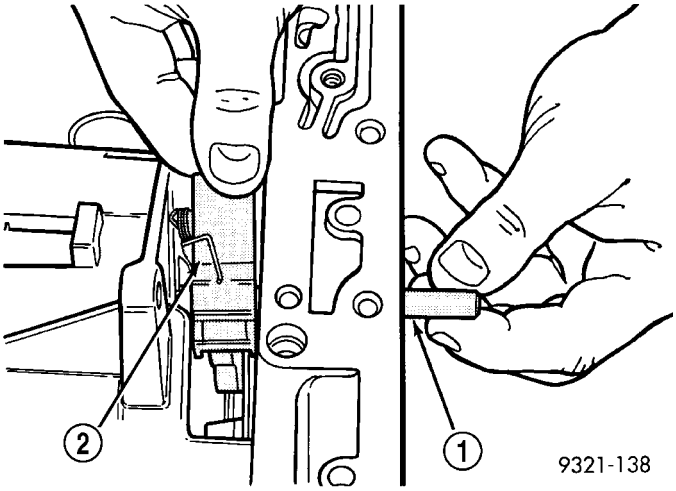

Fig. 74 Remove Guide Bracket Pivot Shaft

1 - PIVOT PIN
2 - GUIDE BRACKET ASSEMBLY