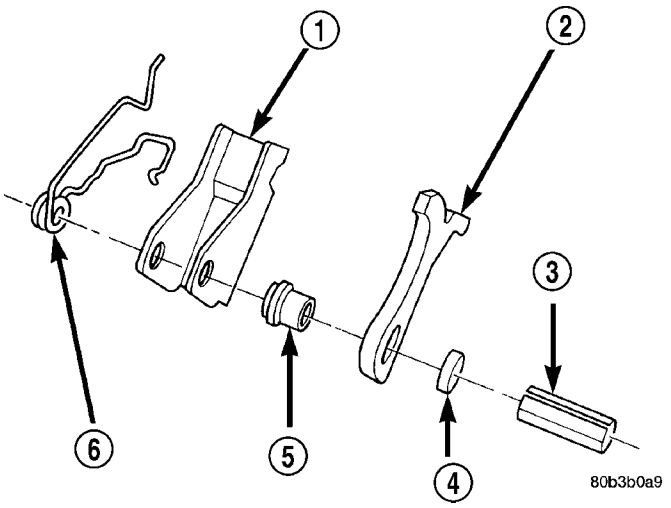

Fig. 75 Guide Bracket Disassembled

1 - GUIDE BRACKET
2 - PAWL
3 - SPLIT SLEEVE
4 - SPACER
5 - STEPPED SPACER
6 - ANTIRATCHET SPRING

NOTE: The Low/Reverse Clutch Piston has bonded seals which are not individually serviceable. Seal replacement requires replacement of the piston assembly.

(53) Remove the low/reverse clutch piston (Fig. 76).

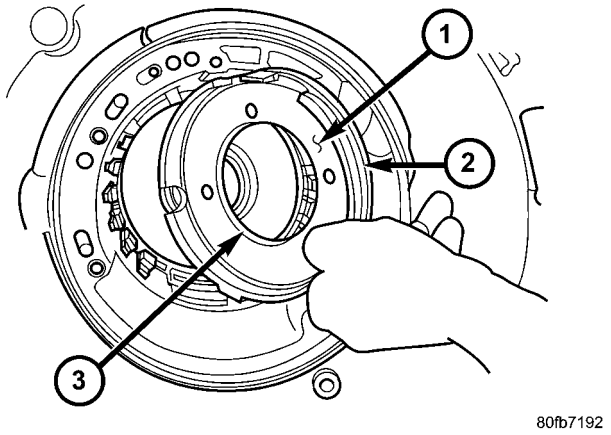

Fig. 76 Remove Low/Reverse Clutch Piston

1 - LOW/REVERSE CLUTCH PISTON
2 - BONDED SEAL
3 - BONDED SEAL

(54) Remove the low/reverse piston retainer screws.

(55) Remove low/reverse piston retainer (Fig. 77).

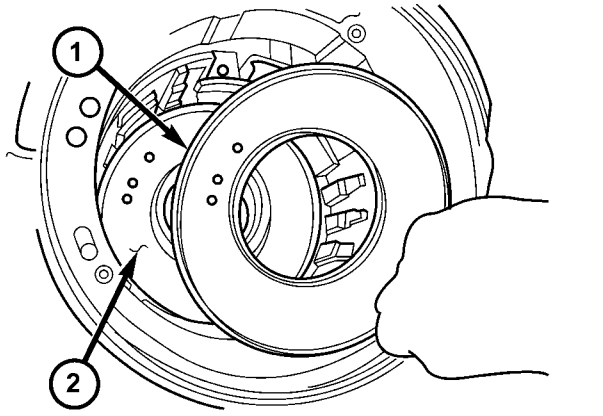

Fig. 77 Remove Piston Retainer

1 - LOW/REVERSE CLUTCH PISTON RETAINER
2 - GASKET

(56) Remove the low/reverse piston retainer gasket (Fig. 78).

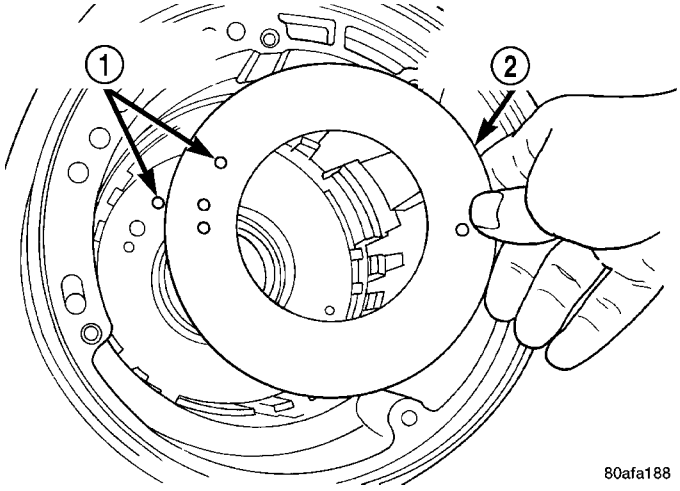

Fig. 78 Remove Piston Retainer Gasket

1 - GASKET HOLES MUST LINE UP
2 - LOW/REVERSE CLUTCH PISTON RETAINER GASKET