AUTOMATIC TRANSMISSION - 42RLE (Continued)

ASSEMBLY

NOTE: If the transmission assembly is being reconditioned (clutch/seal replacement) or replaced, it is necessary to perform the Quick Learn Procedure using the DRBIII® Scan Tool (Refer to 8 - ELECTRICAL/ELECTRONIC CONTROL MODULES/TRANSMISSION CONTROL MODULE - STANDARD PROCEDURE).

(1) Install the output bearing cups using Special Tool - 5050A (Fig. 79).

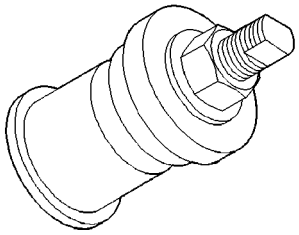

Fig. 79 Bearing Cup Installation Special Tool - 5050A

(2) Install low/reverse piston retainer gasket (Fig. 80).

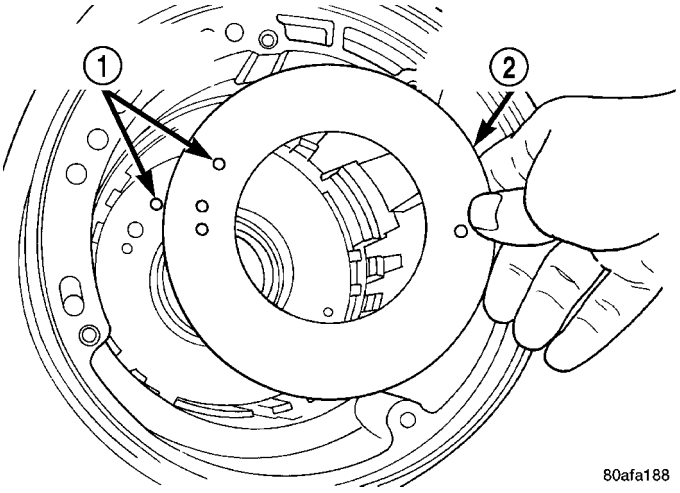

Fig. 80 Install Piston Retainer Gasket

1 - GASKET HOLES MUST LINE UP
2 - LOW/REVERSE CLUTCH PISTON RETAINER GASKET

(3) Install low/reverse piston retainer (Fig. 81).

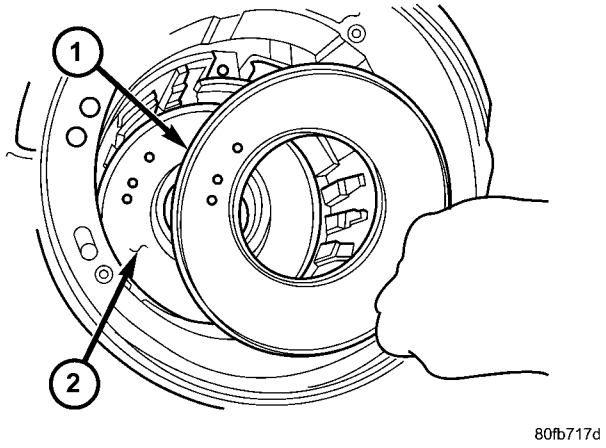

Fig. 81 Install Piston Retainer

1 - LOW/REVERSE CLUTCH PISTON RETAINER
2 - GASKET

(4) Install low/reverse piston retainer-to-case screws (Fig. 82) and torque to 5 N·m (45 in. lbs.).

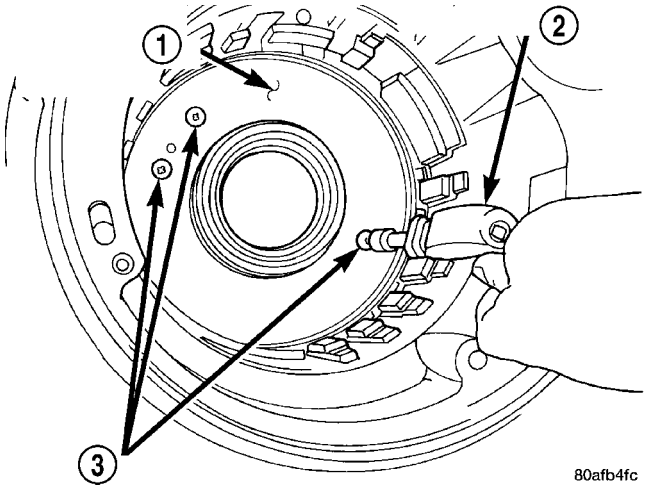

Fig. 82 Install Retainer Attaching Screws

1 - LOW/REVERSE CLUTCH PISTON RETAINER
2 - SCREWDRIVER
3 - TORX-LOC SCREWS