AUTOMATIC TRANSMISSION - 42RLE (Continued)

NOTE: The Low/Reverse Clutch Piston has bonded seals which are not individually serviceable. Seal replacement requires replacement of the piston assembly.

(5) Install low/reverse clutch piston (Fig. 83).

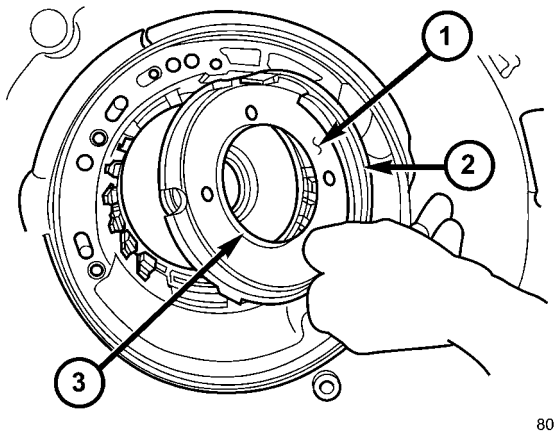

Fig. 83 Install Low/Reverse Clutch Piston

1 - LOW/REVERSE CLUTCH PISTON
2 - BONDED SEAL
3 - BONDED SEAL

(6) Assemble guide bracket assembly as shown in (Fig. 84) (Fig. 85).

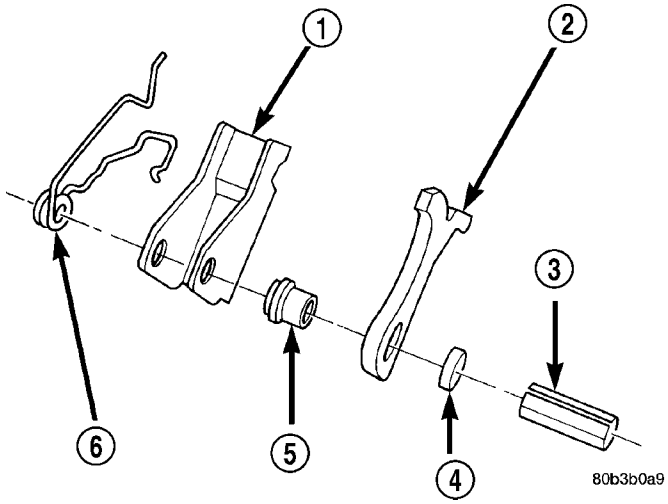

Fig. 84 Guide Bracket Assembly

1 - GUIDE BRACKET
2 - PAWL
3 - SPLIT SLEEVE
4 - SPACER
5 - STEPPED SPACER
6 - ANTIRATCHET SPRING

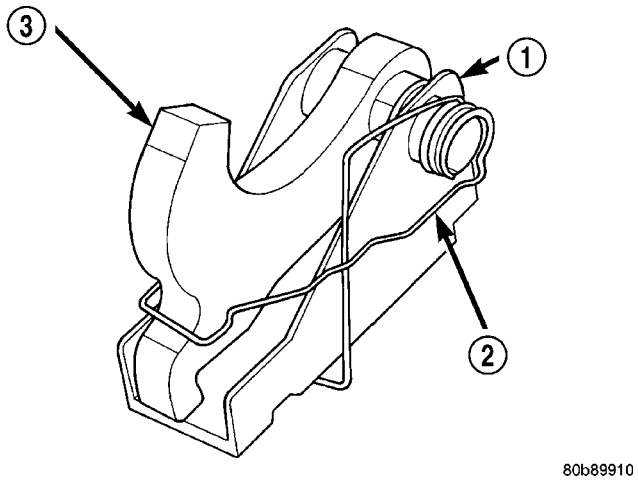

Fig. 85 Guide Bracket

1 - GUIDE BRACKET
2 - ANTIRATCHET SPRING (MUST BE ASSEMBLED AS SHOWN)
3 - PAWL

(7) Install guide bracket pivot shaft (Fig. 86).

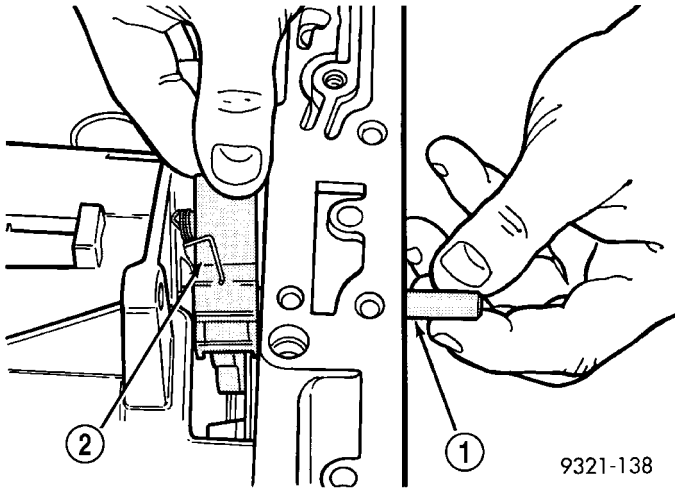

Fig. 86 Install Guide Bracket Pivot Pin

1 - PIVOT PIN
2 - GUIDE BRACKET ASSEMBLY

CAUTION: When installing, be sure guide bracket and split sleeve touch the rear of the transmission case.

(8) Install park sprag pivot retaining screw and torque to 4.5 N·m (40 in. lbs.).