AUTOMATIC TRANSMISSION - 42RLE (Continued)

(9) Install low/reverse piston belleville spring into position (Fig. 87).

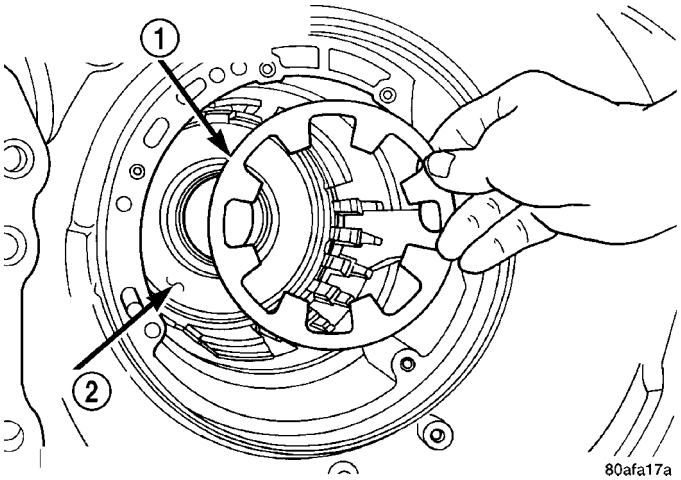


Fig. 87 Install Low/Reverse Piston Return Spring

1 - LOW/REVERSE PISTON RETURN SPRING
2 - PISTON

(10) Install and load low/reverse spring compressor tool as shown in (Fig. 88) (Fig. 89) to facilitate snap ring installation.

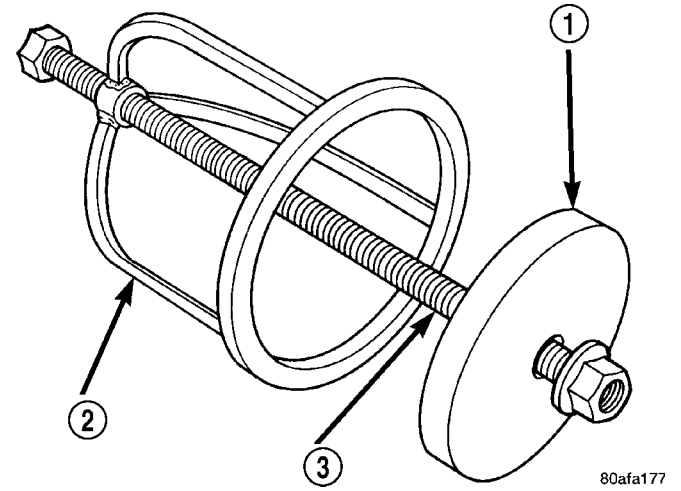


Fig. 88 Low/Reverse Spring Compressor Tool

1 - TOOL 6057
2 - TOOL 5059
3 - TOOL 5058-3

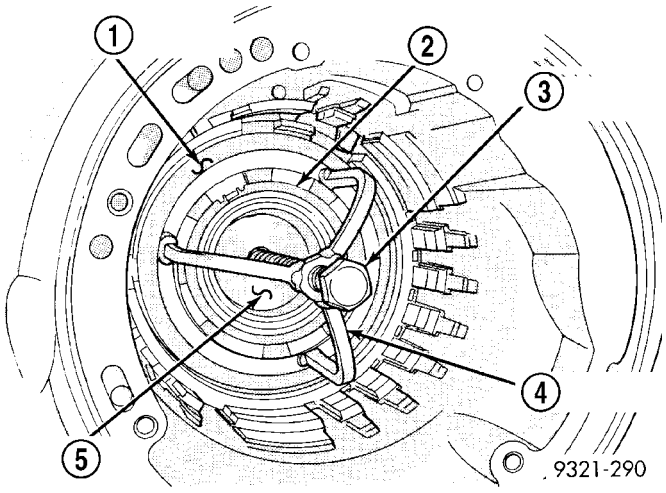


Fig. 89 Compressor Tool in Use

1 - LOW/REVERSE CLUTCH RETURN SPRING
2 - SNAP RING (INSTALL AS SHOWN)
3 - TOOL 5058A-3
4 - TOOL 5059A
5 - SPECIAL TOOL 6057

(11) Install snap ring and remove compressor tool (Fig. 90).

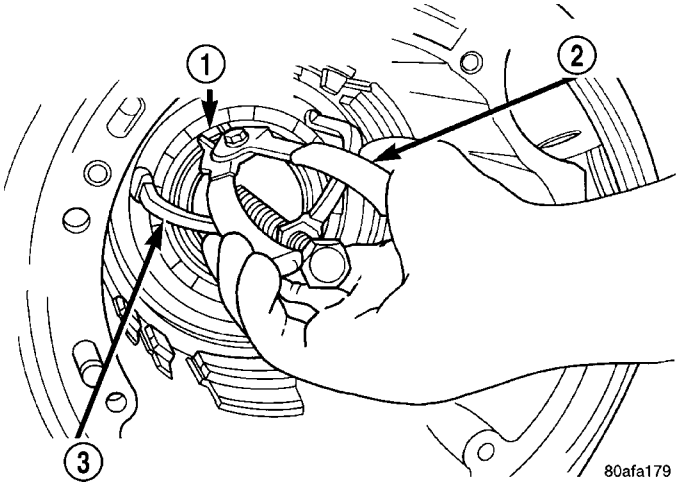


Fig. 90 Install Snap Ring

1 - SNAP RING OPENING MUST BE BETWEEN SPRING LEVERS (AS SHOWN)
2 - SNAP RING PLIERS
3 - TOOL 6057