AUTOMATIC TRANSMISSION - 42RLE (Continued)

(12) Install rear carrier front bearing cone (Fig. 91).

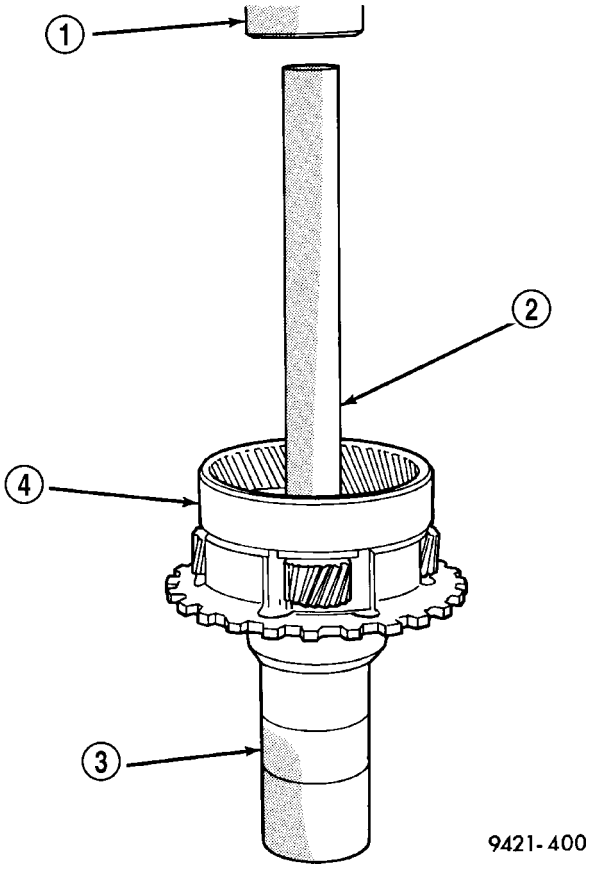

Fig. 91 Install Rear Carrier Front Bearing Cone

1 - ARBOR PRESS
2 - SPECIAL TOOL C-4171
3 - SPECIAL TOOL 6052
4 - REAR CARRIER

(13) Check output bearing preload. **Output bearing preload must be checked and/or adjusted if any of the following items have been replaced:**

- Output shaft (rear carrier assembly)
- Output shaft bearings
- Transmission case

(a) **PRELOAD CHECK/SHIM SELECTION:** Install rear output shaft bearing cone and special tool 6618A (Fig. 92).

(b) Install special tool 6618A (Fig. 93). Lightly tighten retaining screws. Screws should be below the plate surface, but do not snug screws.

(c) Turn case over on arbor press so that the plate is resting on the press base. **CAUTION: The output shaft will extend through the hole of tool 6618A. Ensure your press table has clearance for the output shaft.**

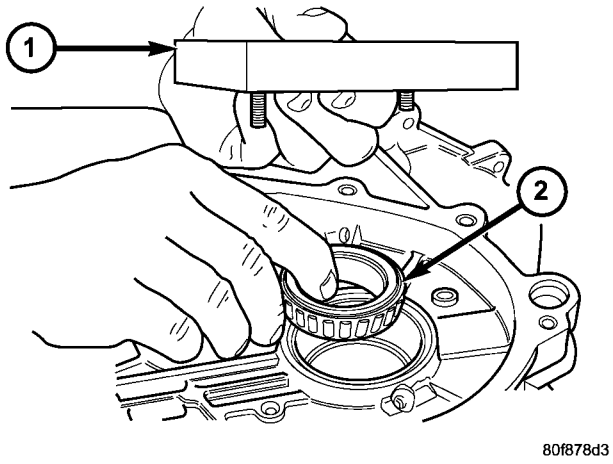

Fig. 92 Bearing Installation

1 - SPECIAL TOOL 6618-A
2 - REAR OUTPUT SHAFT BEARING

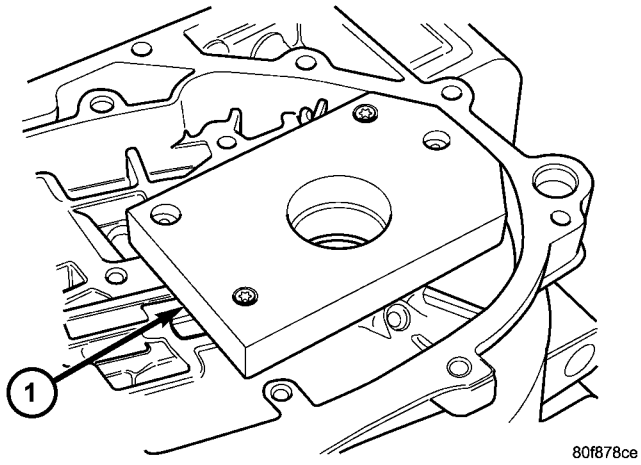

Fig. 93 Special Tool Installed

1 - SPECIAL TOOL 6618-A