AUTOMATIC TRANSMISSION - 42RLE (Continued)

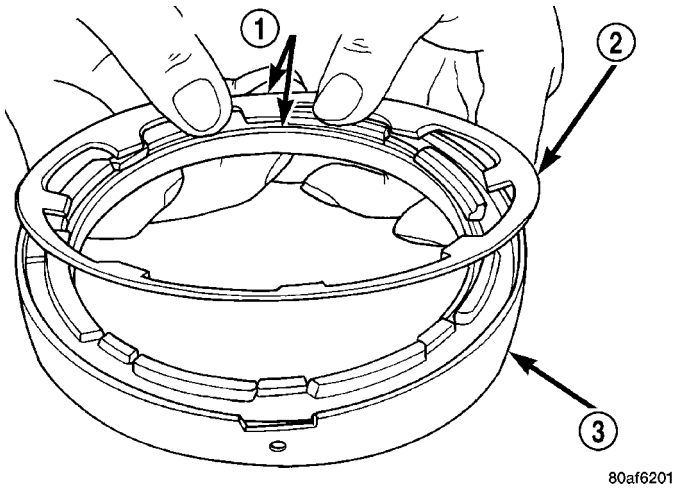

Fig. 108 Proper Orientation of 2/4 Clutch

1 - NOTE POSITION
2 - RETURN SPRING
3 - 2/4 CLUTCH RETAINER

(23) Install 2/4 clutch retainer (Fig. 109).

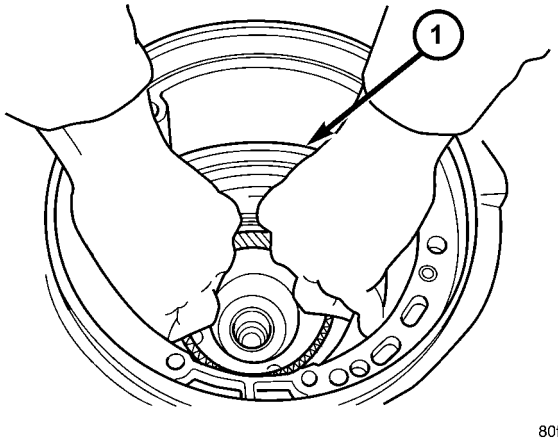

Fig. 109 Install 2/4 Clutch Retainer

1 - 2/4 CLUTCH RETAINER

NOTE: Verify that Tool 5058A is centered properly over the 2/4 clutch retainer before compressing. If necessary, fasten the 5058A bar to the bellhousing flange with any combination of locking pliers and bolts to center the tool properly.

(24) Set up Tool 5058 as shown in (Fig. 110). Compress 2/4 clutch just enough to facilitate snap ring installation.

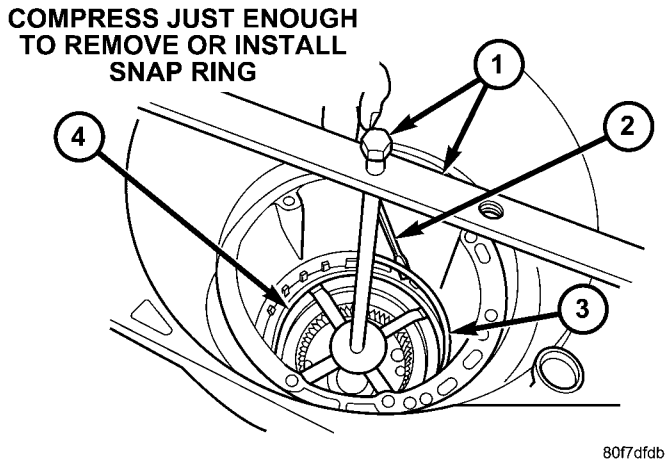

Fig. 110 Remove 2/4 Clutch Retainer Snap Ring

1 - TOOL 5058
2 - SCREWDRIVER
3 - SNAP RING
4 - 2/4 CLUTCH RETAINER

(25) **Measure 2/4 clutch clearance:** Set up dial indicator as shown in (Fig. 111). Press down clutch pack with finger and zero dial indicator. Record measurement in four (4) places and take average reading. **The 2/4 clutch pack clearance is 0.76 to 2.64 mm (0.030 to 0.104 inch).** If not within specifications, the clutch is not assembled properly or is excessively worn. **There is no adjustment for the 2/4 clutch clearance.**

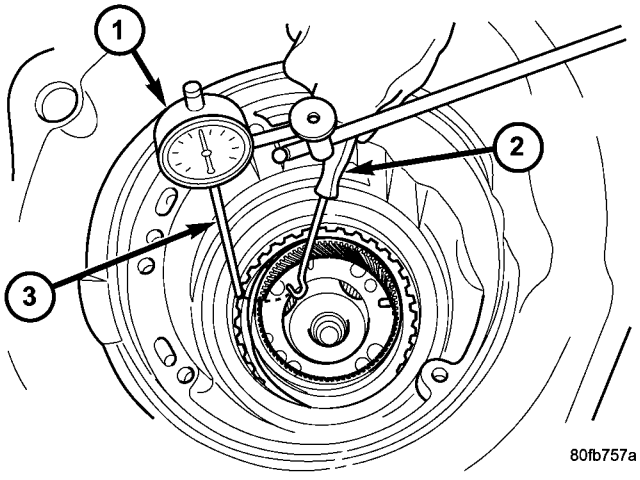

Fig. 111 Check 2/4 Clutch Clearance

1 - DIAL INDICATOR
2 - HOOK TOOL
3 - DIAL INDICATOR TIP TOOL 6268