(26) Install the #7 needle bearing to the rear sun gear (Fig. 112). **The number 7 needle bearing has three antireversal tabs and is common with the number 5 and number 2 position. The orientation should allow the bearing to seat flat against the rear sun gear. A small amount of petrolatum can be used to hold the bearing to the rear sun gear.**

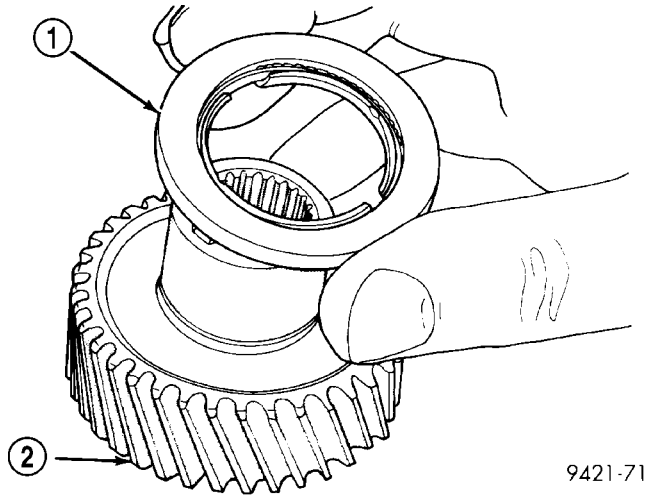


***Fig. 112 Number 7 Bearing***

1 - #7 BEARING
2 - REAR SUN GEAR

(27) Install rear sun gear and #7 needle bearing (Fig. 113).

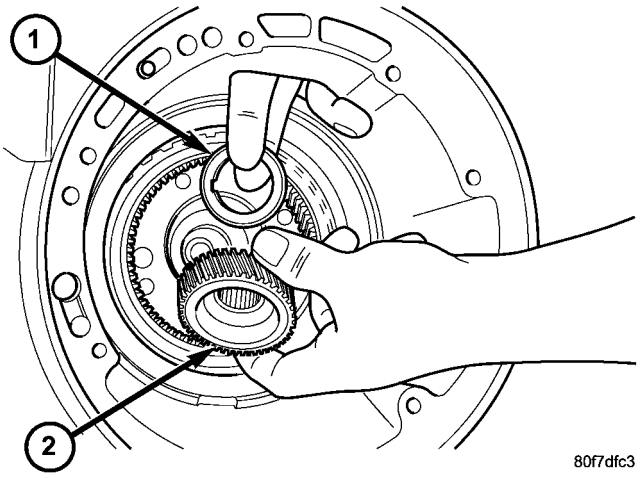


***Fig. 113 Install Rear Sun Gear***

1 - #7 NEEDLE BEARING
2 - REAR SUN GEAR

(28) Install front carrier/rear annulus assembly and #6 needle bearing (Fig. 114).

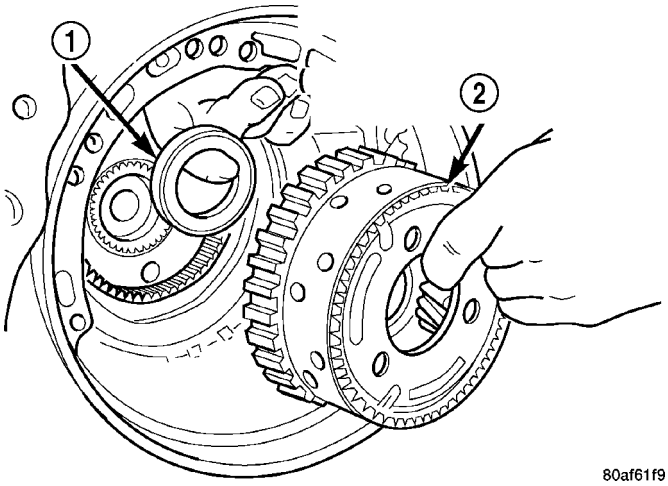


***Fig. 114 Install Front Carrier/Rear Annulus***

1 - #6 NEEDLE BEARING
2 - FRONT CARRIER AND REAR ANNULUS ASSEMBLY (TWIST AND PULL OR PUSH TO REMOVE OR INSTALL).

(29) Install front sun gear assembly and #4 thrust washer (Fig. 115).

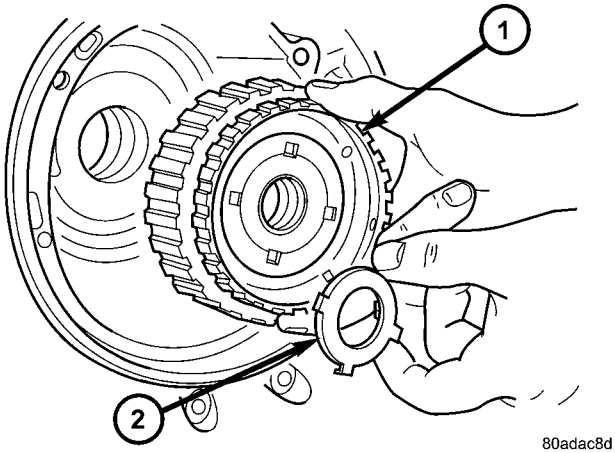


***Fig. 115 Install Front Sun Gear Assembly***

1 - FRONT SUN GEAR ASSEMBLY
2 - #4 THRUST WASHER (FOUR TABS)