AUTOMATIC TRANSMISSION - 42RLE (Continued)

(23) Connect wires to the transmission range sensor (Fig. 142) and the solenoid/pressure switch assembly (Fig. 143).

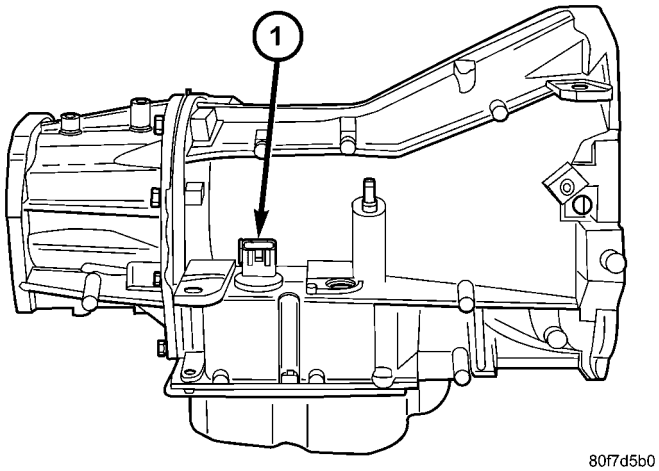

Fig. 143 Solenoid/Pressure Switch Assembly

1 - SOLENOID/PRESSURE SWITCH ASSEMBLY CONNECTOR

(24) Install converter housing access cover.

(25) Install exhaust pipes and support brackets, if removed.

(26) Install starter motor (Refer to 8 - ELECTRICAL/STARTING/STARTER MOTOR - INSTALLATION) and cooler line bracket.

(27) Install new plastic retainer grommet on any shift linkage rod or lever that was disconnected. Grommets should not be reused. Use pry tool to remove rod from grommet and cut away old grommet. Use pliers to snap new grommet into lever and to snap rod into grommet at assembly.

(28) Connect gearshift cable.

(29) Connect transfer case shift linkage.

(30) Adjust gearshift linkage, if necessary.

(31) Align and connect propeller shaft(s). (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - INSTALLATION)

(32) Fill transfer case to bottom edge of fill plug hole.

(33) Lower vehicle and connect battery negative cable.

(34) Fill transmission to correct level with Mopar® ATF +4.