BRAKE TRANSMISSION SHIFT INTERLOCK MECHANISM (Continued)

OPERATION

The system locks the shifter into the PARK position. The Interlock system is engaged whenever the ignition switch is in the LOCK or ACCESSORY position. An additional electrically activated feature will prevent shifting out of the PARK position unless the brake pedal is depressed at least one-half an inch. A magnetic holding device in line with the park/brake interlock cable is energized when the ignition is in the RUN position. When the key is in the RUN position and the brake pedal is depressed, the shifter is unlocked and will move into any position. The interlock system also prevents the ignition switch from being turned to the LOCK or ACCESSORY position (Fig. 148) unless the shifter is fully locked into the PARK position.

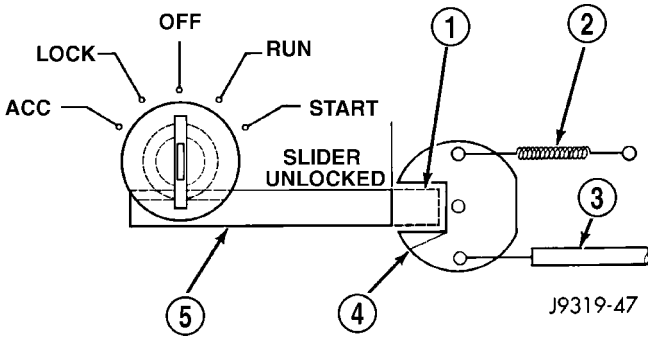

Fig. 148 Ignition Key Cylinder Actuation

1 - SLIDER LOCKED
2 - CAM RETURN SPRING
3 - INTERLOCK CABLE
4 - CAM
5 - SLIDER

REMOVAL

(1) Remove lower steering column cover. (Refer to 23 - BODY/INSTRUMENT PANEL/STEERING COLUMN OPENING COVER - REMOVAL)

(2) Remove lower steering column shroud.

(3) Remove tie strap near the solenoid retaining the brake transmission interlock cable to the steering column.

(4) Disengage wire connector from solenoid.

(5) With the ignition removed or in the unlocked position, disengage lock tab holding cable end to steering column (Fig. 149).

(6) Pull cable end from steering column.

(7) Remove the floor console and related trim. (Refer to 23 - BODY/INTERIOR/FLOOR CONSOLE - REMOVAL)

(8) Disconnect the cable from the bellcrank (Fig. 150).

(9) Disconnect and remove the cable from the shift bracket.

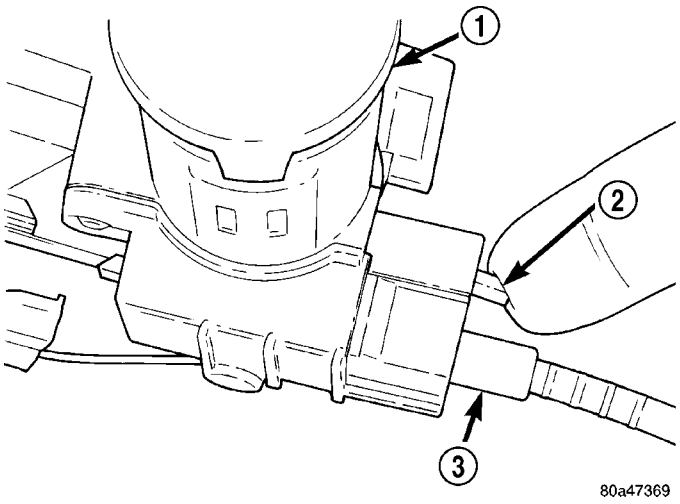

Fig. 149 Brake/Park Interlock Cable

1 - IGNITION LOCK
2 - LOCK TAB
3 - CABLE END

INSTALLATION

(1) Route replacement cable behind instrument panel and under floor console area to shift mechanism.

(2) Insert cable end into opening in steering column hub under ignition lock. Push cable inward until lock tab engages.

(3) Insert the cable end into the shifter bellcrank.

(4) Place gear selector in PARK.

(5) Push the spring-loaded cable adjuster forward and snap cable into bracket.

(6) Adjust the brake transmission shifter interlock cable.

(7) Verify that the cable adjuster lock clamp is pushed downward to the locked position.

(8) Test the park-lock cable operation.

(9) Install the floor console and related trim.

(10) Install tie strap to hold cable to base of steering column.

(11) Install lower steering column shroud and ignition lock.

(12) Install lower steering column cover.

ADJUSTMENTS

ADJUSTMENT - BRAKE TRANSMISSION SHIFT INTERLOCK CABLE

(1) Shift transmission into PARK.

(2) Remove shift lever bezel and console screws. Raise bezel and console for access to cable.

(3) Pull cable lock button up to release cable.

(4) Turn ignition switch to LOCK position.

(5) Use a spacer to create a one millimeter gap between the shifter pawl and top of the shift gate.