FLUID AND FILTER (Continued)

other foreign material on the cap and tube could fall into the tube if not removed beforehand. Take the time to wipe the cap and tube clean before withdrawing the dipstick.

Engine coolant in the transmission fluid is generally caused by a cooler malfunction. The only remedy is to replace the radiator as the cooler in the radiator is not a serviceable part. If coolant has circulated through the transmission, an overhaul is necessary.

The torque converter should be replaced whenever a failure generates sludge and debris. This is necessary because normal converter flushing procedures will not remove all contaminants.

## STANDARD PROCEDURE

### STANDARD PROCEDURE - FLUID LEVEL CHECK

#### FLUID LEVEL CHECK

The transmission sump has a dipstick to check oil similar to most automatic transmissions. It is located on the left side of the engine. Be sure to wipe all dirt from dipstick handle before removing.

The torque converter fills in both the PARK and NEUTRAL positions. Place the selector lever in PARK to be sure that the fluid level check is accurate. **The engine should be running at idle speed for at least one minute, with the vehicle on level ground.** At normal operating temperature (approximately 82 C. or 180 F.), the fluid level is correct if it is in the HOT region (cross-hatched area) on the oil level indicator. The fluid level should be in COLD region at 70° F fluid temperature. Adjust fluid level as necessary. Use only Mopar® ATF+4, Automatic Transmission Fluid.

#### FLUID LEVEL CHECK USING DRB

**NOTE: Engine and Transmission should be at normal operating temperature before performing this procedure.**

(1) Start engine and apply parking brake.
(2) Connect DRBIII® scan tool and select transmission.
(3) Select sensors.
(4) Read the transmission temperature value.
(5) Compare the fluid temperature value with the chart.
(6) Adjust transmission fluid level shown on the dipstick according to the 42RLE Fluid Temperature Chart (Fig. 152). Use only Mopar® ATF+4, Automatic Transmission Fluid.
(7) Check transmission for leaks.

### STANDARD PROCEDURE - FLUID/FILTER SERVICE

**NOTE: Only fluids of the type labeled Mopar® ATF+4, Automatic Transmission Fluid, should be used in the transmission sump. A filter change should be made at the time of the transmission oil change. The magnet (on the inside of the oil pan) should also be cleaned with a clean, dry cloth.**

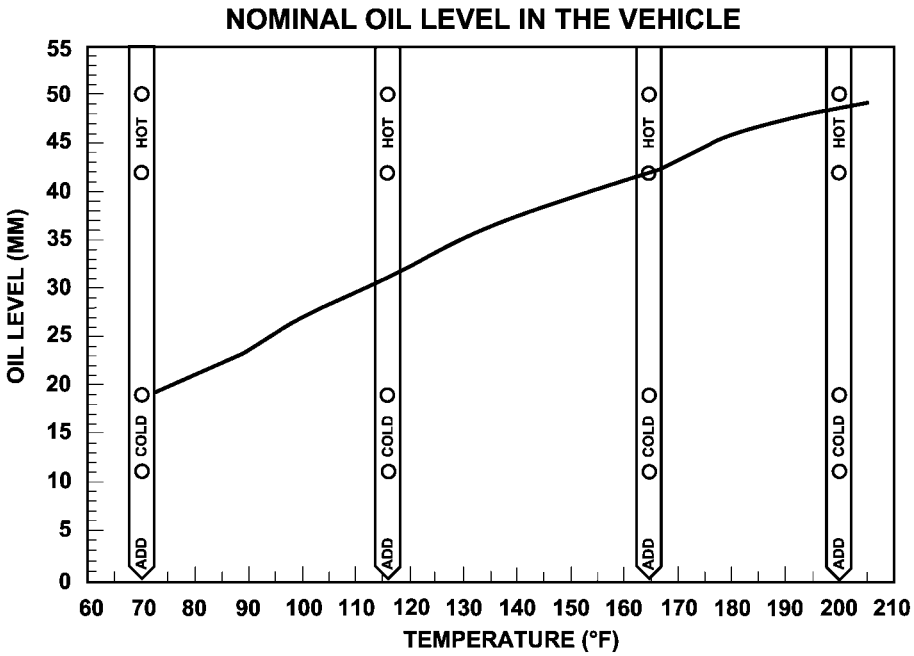


*Fig. 152 42RLE Fluid Temperature Chart*