INPUT CLUTCH ASSEMBLY (Continued)

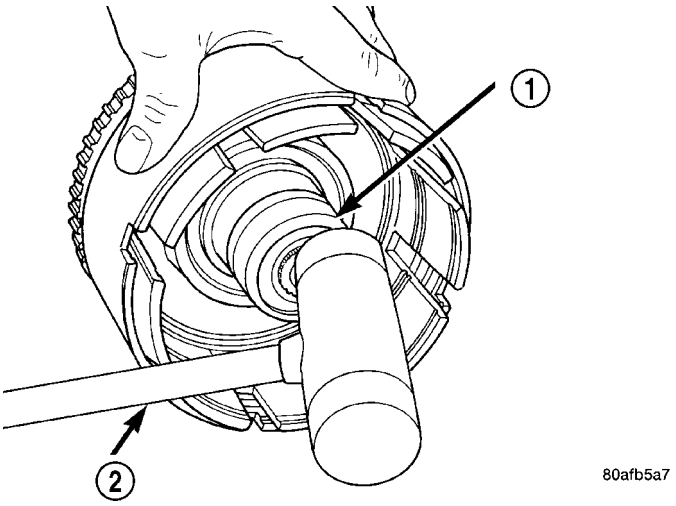

Fig. 178 Tap on Input Hub

1 - INPUT SHAFT AND HUB ASSEMBLY
2 - PLASTIC HAMMER

(24) Tap on input hub (1) with soft faced hammer (2) and separate input hub from OD/Reverse piston and clutch retainer (Fig. 178).

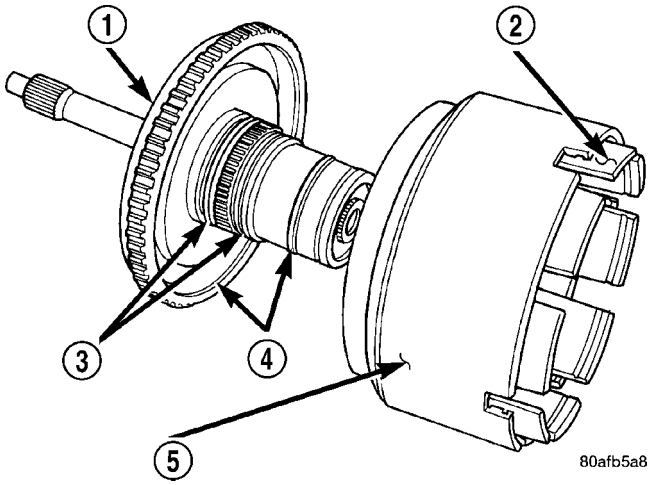

Fig. 179 Input Hub Removed

1 - INPUT SHAFT AND HUB ASSEMBLY
2 - INPUT CLUTCH RETAINER
3 - O-RING
4 - SEAL
5 - OVERDRIVE/REVERSE PISTON

(25) Separate the input hub from OD/Reverse piston (5) and clutch retainer (2) (Fig. 179).

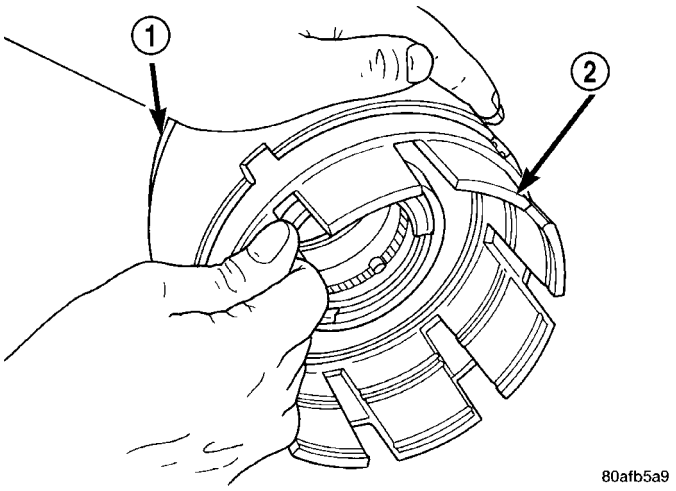

Fig. 180 Pull Retainer from Piston

1 - OVERDRIVE/REVERSE PISTON
2 - INPUT CLUTCH RETAINER

(26) Separate clutch retainer (2) from OD/Reverse piston (1) (Fig. 180).

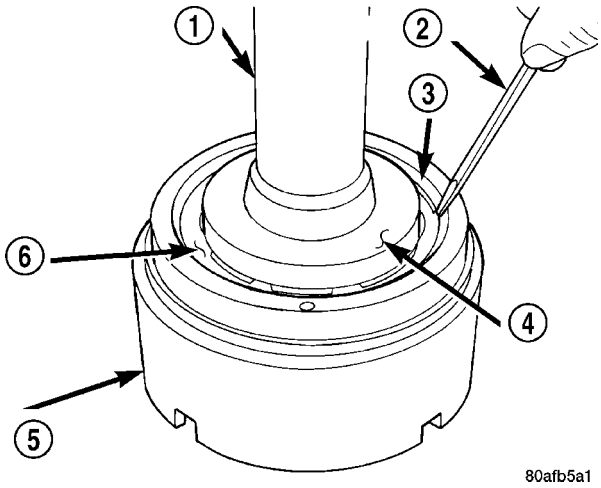

Fig. 181 Remove Snap Ring

1 - ARBOR PRESS RAM (COMPRESS RETURN SPRING JUST ENOUGH TO REMOVE OR INSTALL SNAP RING)
2 - SCREWDRIVER
3 - SNAP RING
4 - SPECIAL TOOL 6057
5 - OD/REVERSE PISTON
6 - RETURN SPRING

(27) Using Tool 6057 (4) and an arbor press(1), compress OD/Reverse piston (5) return spring just enough to remove snap ring (3) (Fig. 181).