INPUT CLUTCH ASSEMBLY (Continued)

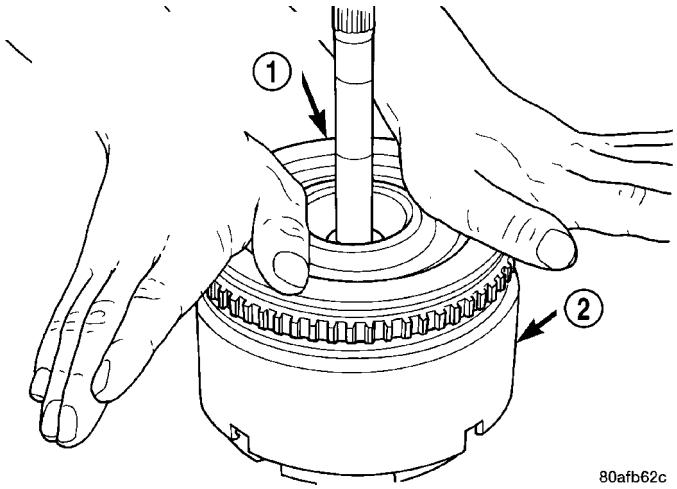

Fig. 190 Install Input Shaft Hub Assembly

1 - PUSH DOWN TO INSTALL INPUT SHAFT HUB ASSEMBLY (ROTATE TO ALIGN SPLINES)
2 - OD/REV. PISTON

(6) Install the input hub/shaft assembly (1) to the OD/Reverse piston/clutch retainer assembly (2) (Fig. 190).

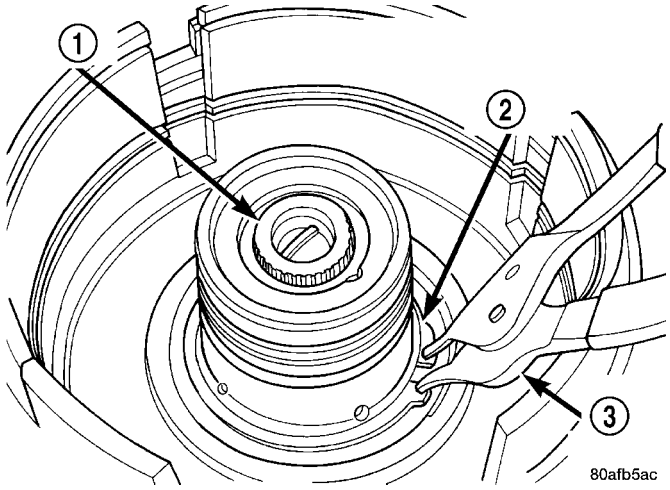

Fig. 191 Install Input Hub Tapered Snap Ring

1 - INPUT SHAFT
2 - INPUT HUB SNAP RING (TAPERED SIDE UP WITH TABS IN CAVITY)
3 - SNAP RING PLIERS

(7) Install input hub tapered snap ring (2) (Fig. 191). **Make sure snap ring is fully seated.**

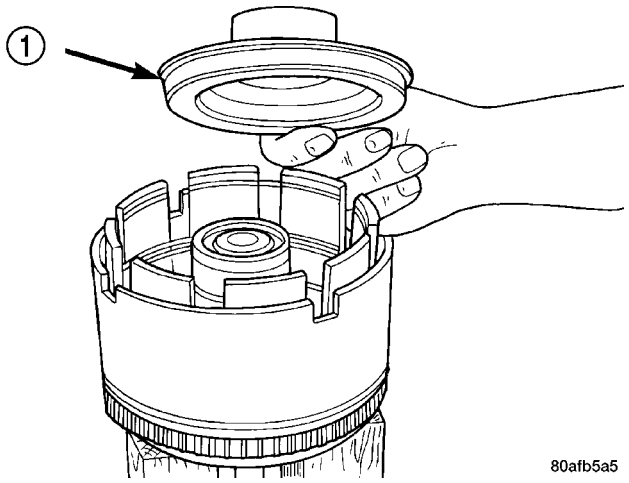

Fig. 192 Underdrive Clutch Piston

1 - PISTON

(8) Install the UD clutch piston (1) (Fig. 192).

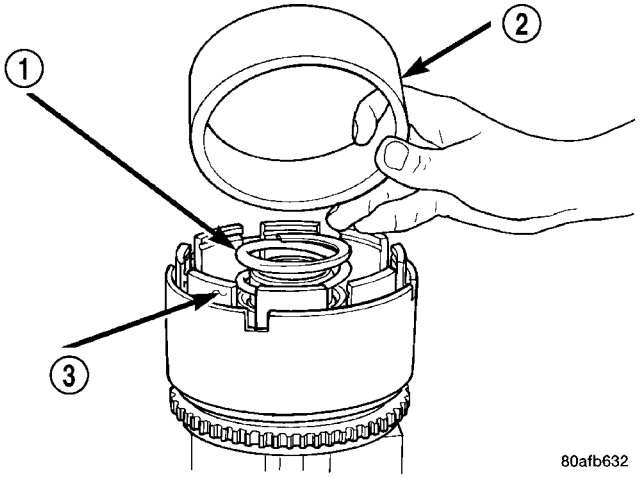

Fig. 193 Seal Compressor Special Tool 5067

1 - PISTON RETURN SPRING
2 - SPECIAL TOOL 5067
3 - INPUT CLUTCH RETAINER

(9) Install UD piston return spring (1)and Tool 5067 (2) (Fig. 193).